INSTALLATION INSTRUCTIONS TANK LEVER MODEL No's: 504A



Installation Instructions:

- · Remove old tank lever.
- · Place HOUSING (2) as shown, into tank through hole.
- · Insert FLANGE (3) through tank hole and tighten.
- Position LEVER (1) though HOUSING (2) and FLANGE (3).
- · Place HANDLE (4) onto the spline of LEVER (1).
- Tighten HANDLE (4) set screws with ALLEN WRENCH (5) provided.
- \cdot Place flapper chain though appropriate hole on LEVER (1).
- NOTE: Chain should be nearly vertical.
- ·Adjust chain length as needed to allow lever operation with tank cover on.

