



SATCO Starfish  
Video  
Doorbell  
65-935 & 65-  
936

# Prepare the Starfish Video Doorbell Camera



 
If the indicator is not slowly flashing blue, press & hold the reset button for 5 seconds, then release. The Video Doorbell Camera will reset and the indicator will then begin to flash blue. It is ready to be paired.

Pair mode - Indicator should be slowly flashing blue.




# Pairing the Starfish Video Doorbell Camera via QR Code (default)


1. On the Home Panel, Tap “+” in upper corner, to add a new device.
2. Select Add Device from the list.
3. Choose Doorbell Video Cameras from the options.
4. Follow the on-screen Prompts.

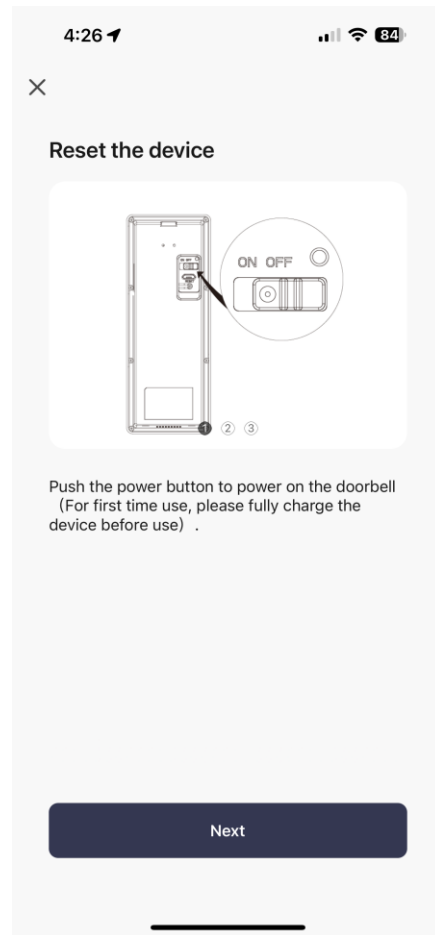

 On the back of the doorbell, switch the doorbell on.

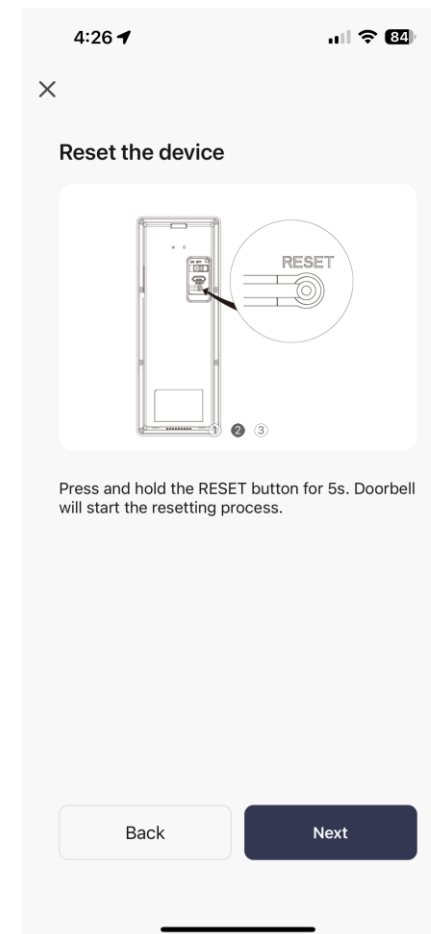


 Hold the reset button down for 5 seconds.

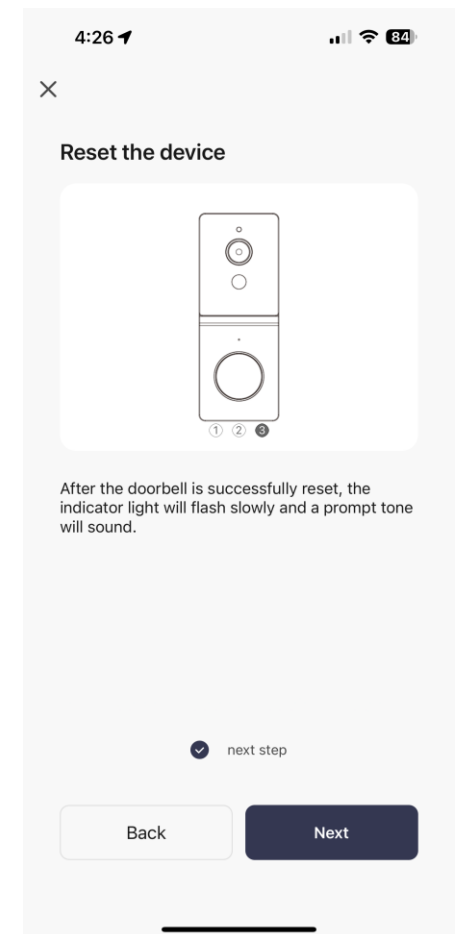


Confirm the indicator light is blinking rapidly, tap the circle to confirm. Tap Next.

# Pairing the Starfish Video Doorbell Camera via QR Code con't

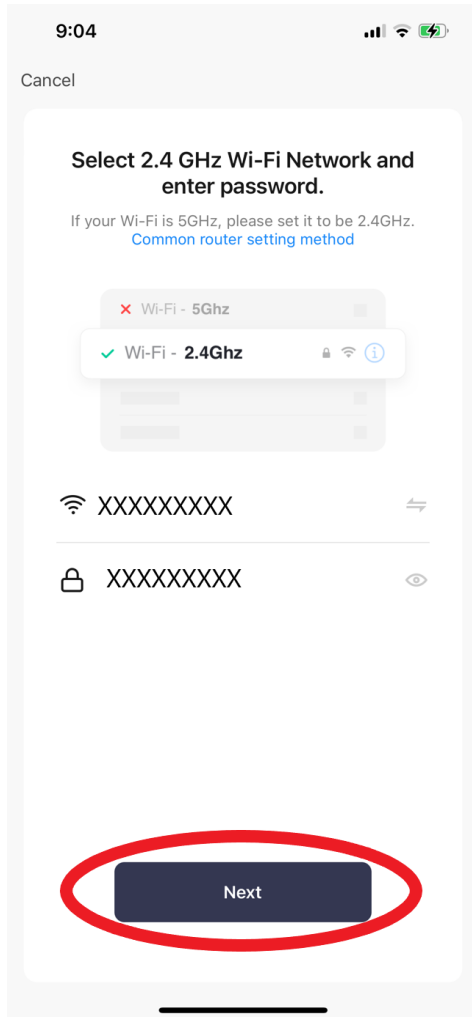 




 
Enter WiFi Network & Password. Tap Next.

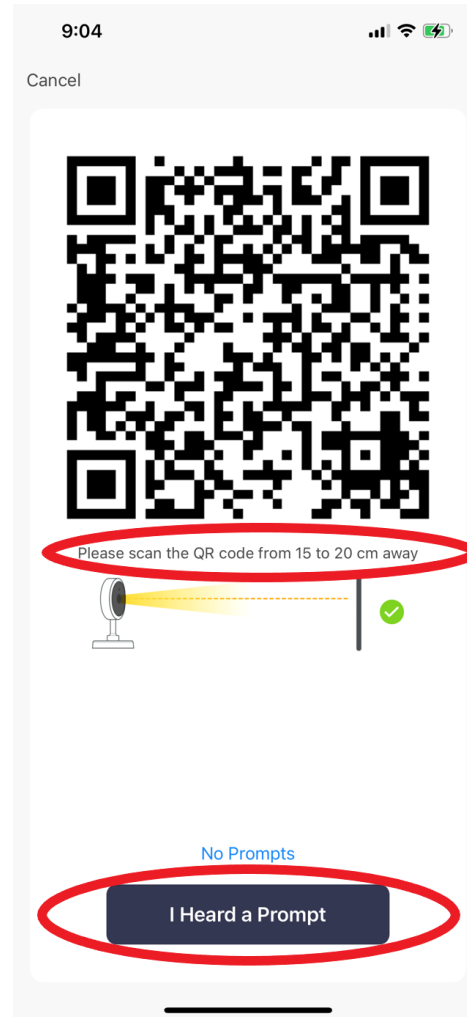




QR code is generated. Place QR code 6 to 8 inches in front of the camera until a prompt is heard from the camera. Once prompt is heard, tap "I Heard a Prompt".

**The  
Camera will  
begin to  
pair with  
the  
Network.**

# Or Pairing the Starfish Video Doorbell Camera Manually

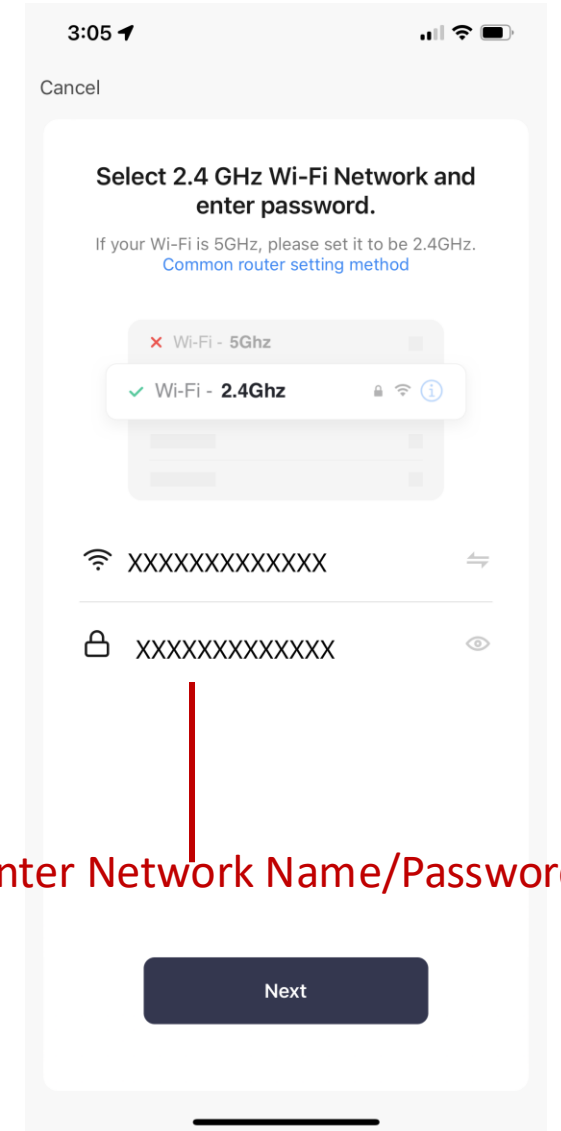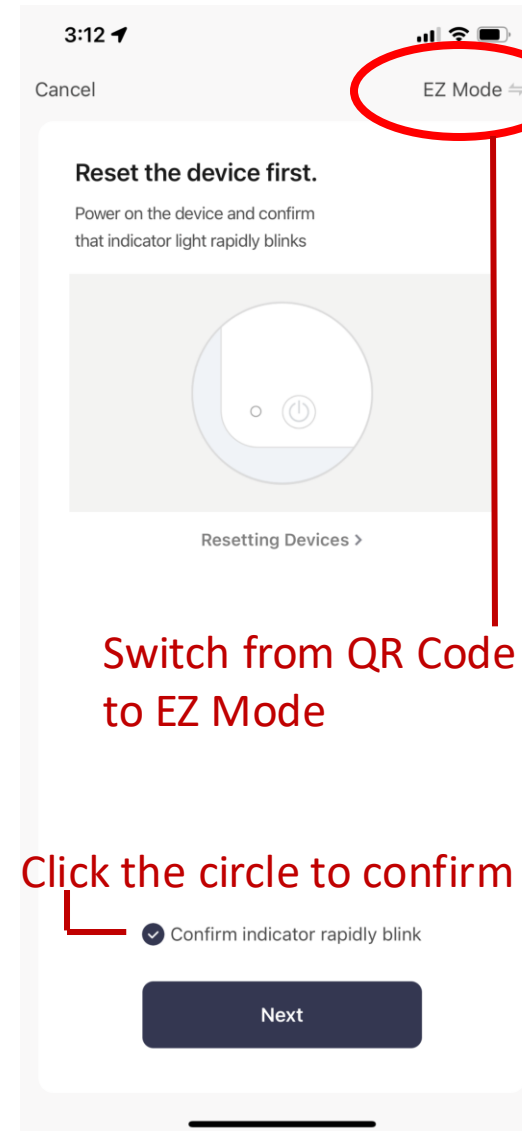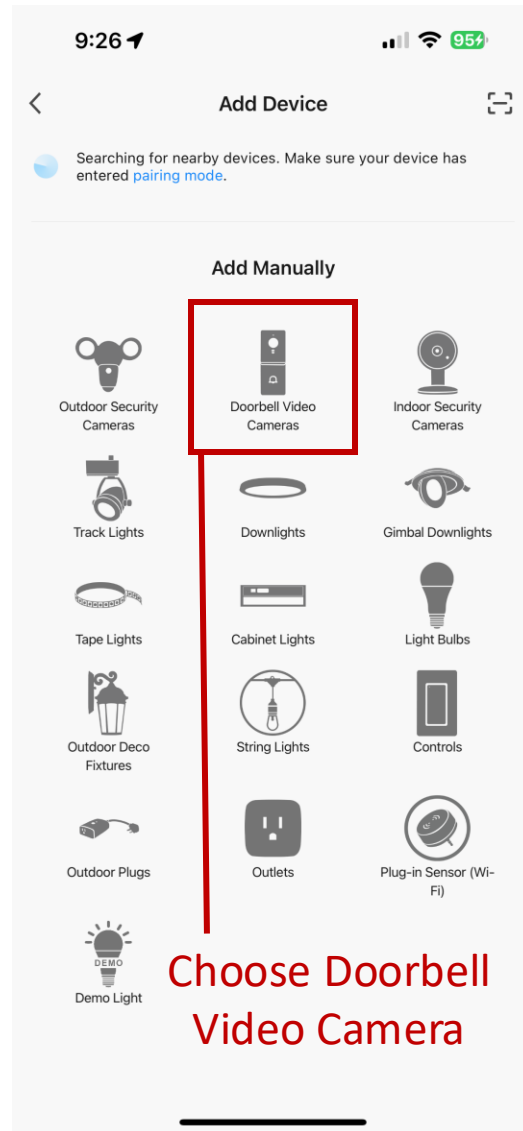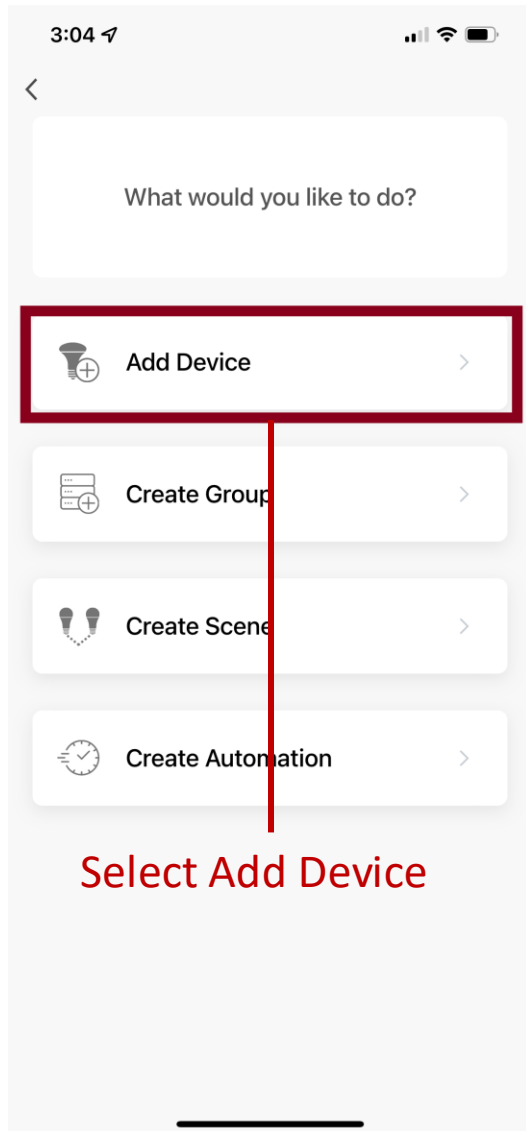    


# Pairing the Starfish Video Doorbell Camera Manually con't

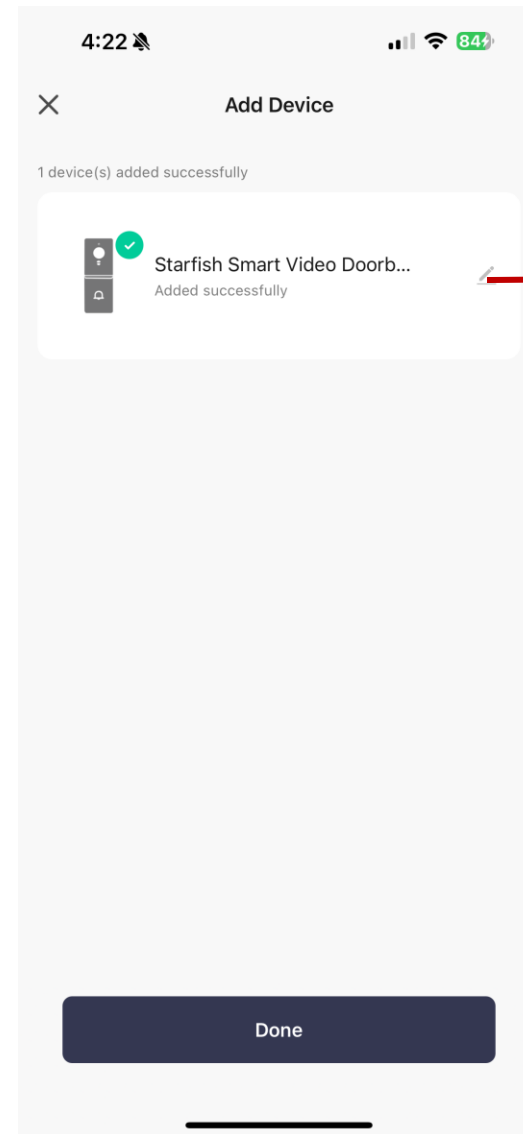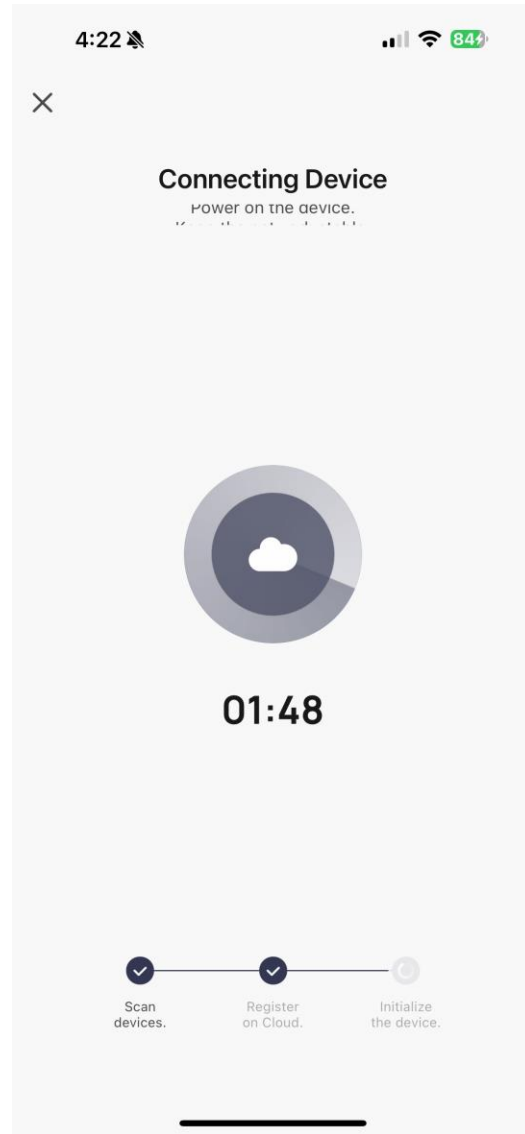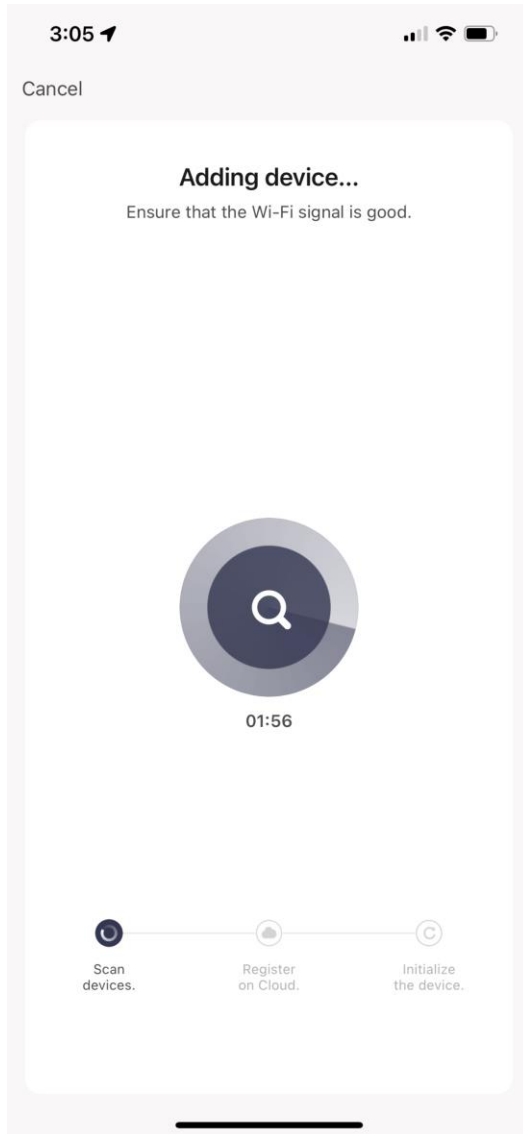   

Click icon to edit device name and/or assign a room, change image. Otherwise, click done.

**You are now ready to use your Starfish Video Doorbell Camera.**
 
# Home Panel

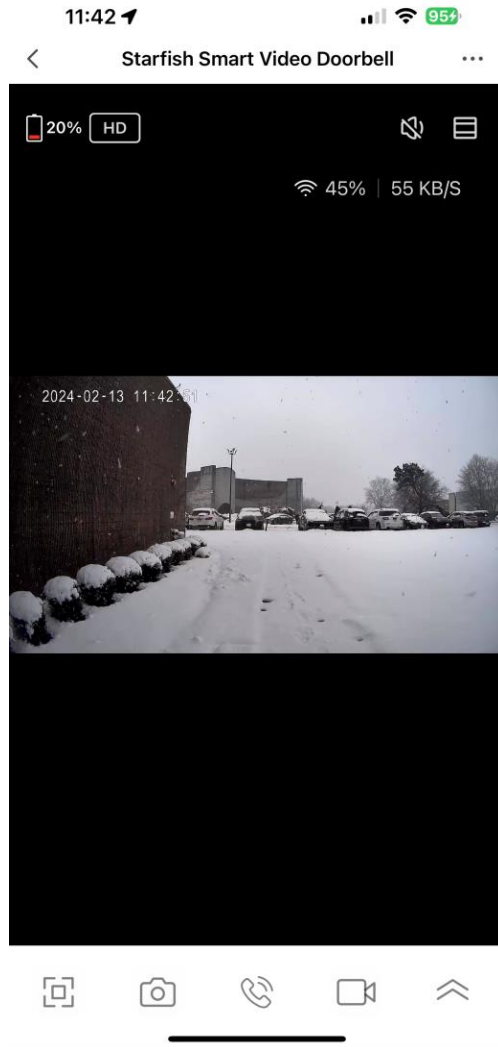

Press for  
main settings


Press to go  
back to  
Home Panel

Press to view  
Basic Functions

Press to change  
Speaker Volume

Press to  
change Power  
Management  
Settings

# Main Settings

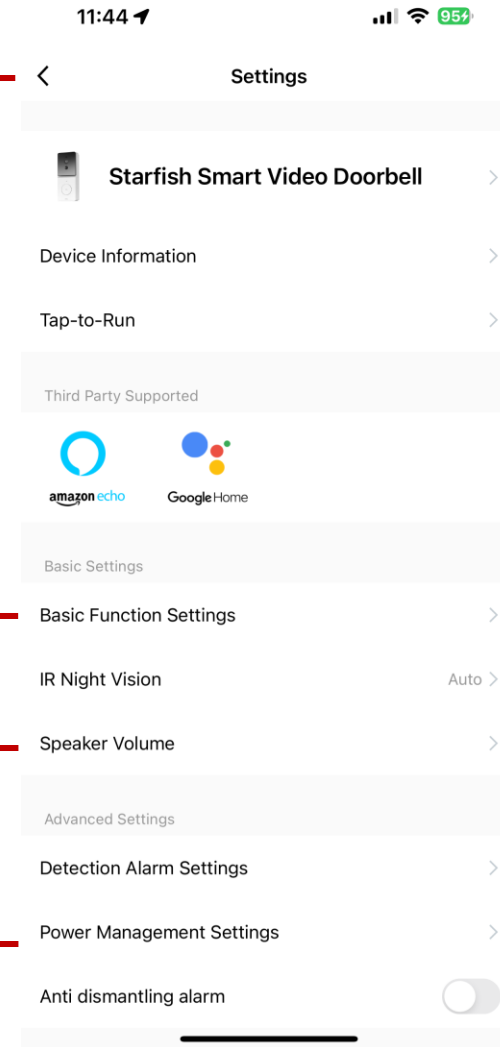 


Press to rename,  
assign room

Press to  
change to  
Auto/On/Off

Press to  
change  
Detection  
Alarm Settings

## Main Setting Con't

 Press to go  
back to  
Home Panel

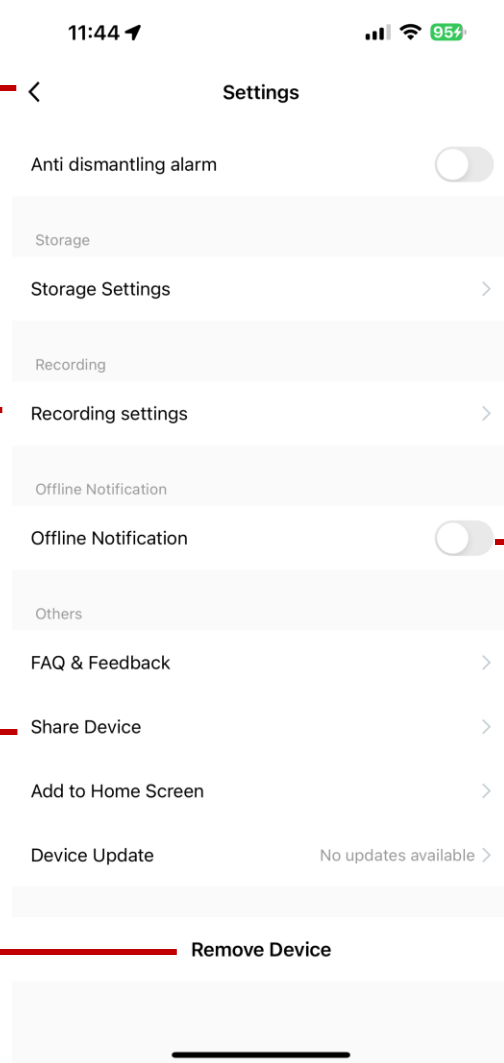

Press to view  
Storage Settings.

Press to view  
Recording  
Settings

Press to  
Share Device

Press to  
remove device

\*Press to turn Anti  
dismantling alarm on  
or off.

Press to receive  
Offline Notification.

## Basic Function Settings

Press to go back  
to Main Settings



Press to turn  
on or off.

 
Press to  
change Talk  
Setting

**\*When the Anti dismantling alarm is set to on, the alarm will activate when the unit is removed from the cradle. Go into the App and disable Anti dismantling alarm or turn the unit off in the back. If turned off in the back, alarm will sound again when unit is turned back on. Alarm will stop when unit is returned to the cradle.**



## Talk Mode

Press to go  
back to Basic  
Function  
Settings

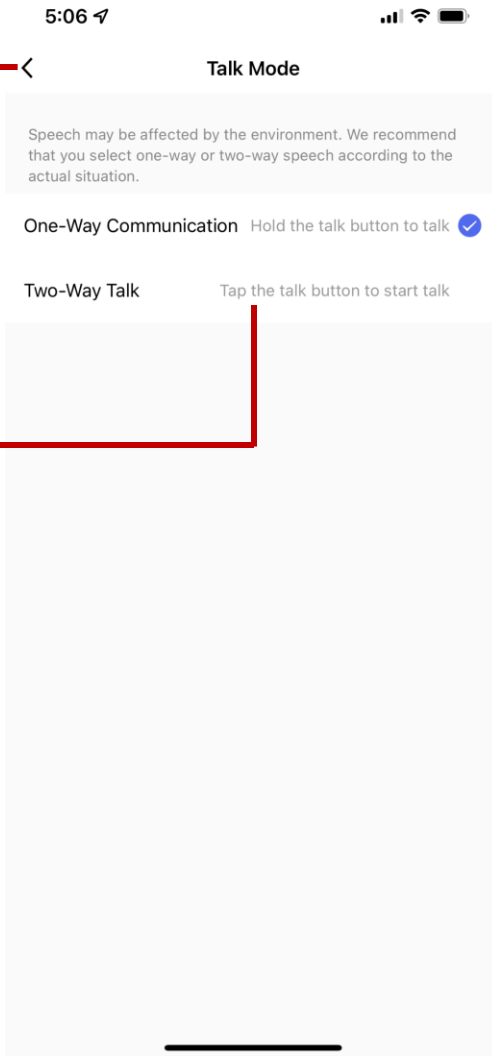

Choose your  
setting

## IR Night Vision

 
Press to go  
back to Basic  
Function  
Settings



Choose your  
setting

## Speaker Volume

Press to go  
back to  
Main  
Settings

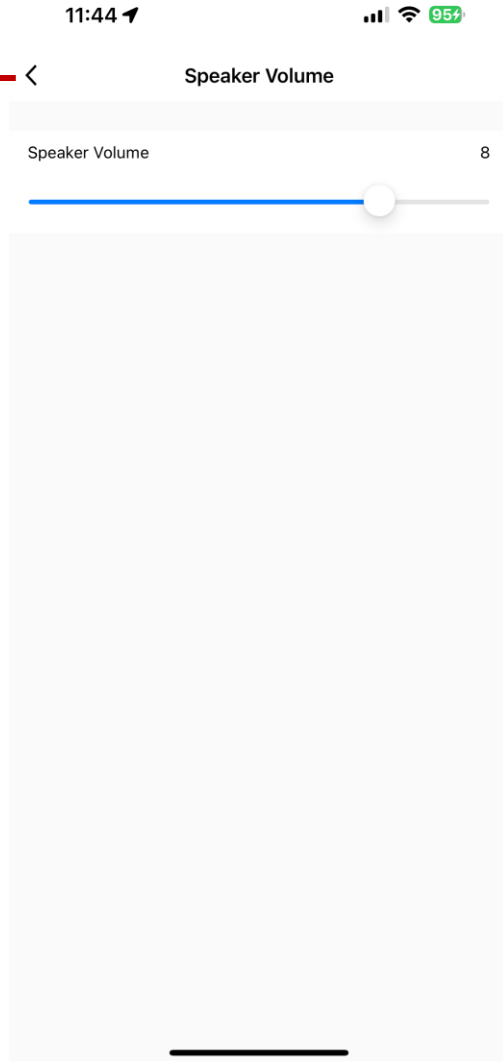

Adjust  
Speaker  
Volume.


## Detection Alarm Settings

 Press to go back  
to Main Settings

Press to change  
video recording  
duration.

Press to adjust level.

Press to set area.

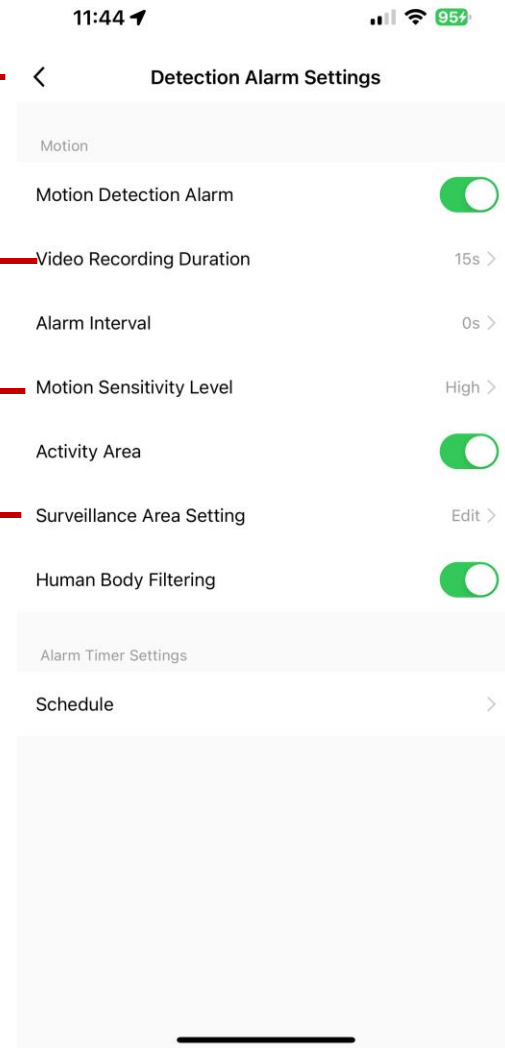

Press to turn  
on or off.


Press to change the  
time between  
motion detections.

Press to turn on  
or off.

Press to turn on  
or off.

Press to create  
a schedule

## Power Management Settings

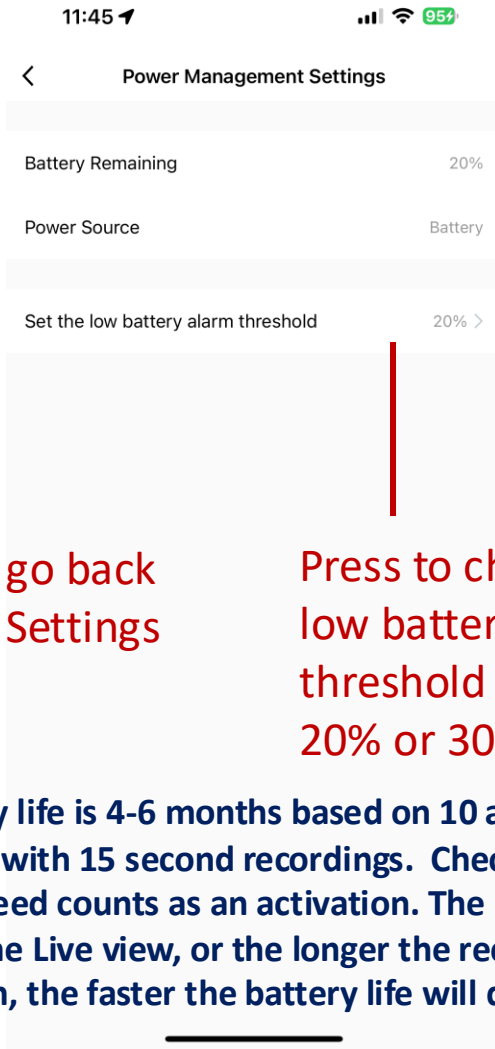 


Press to go back to Main Settings

Press to change low battery threshold 10%, 20% or 30%.

**\*Battery life is 4-6 months based on 10 activations per day with 15 second recordings. Checking Live Video Feed counts as an activation. The longer you are in the Live view, or the longer the recording duration, the faster the battery life will drain.**

 
## Storage Settings

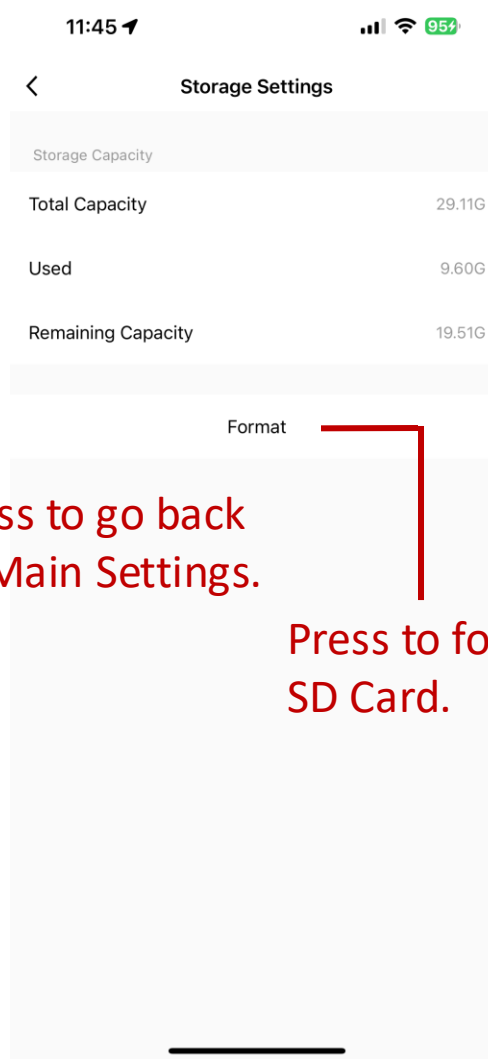

Press to go back to Main Settings.


Press to format SD Card.

## Recording Settings

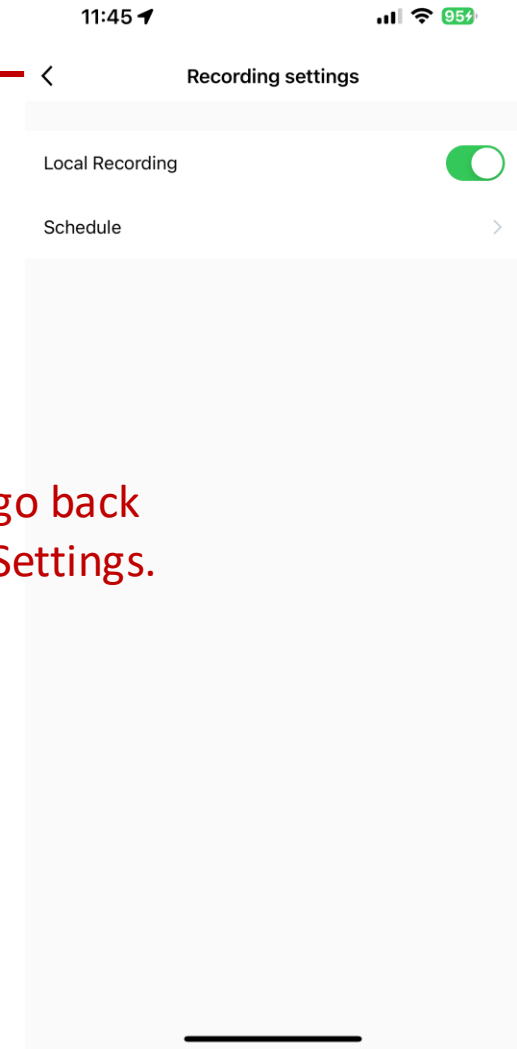 


Press to go back to Main Settings.

# Home Panel

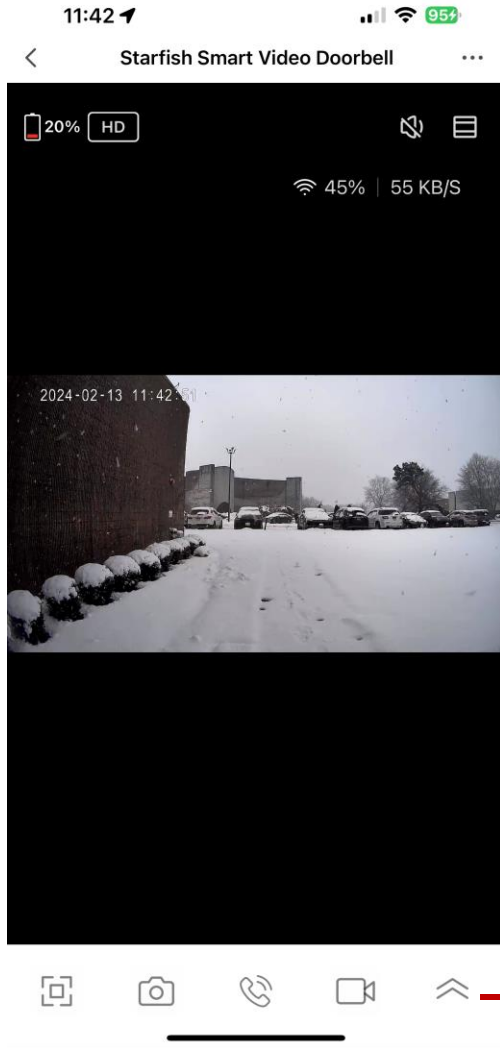 

Press for additional functions

# Notifications (Events)

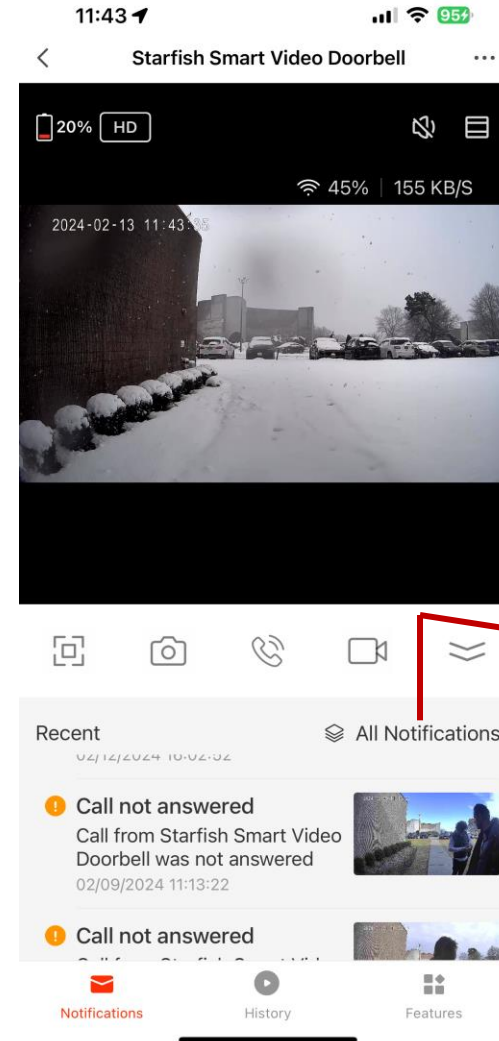 


Swipe/scroll down to see more recent events.

Press to view all events & their videos

Picture of event

# All Notifications (Events)

 Press to go back to Home Panel

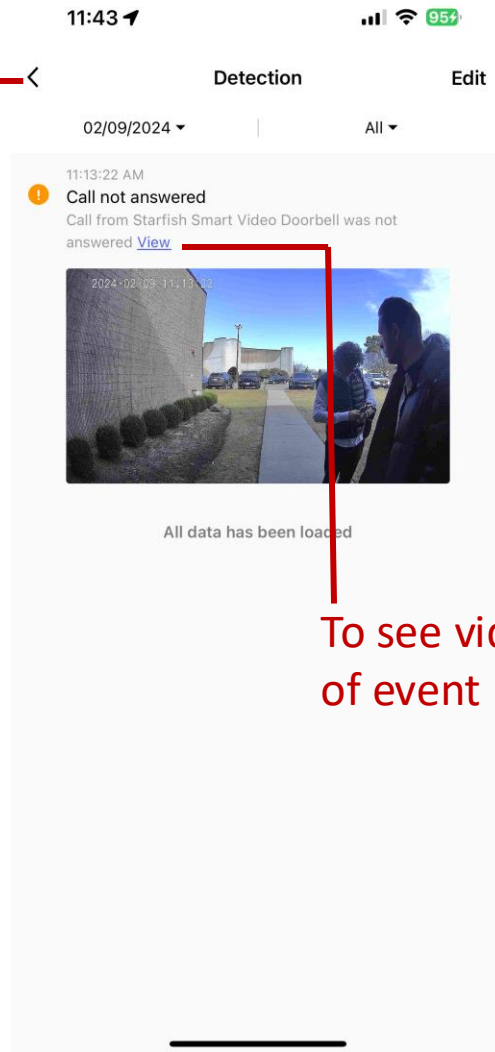


To Select an Event or Select All Events

To see video of event

Swipe down to see more events

# Delete Notifications (Events)

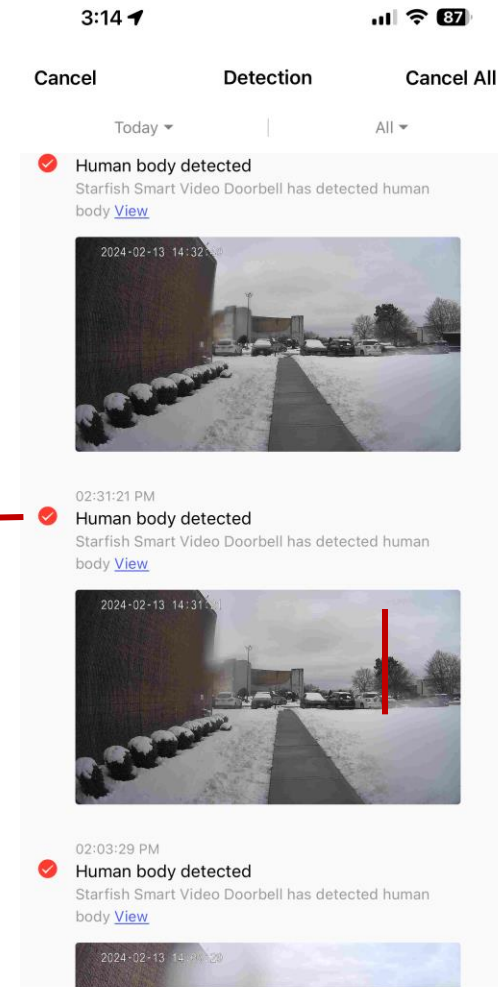 


To Select All or Cancel All

To Select or Cancel single event

Delete All Selected Items


# View All History (Video)

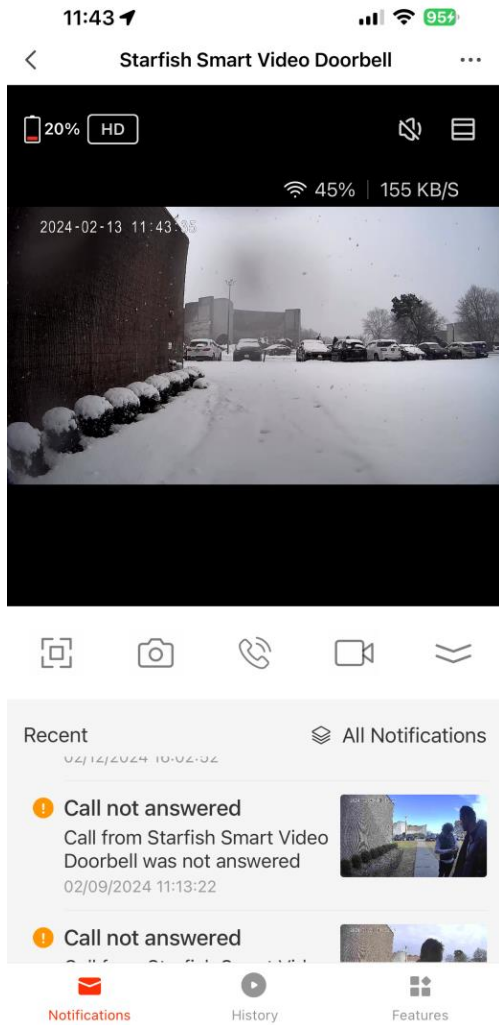 

To view All History (Video)

# History / Playback Event Recording

 Press to go back to Home Panel

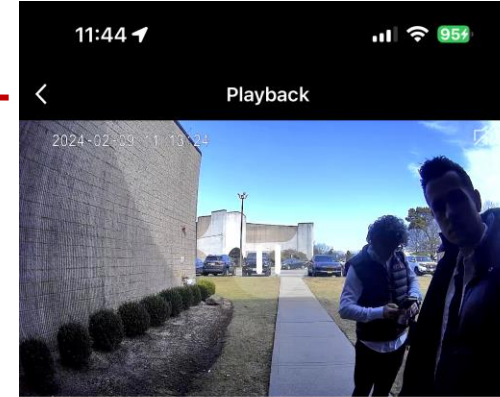

Press to view date from Calendar


Press to view recent date



Will load to current day at 12:00AM

Swipe across to see desired time/event start

# Features

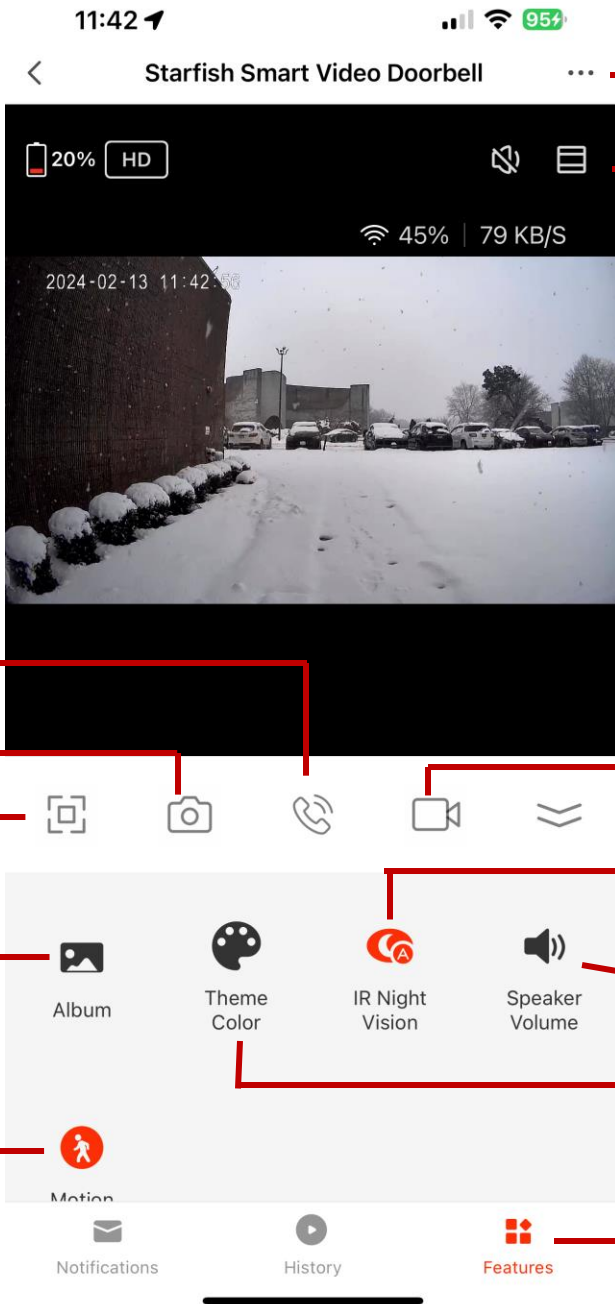 

Battery Percentage & Video Resolution HD or SD.

Settings

Mute & Zoom

**\*When in Live view, and motion is detected, camera will NOT record detection. You must tap video record icon to record video or tap camera icon to take an image. They will then appear in the Album.**

Talk

Screenshot

Full Screen

Record Video

IR Night Vision

Adjust Speaker Volume

Change Theme Color

 
View Album

Motion Detection


Features

Settings	Main Settings
Zoom	Zoom in on the Live View
Mute	Mute/Unmute the Floodlight Microphone
Resolution	Set between HD/SD
Talk	Speak through the Floodlight Speaker
Screenshot	Screenshot the Live View to Mobile Device
Record	Record the Live View to Mobile Device
Battery Percentage	Remaining Battery Charge
Full Screen	Switch Live View to Full Screen
Album	View Screenshots and Recordings
Theme Color	Choose Light or Dark Theme
IR Night Vision	Set Night Vision to Auto/On/Off
Speaker Volume	Adjust the Speaker Volume
Motion Detection	Enable/Disable Motion Notifications
Notifications	Review past Motion Notifications
History	Review all past video

# Album

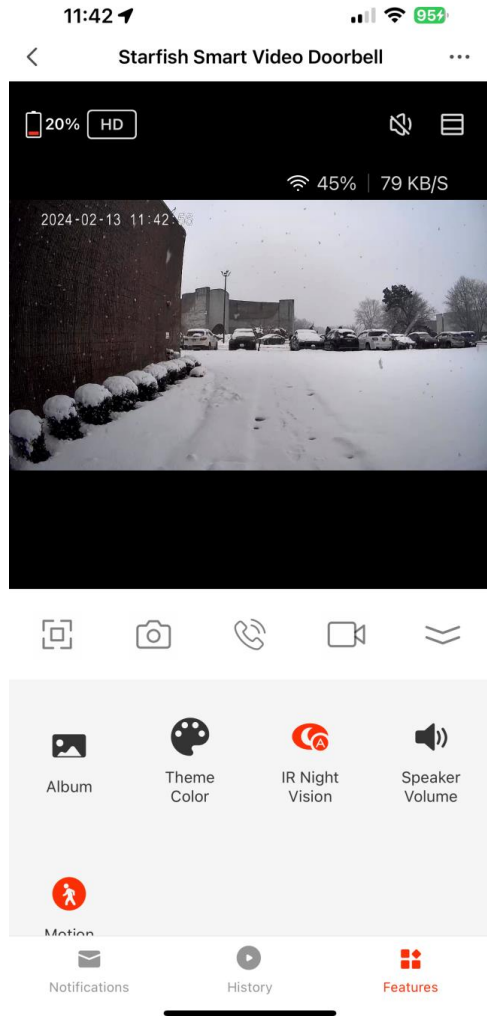


Tap Album

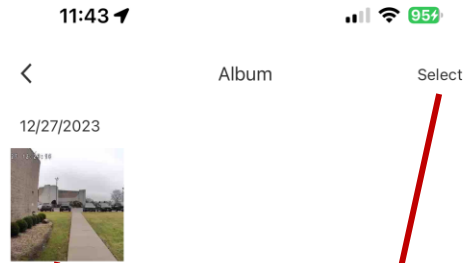 

Press Image or Video to share, forward, download, copy, delete, etc.

 Press Select to choose multiple images and/or videos in the album to delete.

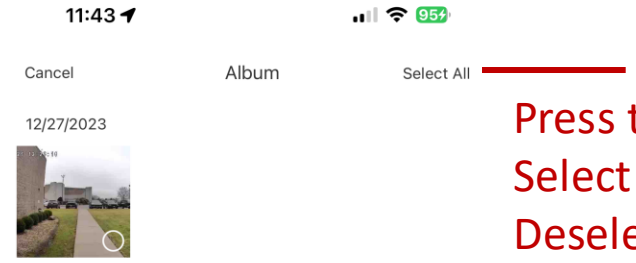



Press to Select All or Deselect All.

Press to delete selected images/videos







# Theme Color

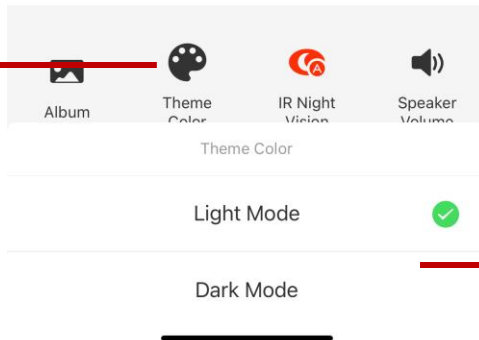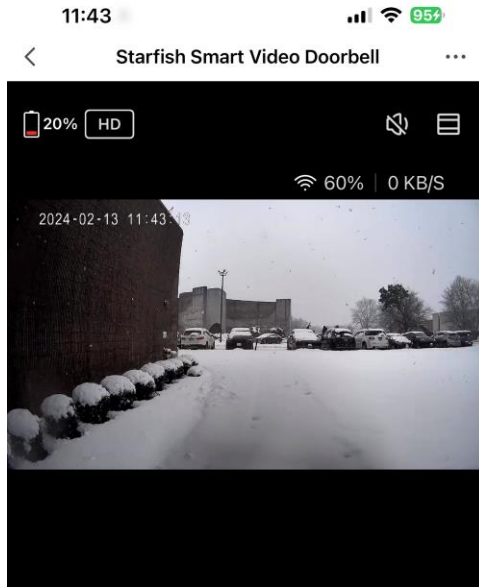  

Select Theme color to change.


Choose Light Mode or Dark Mode

# IR Night Vision

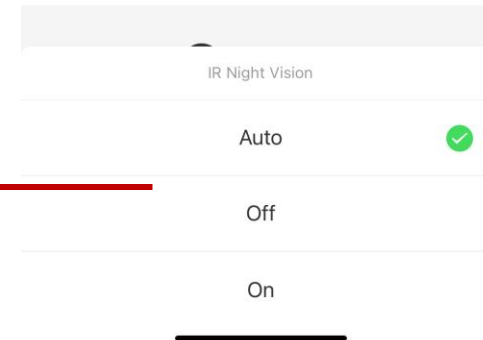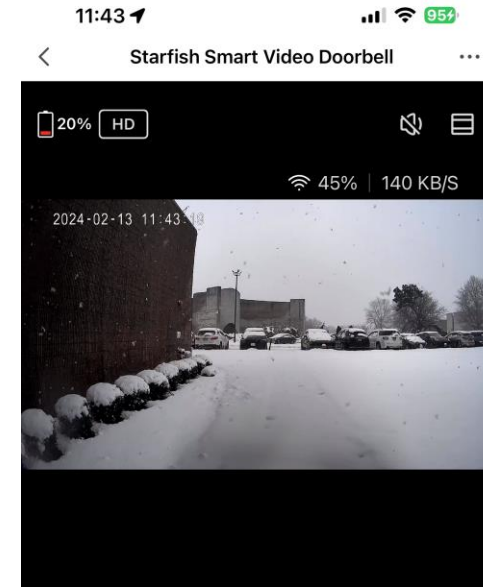  

Select Night Vision setting – Auto/On/Off

# Speaker

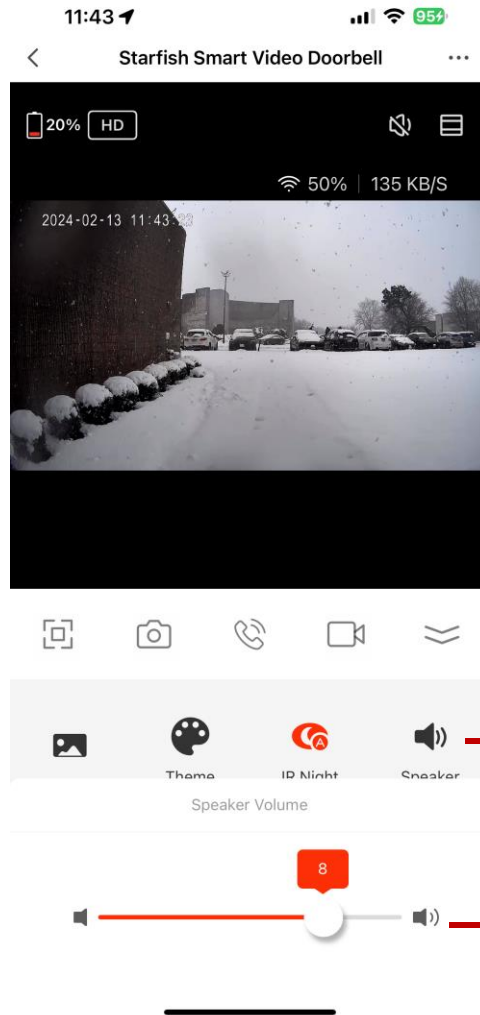 

Select Speaker Volume to adjust the volume.

Slide Speaker Volume to desired volume


A note on the doorbell chime.

You may pair up to 10 chimes per doorbell.

Only one doorbell per chime.

To pair, plug in the Chime and hold the top button on the Chime until it makes a chime. Then press the button on the doorbell. The Chime is now paired.

# View Multiple Cameras at one time

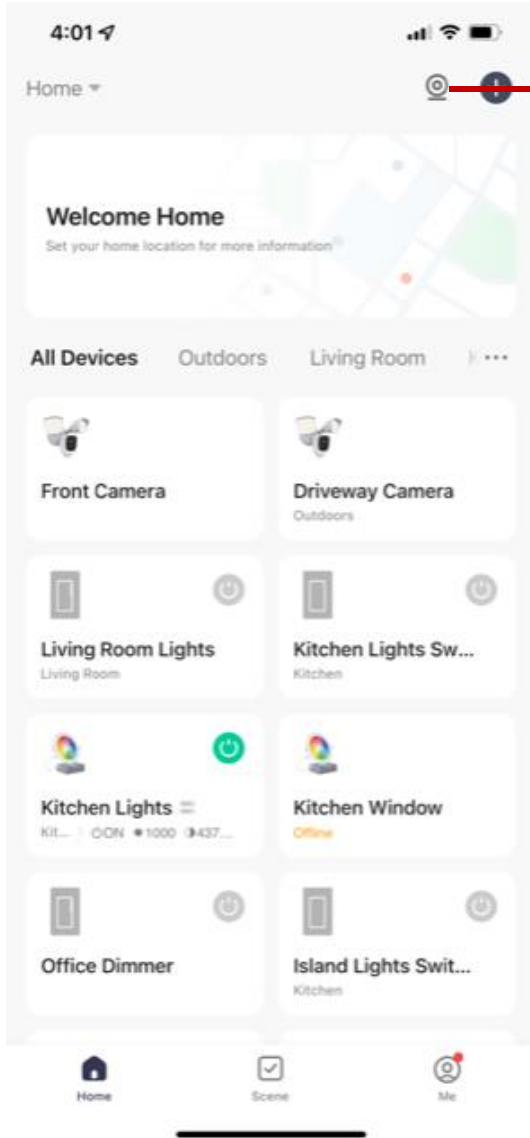 


Press Camera Icon to view multiple connected cameras at one time.



Press to return to Home Panel

 Select how many cameras to view at one time.

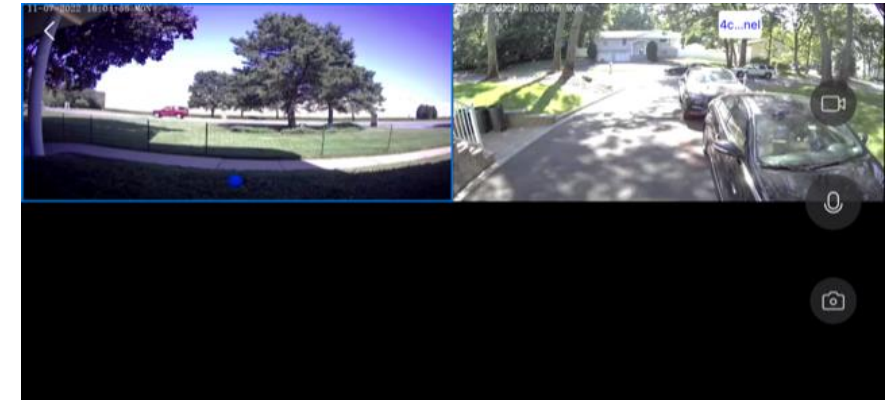

Turn device to view horizontally.