



SATCO Starfish
Indoor
P&T Security
Camera 65-945

Prepare the Starfish Indoor P&T Security Camera



 
Pairing mode -
Indicator should be
quickly flashing.

If the indicator is not
quickly flashing; press &
hold the reset button for 5
seconds, then
release. The Security
Camera will reset and the
indicator will then begin to
flash. It is ready to be
paired.




Pairing the Starfish Indoor P&T Security Camera via QR Code (default)


1. On the Home Panel, Tap “+” in upper corner, to add a new device.
2. Select Add Device from the list.
3. Choose Indoor Security Cameras from the options.

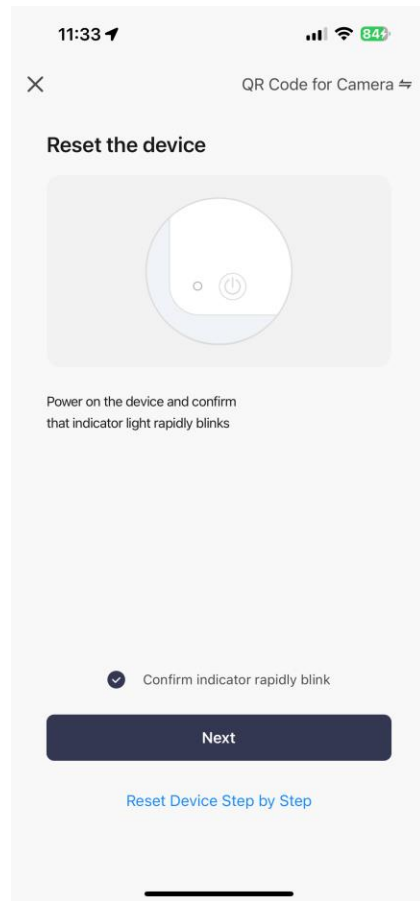

 Confirm the indicator light is blinking rapidly, tap the circle to confirm. Tap Next.

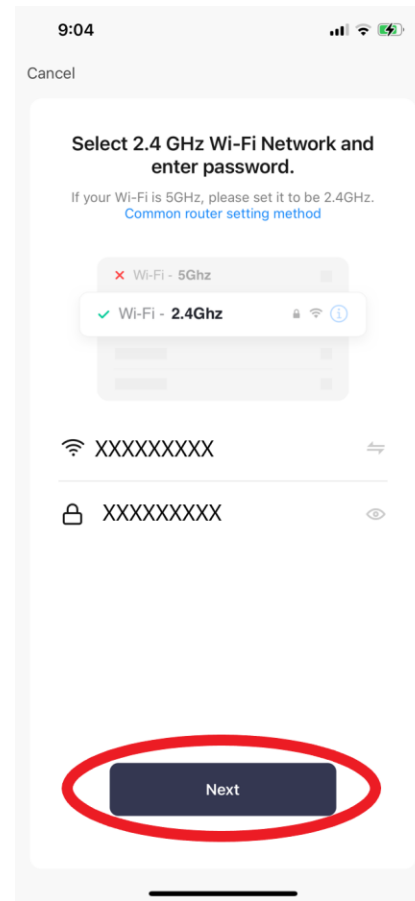




 
Enter WiFi Network & Password. Tap Next.

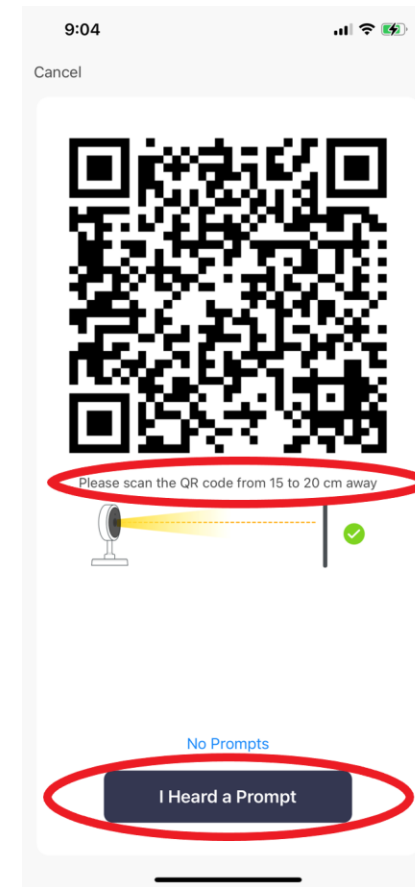




QR code is generated. Place QR code 6 to 8 inches in front of the camera until a prompt is heard from the camera. Once prompt is heard, tap “I Heard a Prompt”.

The Camera will begin to pair with the Network.

    Pairing the Starfish Indoor Security Camera Manually

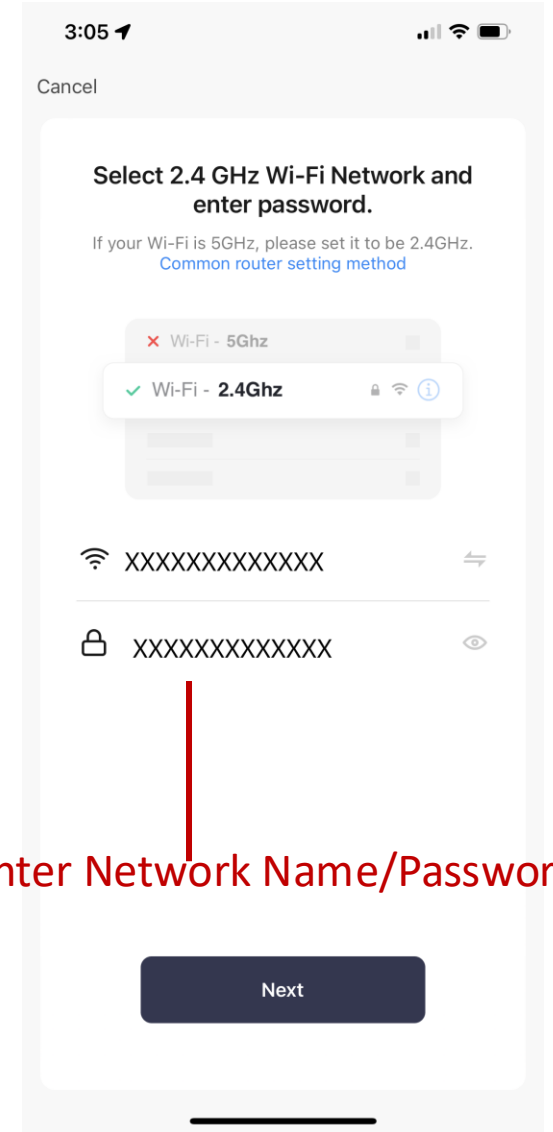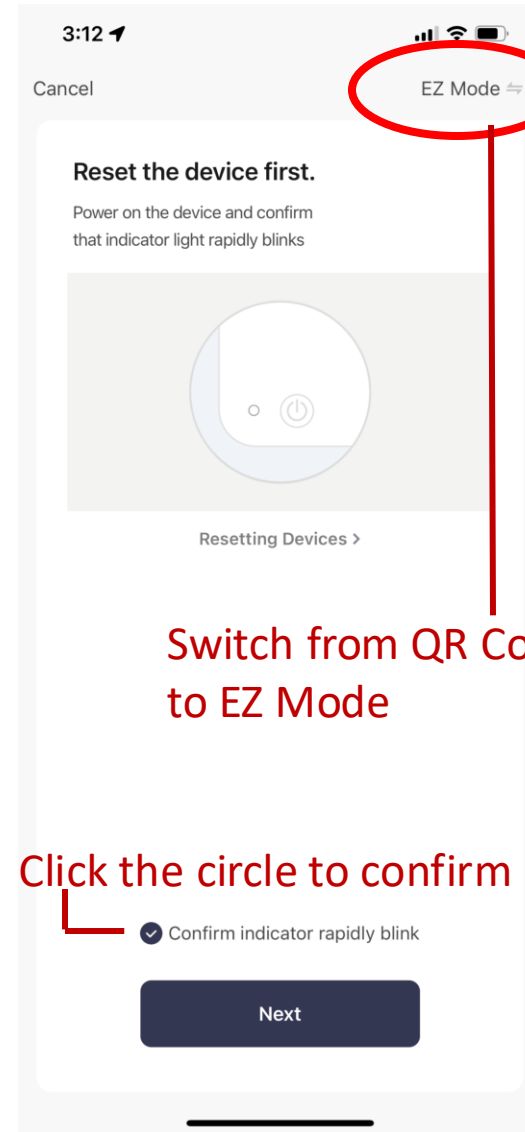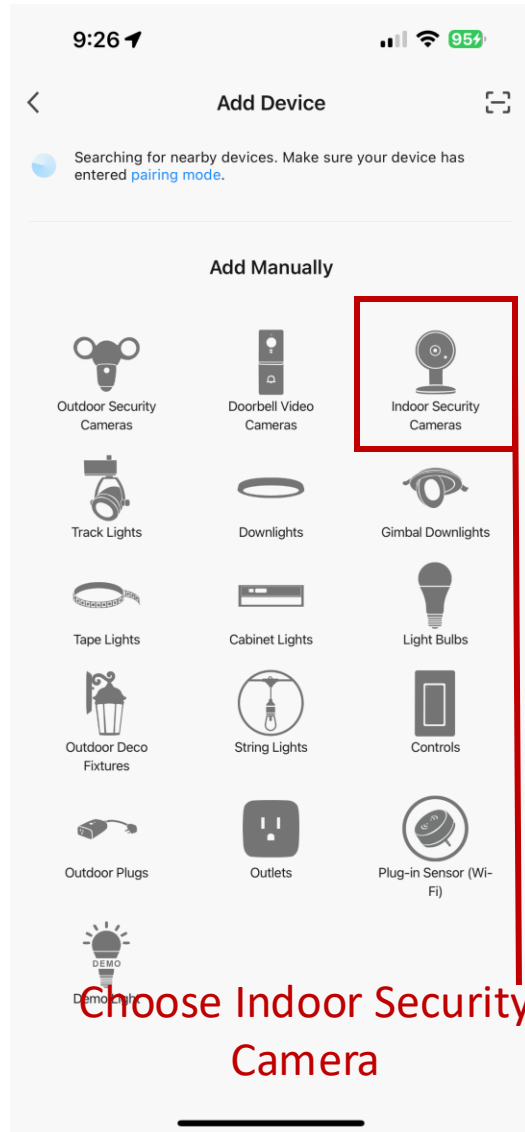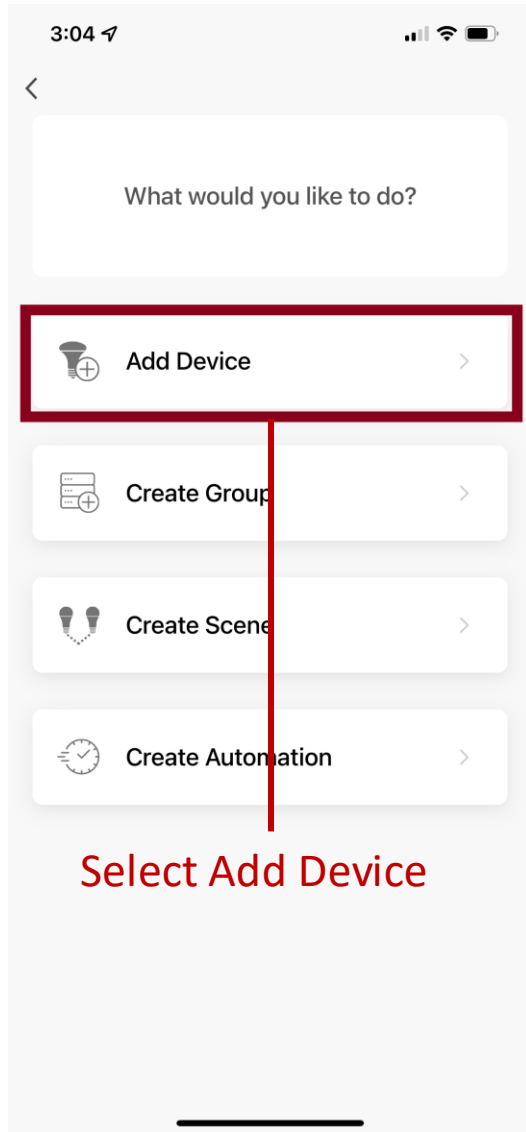

   Pairing the Starfish Indoor P&T Security Camera Manually con't

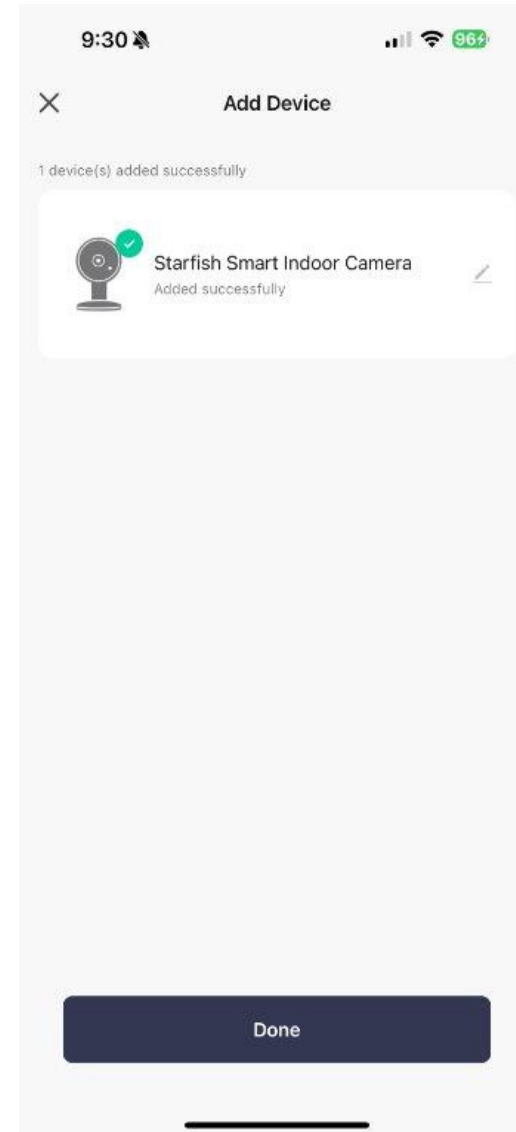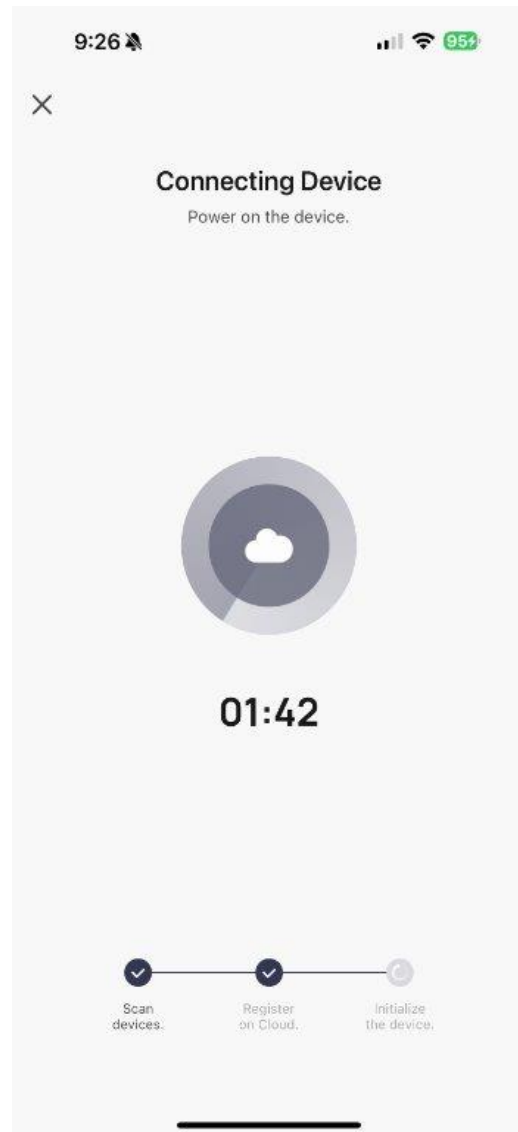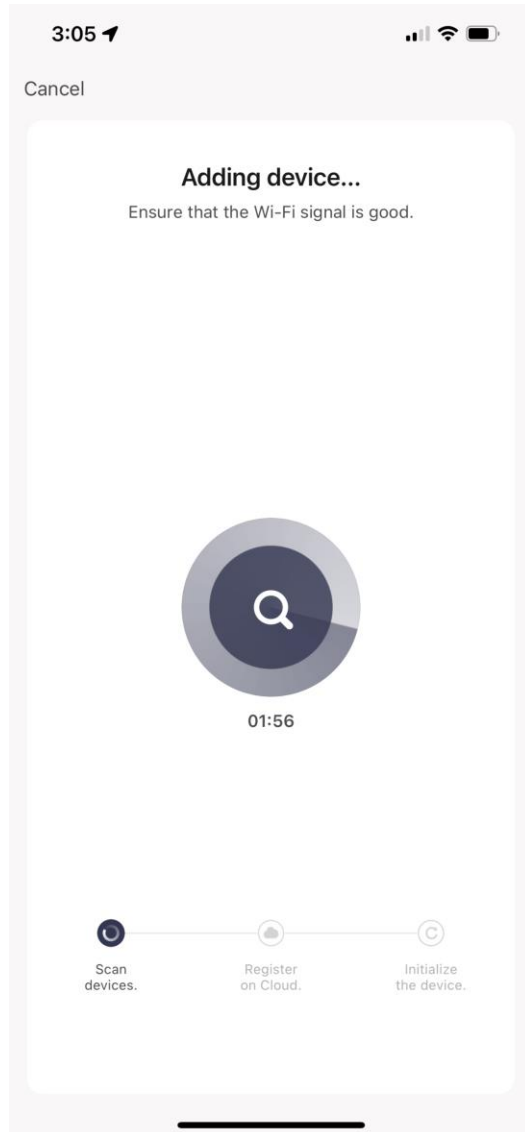

Click icon to edit device name and/or assign a room. Otherwise, click done.

 
You are now ready to use your Starfish Indoor Security Camera.

Home Panel



Press for main settings

Main Settings

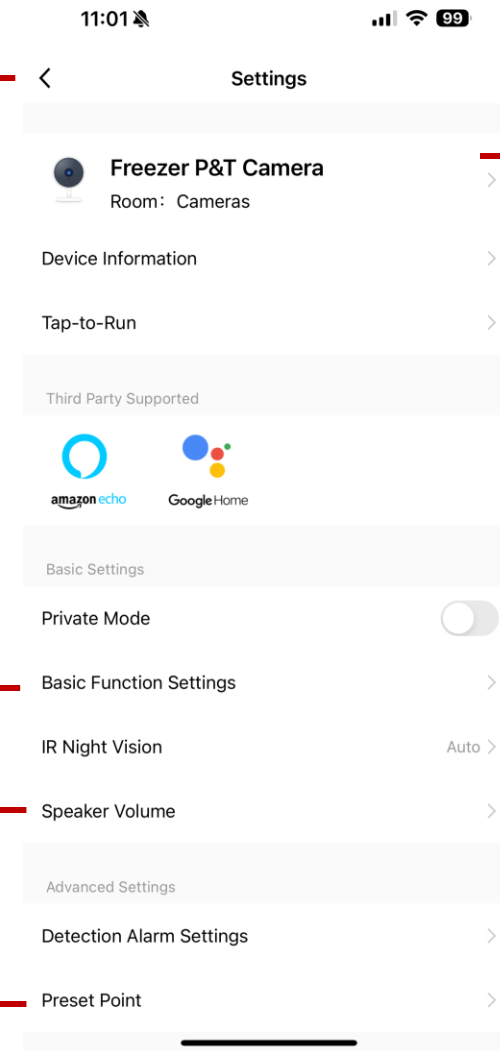

Press to go back to Home Panel

Press to rename, assign room, change image

Press to view Basic Functions

Press to adjust Volume

 
Press to create preset points

Press to change to Auto/On/Off

Press to change settings

Main Setting Con't

Press to go back to Home Panel

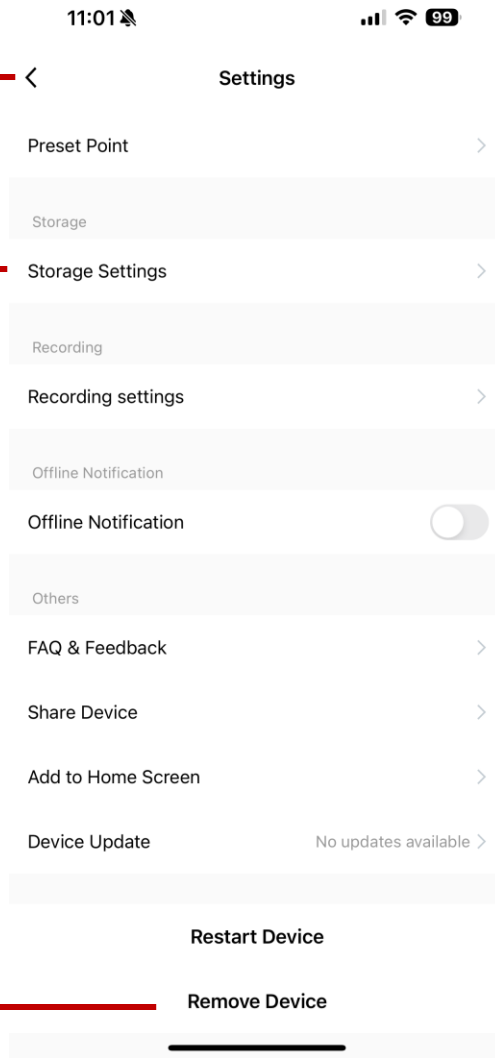

Press to view storage settings

Press to change settings

 
Press to Share Device

Press to remove device

Will advise when device is offline. Press to change setting.

Basic Function Settings

Press to go back to Main Settings

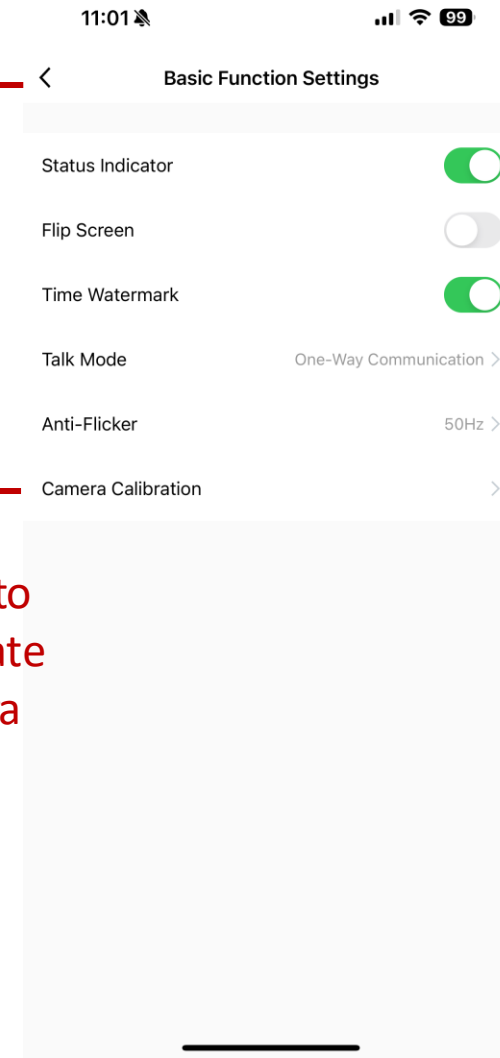


Press to turn on or off.

Press to change Talk Setting

Press to calibrate camera

Talk Mode

 Press to go back to Basic Function Settings

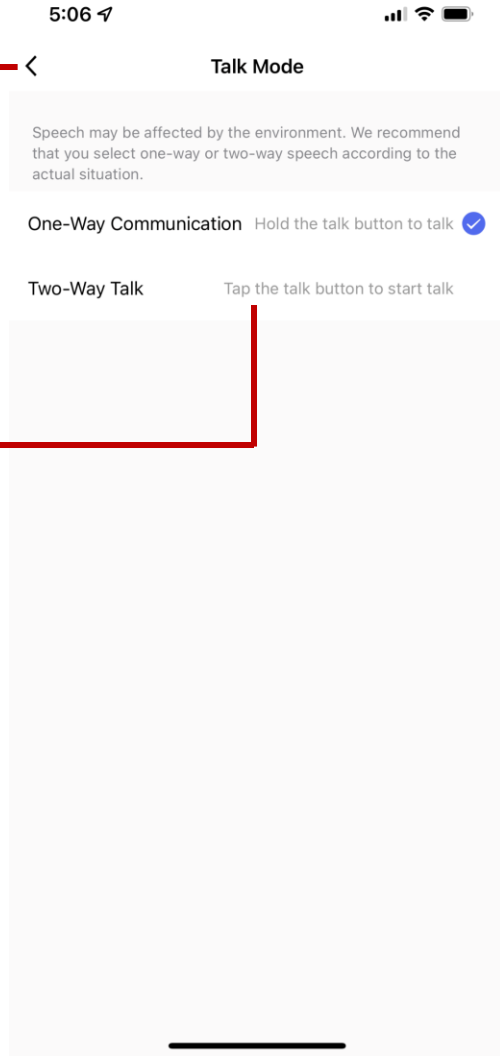


Choose your setting

Detection Alarm Settings

Press to go back to Main Settings

Press to change sensitivity

 Press to adjust Sound Sensitivity level

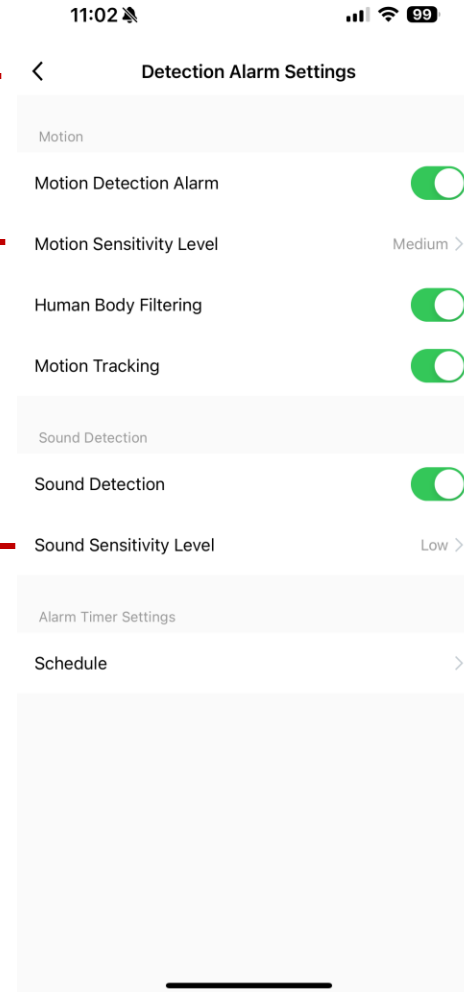


Press to turn on or off.

Press to turn on or off.

Press to create a schedule

 
Storage Settings

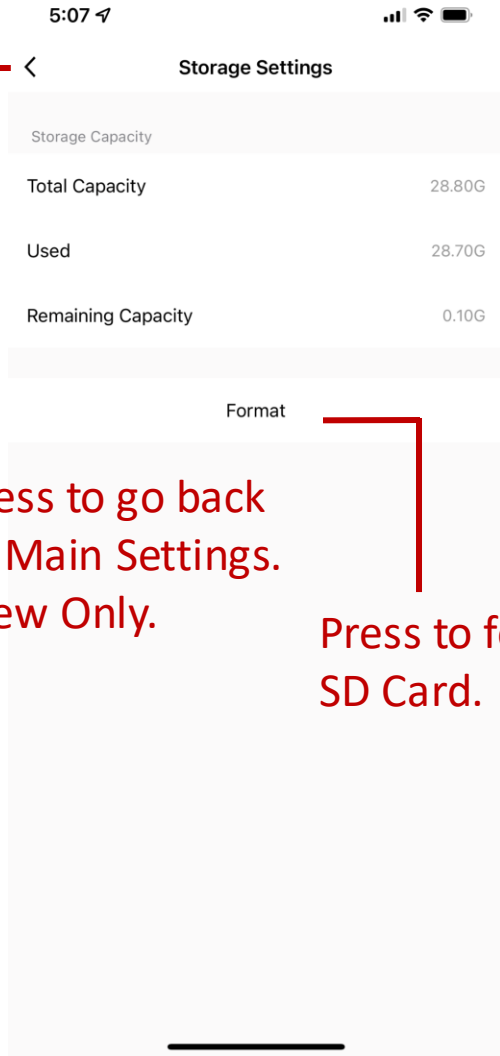

Press to go back to Main Settings. View Only.


Press to format SD Card.

 Record Settings

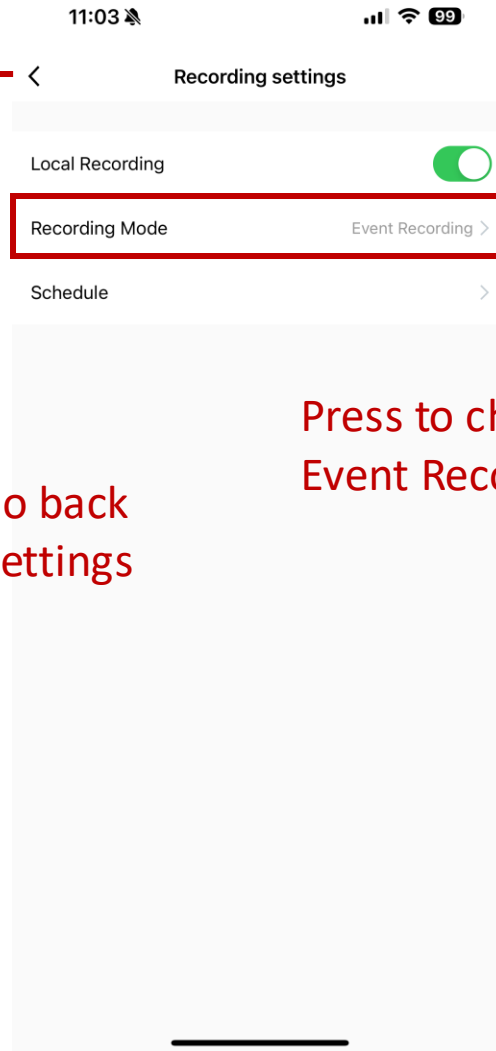

Press to go back to Main Settings

 
Press to change to Event Recording Only

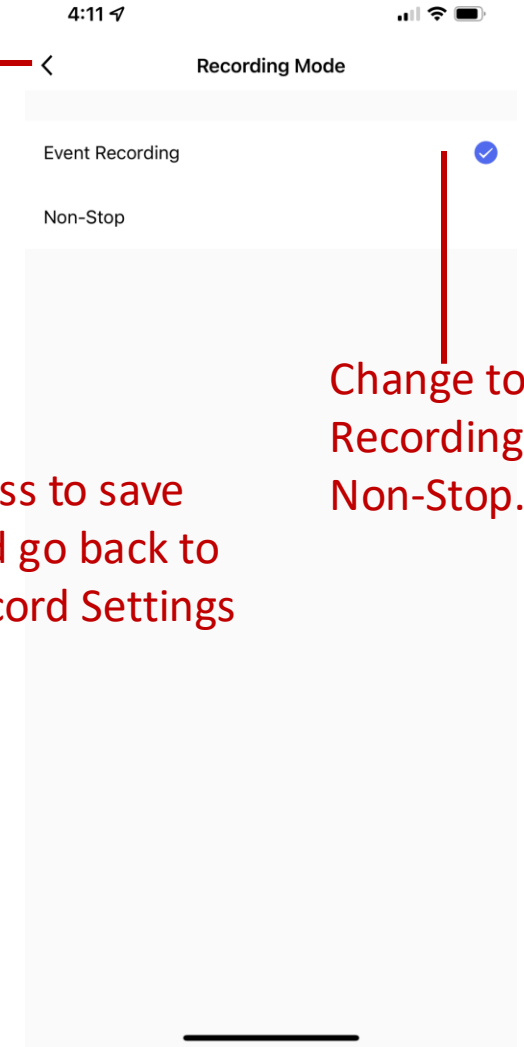

Press to save and go back to Record Settings


Change to Event Recording or Non-Stop.

 Anti-Flicker

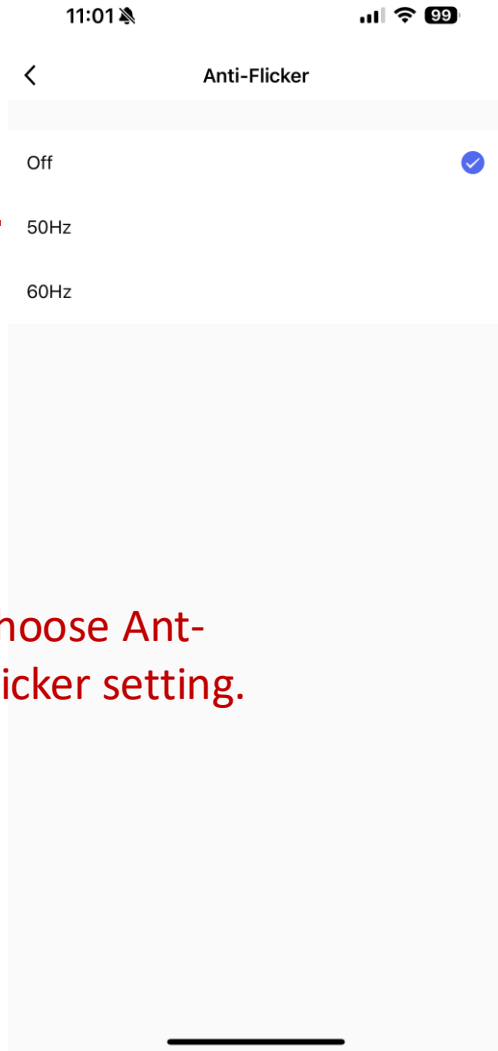


Choose Ant-Flicker setting.

 Preset Point

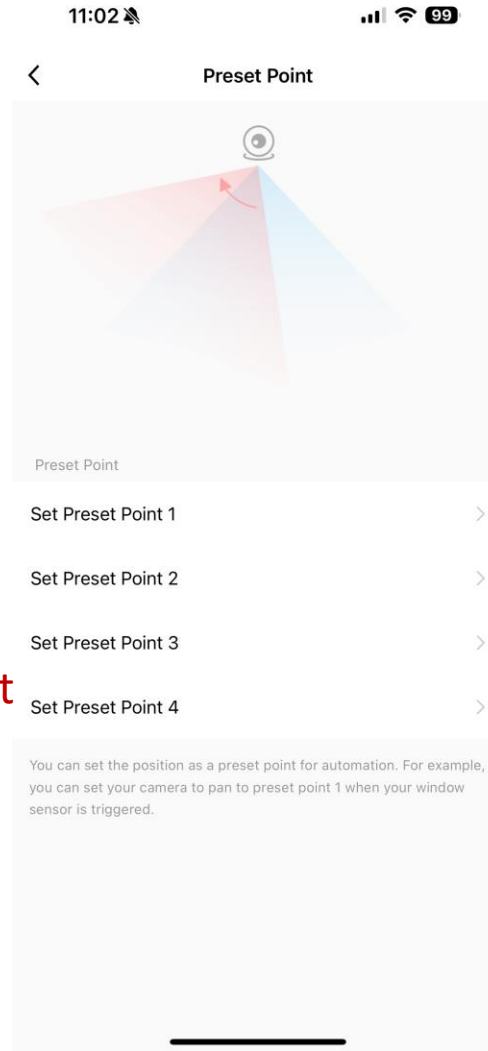

Select a Preset Point to set.

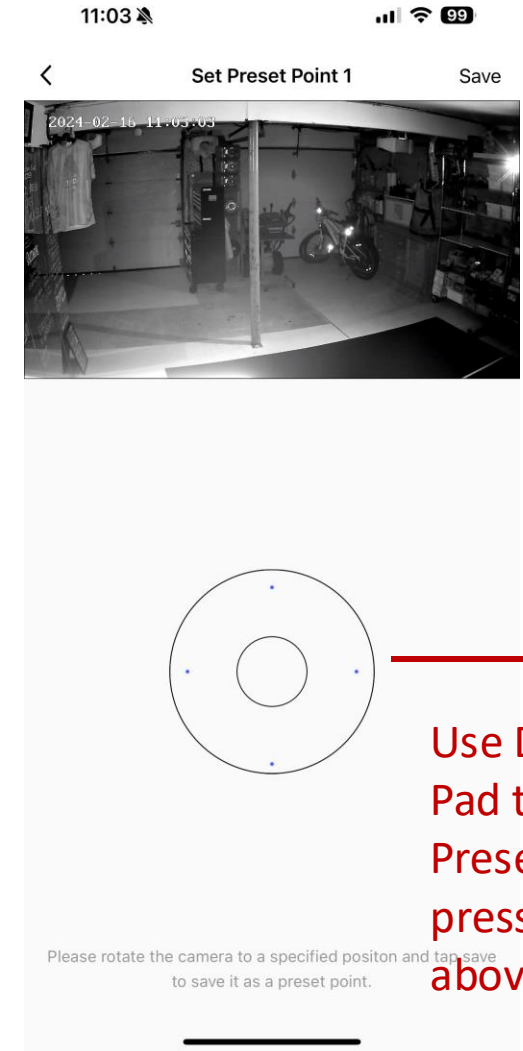 

Use Direction Pad to Set the Preset Point and press Save above.

 
Home Panel



Press for additional functions

Swipe down to see more recent events

Notifications (Events)

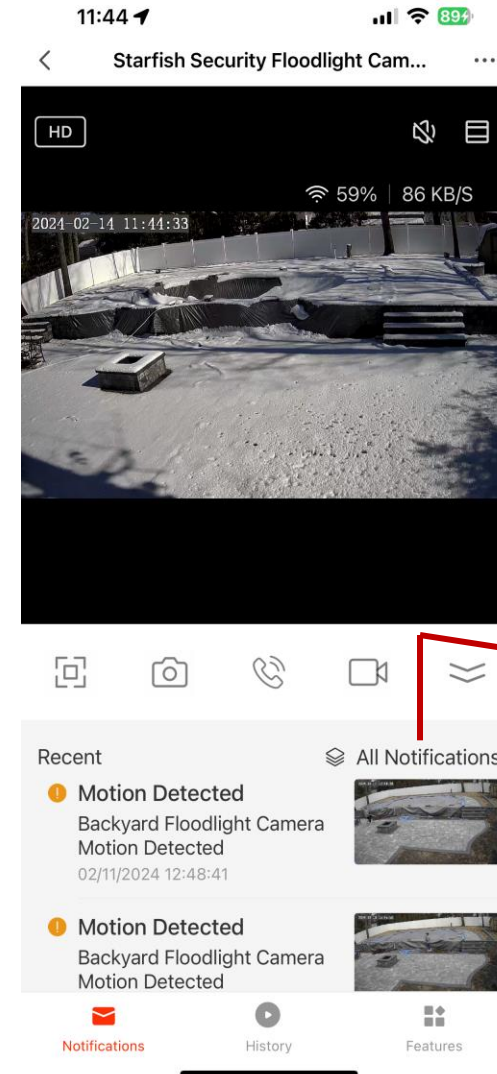

Press to view all events & videos


Picture of event

All Notifications (Events)

Delete Notifications (Events)


Press to go back to Home Panel

 Swipe down to see more events

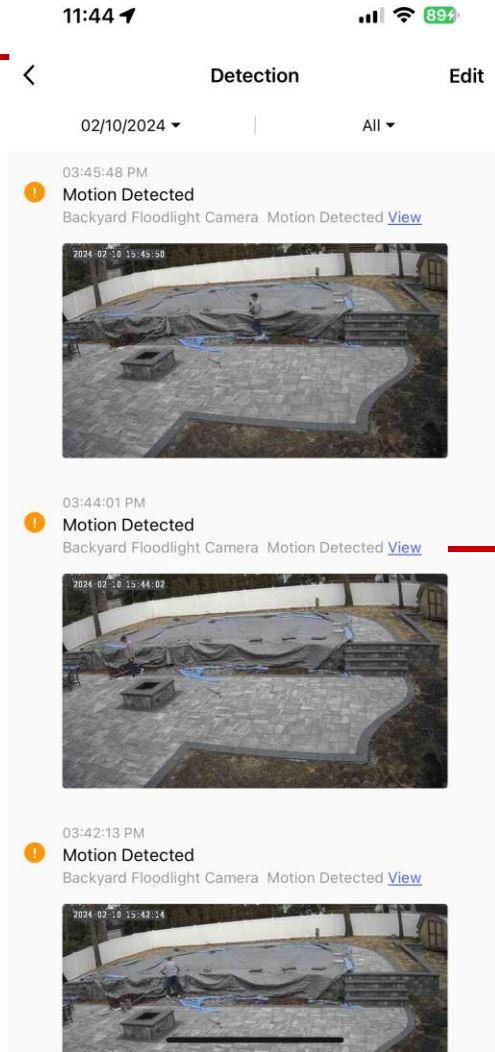

To Select an Event or Select All Events

 To see video of event

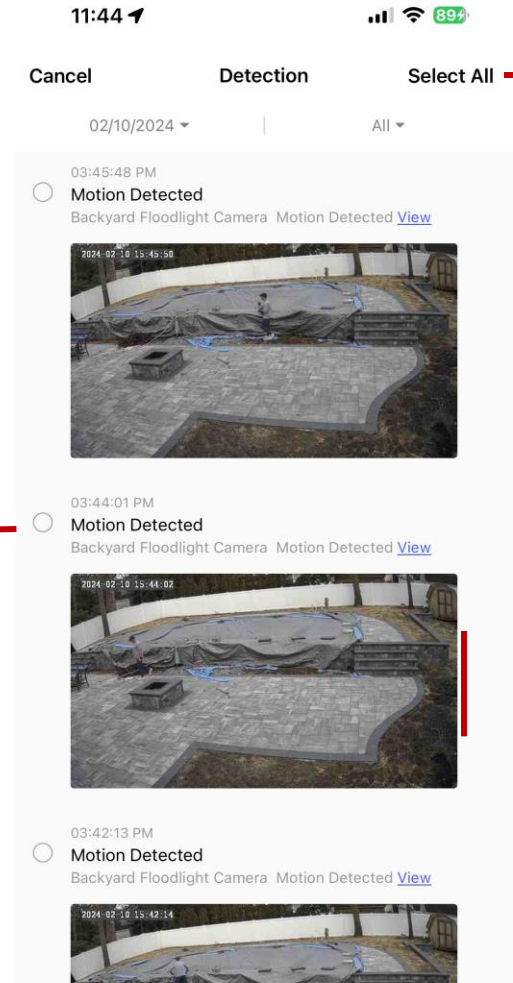


To Select All or Cancel All

To Select or Cancel single event

Delete All Selected Items

 View All History (Video)

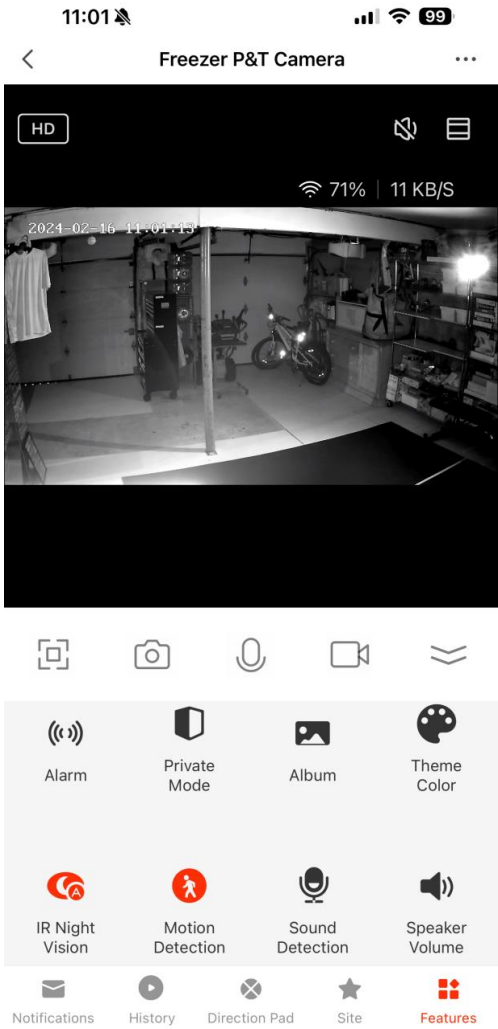

To view All History (Video)

History / Playback Non-Stop Recording

 
Press to go back to Home Panel



Press to view date from Calendar

Press to view recent date


Will load to current day at 12:00AM

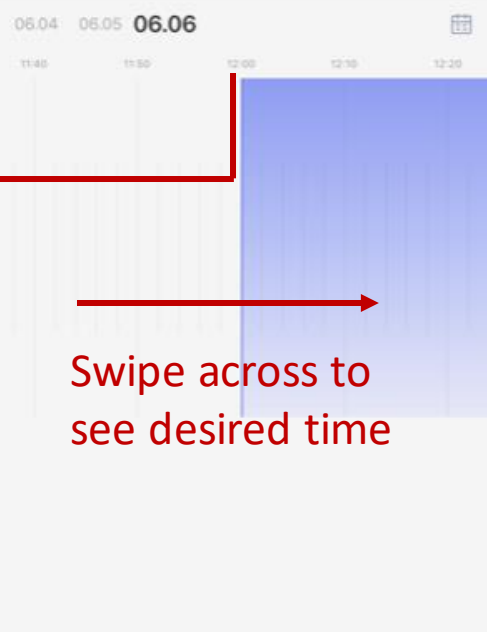

Swipe across to see desired time

History / Playback Event Recording

 Press to go back to Home Panel

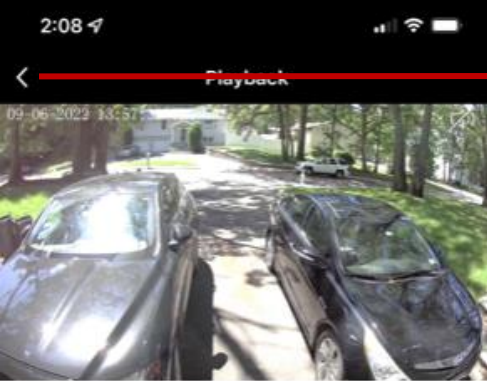

Press to view date from Calendar

Press to view recent date

 
Will load to current day at 12:00AM



Swipe across to see desired time/event start



Features

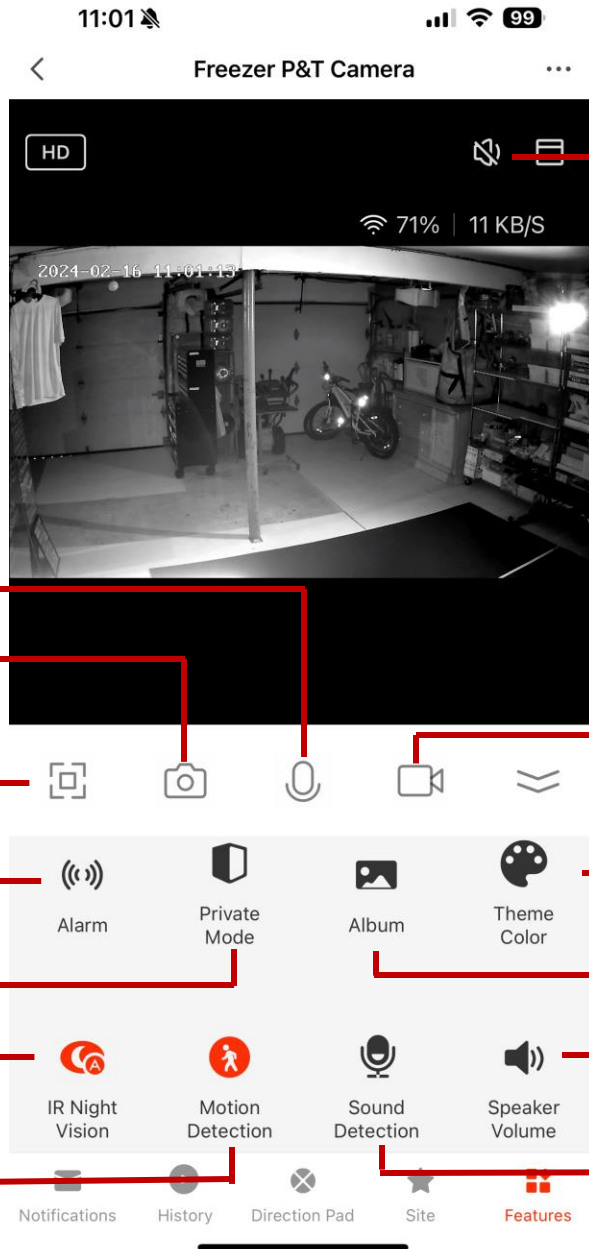

Settings

Mute & Zoom

***When in Live view, and motion is detected, camera will NOT record detection. You must tap video record icon to record video or tap camera icon to take an image. They will then appear in the Album.**

Record

Theme Color

 
Album

Speaker Volume


Sound Detection

Settings	Main Settings
Zoom	Zoom in on the Live View
Mute	Mute/Unmute the Floodlight Microphone
Resolution	Set between HD/SD
Talk	Speak through the Floodlight Speaker
Screenshot	Screenshot the Live View to Mobile Device
Record	Record the Live View to Mobile Device
Theme Color	Choose Light or Dark Theme
Full Screen	Switch Live View to Full Screen
Album	View Screenshots and Recordings
Alarm	Manually Active the Floodlight Alarm
Private Mode	Remotely Enable/Disable Camera Recording
PIR Settings	Adjust PIR Sensitivity & Light On Time
IR Night Vision	IR Set Night Vision to Auto/On/Off
Motion Detection	Enable/Disable Motion Detection
Sound Detection	Enable/Disable Sound Detection
Speaker Volume	Adjust Speaker Volume


Features – Cont'd

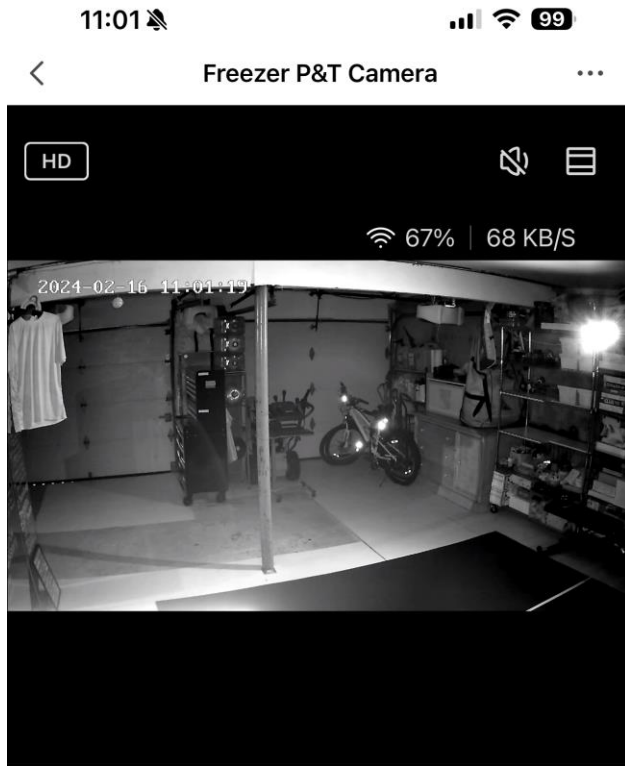

Patrol	Camera will move randomly to check area
Motion Tracking	Camera will track the object once motion is detected
Anti-Flicker	Change the flicker settings
Standard Mode	Select between Standard Mode and Flowing Mode
Direction Pad	Manually move the camera in desired direction
Sites	Saved locations for view
Notifications	Review past Motion Notifications
History	Review all past video

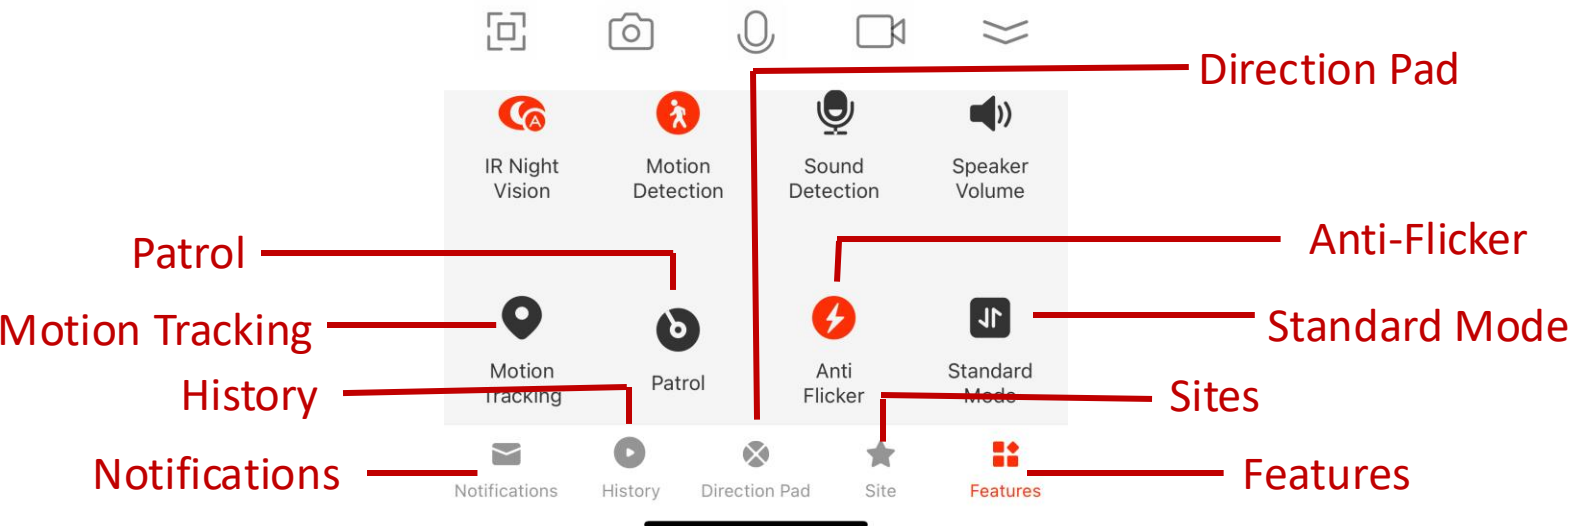 


Alarm

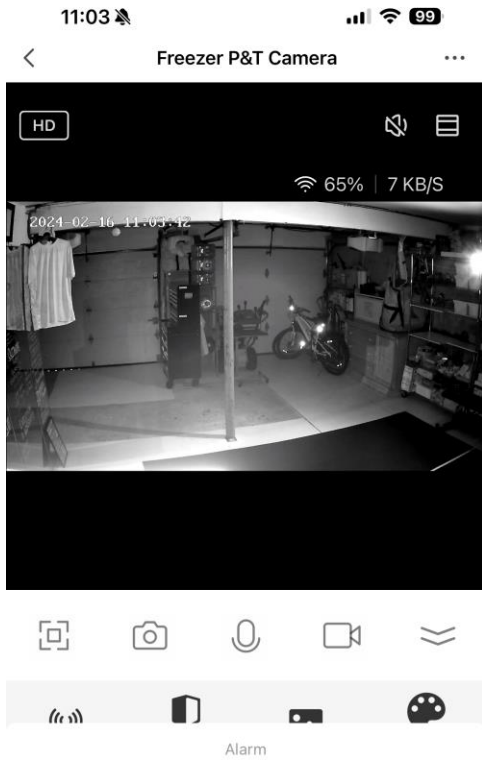 

Press to sound
Alarm on/off




 Theme Color

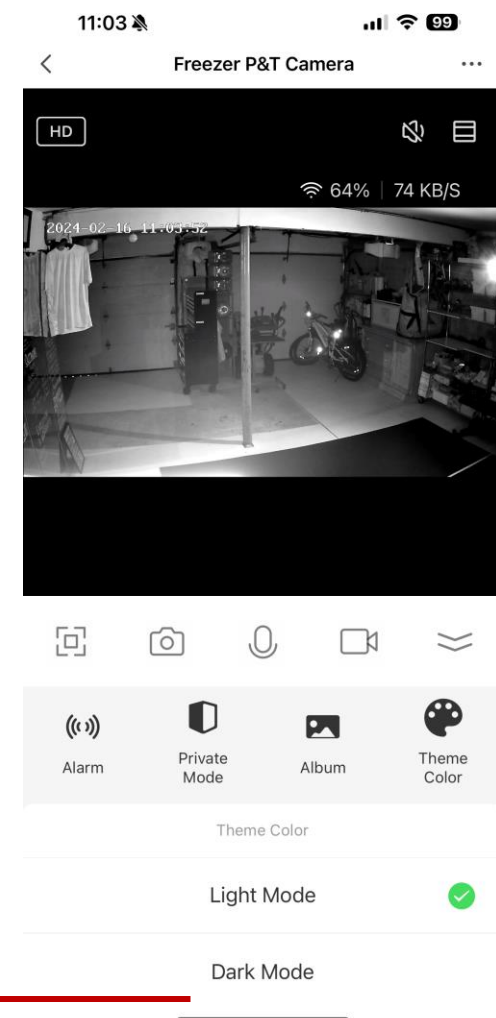


Select Light or
Dark Mode

 IR Night Vision

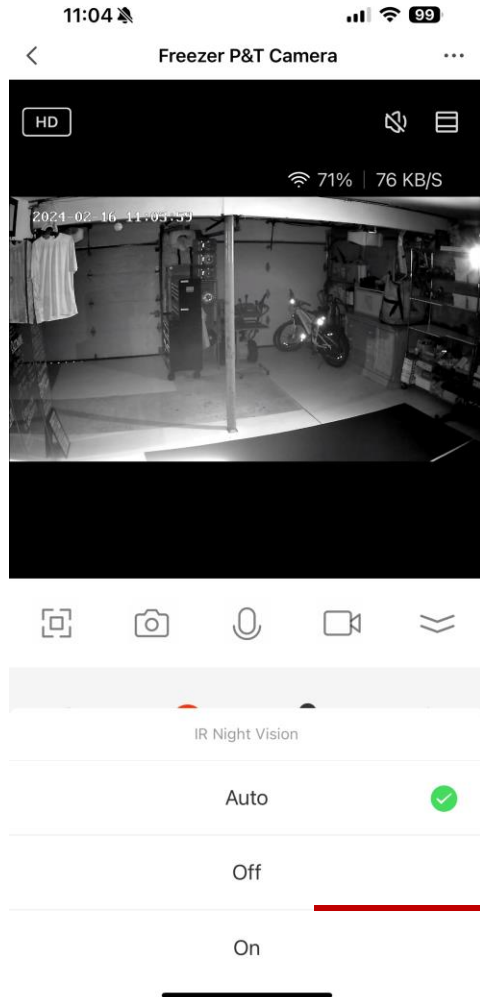


Select Night Vision setting – Auto/On/Off

 Speaker Volume

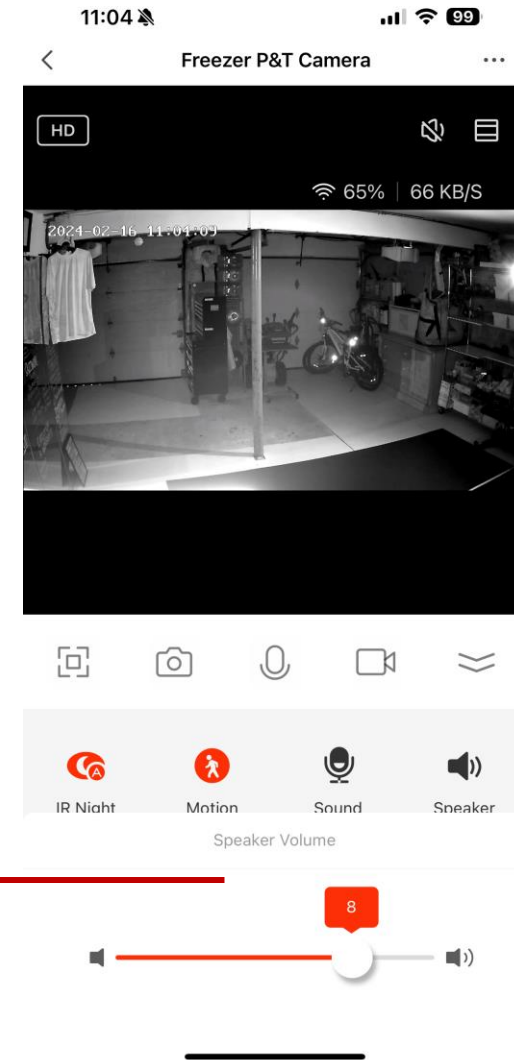


Adjust slider to desired volume.

 
Album

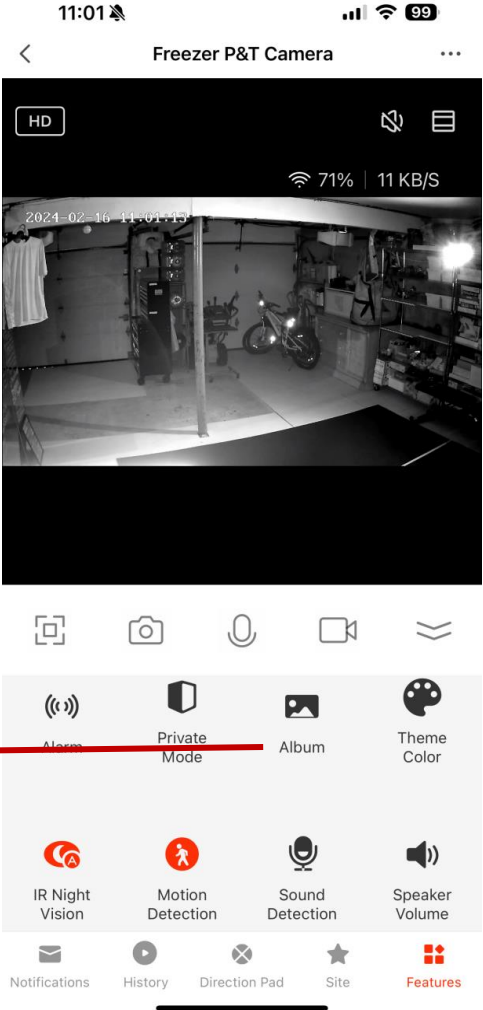

 Press Image or Video to share, forward, download, copy, delete, etc.

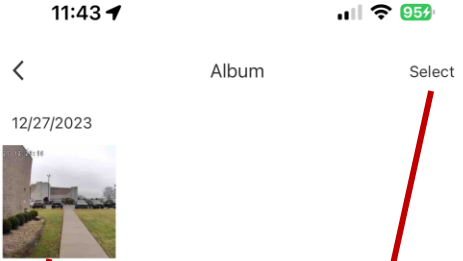

 
Press Select to choose multiple images and/or videos in the album to delete.

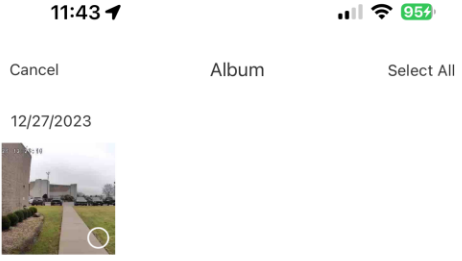

Press to delete selected images/videos

Press to Select All or Deselect All.

 
Direction Pad

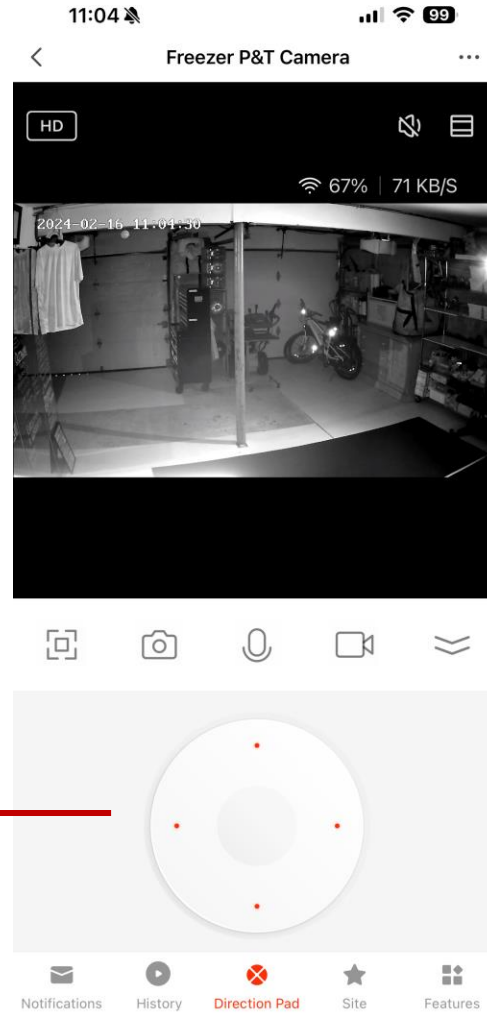


Use Direction Pad to move the camera to the desired location.
Up/Down/Left/Right

Site

 Use the direction pad to move the camera the "Site" you wish to save. Press "Add Site" to set the "Site". When the saved "Site" is pressed, the camera will automatically move to the "Site".

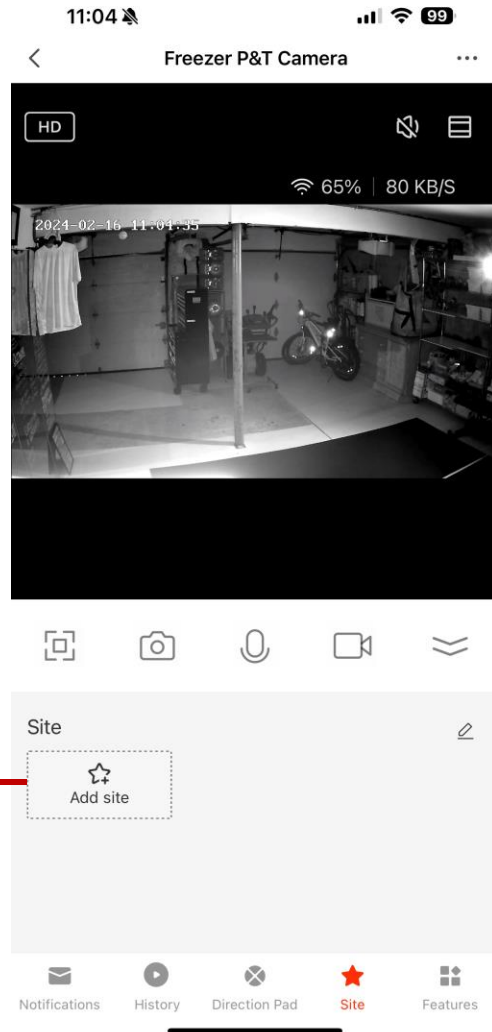


 * - When Patrol is enabled, cannot add or edit a Site. Must disable Patrol first.

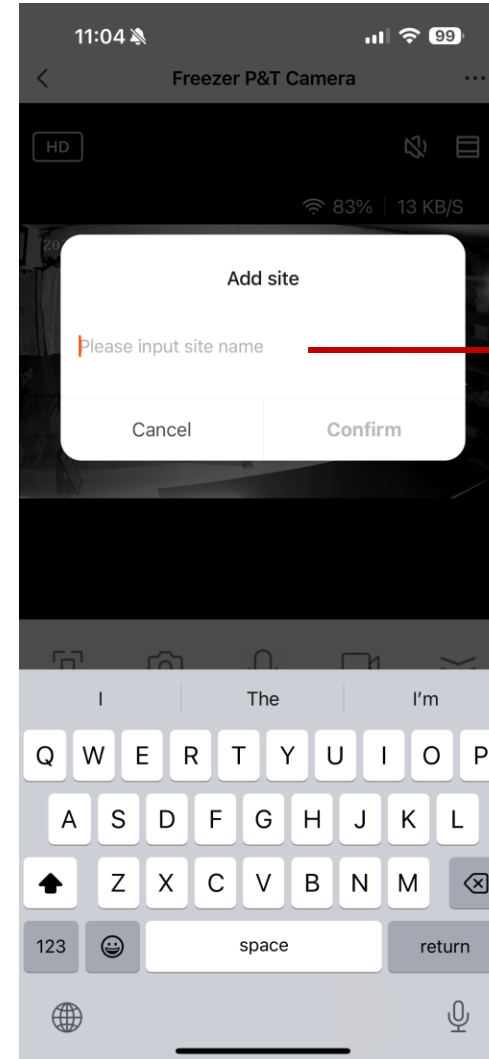

Once you move the camera to the desired location, press "Add Site". You will see a pop-up to name the Site. Name the Site and press Confirm.

 View Multiple Cameras at one time

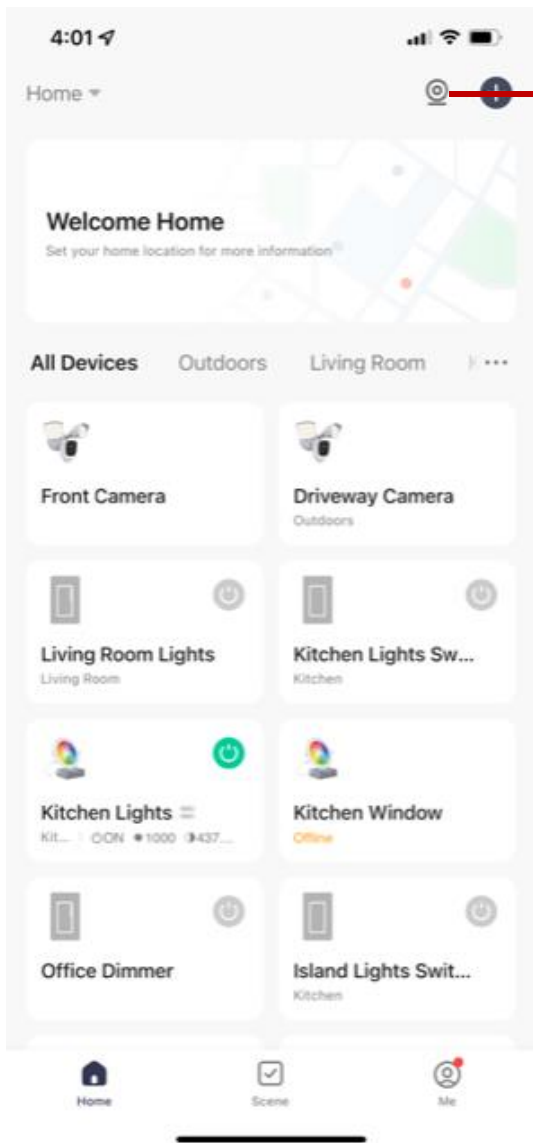

Press Camera Icon to view multiple connected cameras at one time.



Press to return to Home Panel

Select how many cameras to view at one time.



Turn device to view horizontally.