Vapor Proof Fixtures Installation Instructions

SF76/616


SF76/618

SF76/624

SF76/625


SF76/626

SF76/627

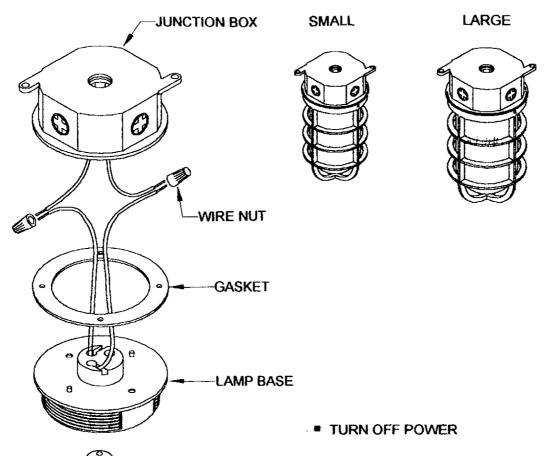



- INSTALL JUNCTION BOX AND PULL OUT SUPPLY WIRE
- TO CONNECT WIRES USING WIRE NUTS EACH SUPPLY WIRE TO CORRESPONDING SOCKET WIRE
- ATTACHED LAMP BASE UNIT TO JUNCTION BOX
- TAKE "A TYPE" BULB 100W(SMALL)/200W(LARGE)MAX
- SCREW IN GLASS GLOBE AND ALUMINUM CAGE
- TURN ON POWER

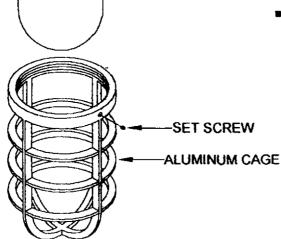

BULB

GLASS GLOBE