


BATTERY-OPERATED WALL SCONCE


Owner's Manual

Model #51899

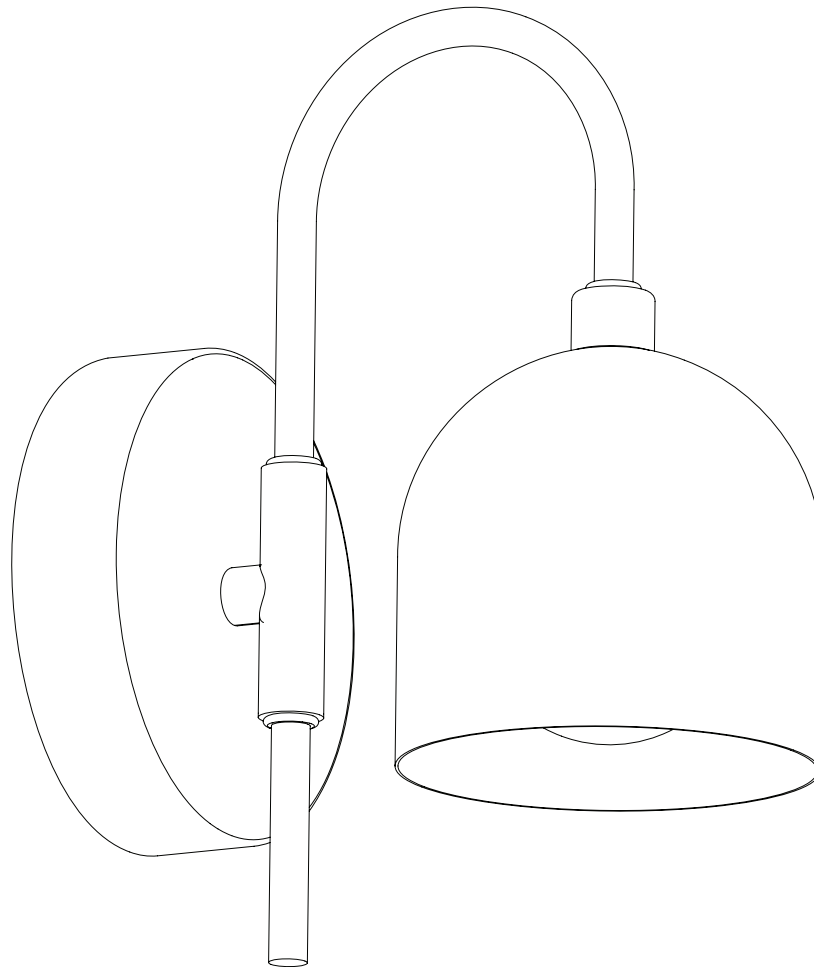

If a problem cannot be remedied or you are experiencing difficulty in installation,
please contact Customer Service: 1-877-706-3267, 8 a.m. - 5 p.m. Central Time.

PACKAGE CONTENTS

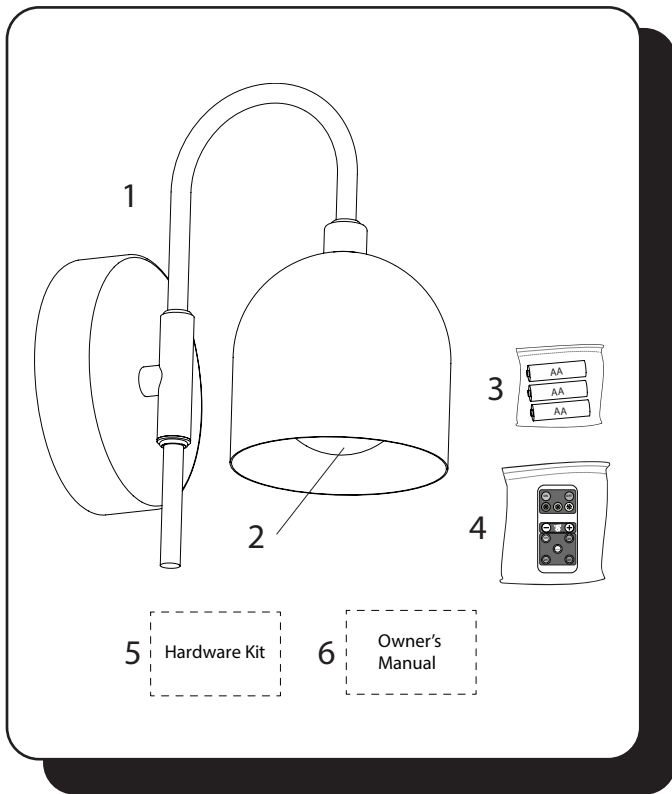

Unpack your light fixture and check the contents. You should have the following items:



PACKAGE CONTENTS

- | | |
|----------------------|----------------------|
| 1. Fixture (x2) | 4. Remote Pack (x2) |
| 2. Puck Light (x2) | 5. Hardware Kit (x2) |
| 3. Battery Pack (x2) | 6. Owner's Manual |


HARDWARE CONTENTS

- | | |
|----------------|----------------------|
| 7. Anchor (x4) | 8. Anchor Screw (x4) |
|----------------|----------------------|

  HARDWARE CONTENTS



TOOLS REQUIRED (not included)

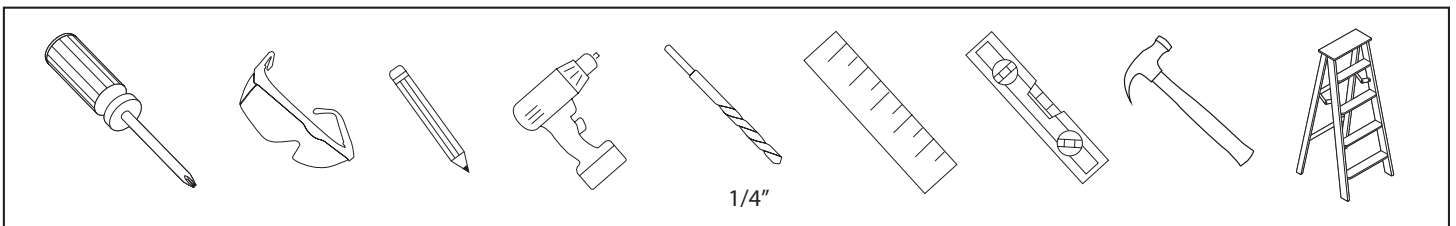

Tools required for assembly: Safety Glasses, Phillips Screwdriver, Pencil, , Drill Bit, Ruler, Level, Hammer, and Step Ladder

SAFETY INSTRUCTIONS


READ ALL SAFETY INFORMATION AND INSTALLATION INSTRUCTIONS BEFORE BEGINNING TO INSTALL THE LIGHT FIXTURE AND SAVE INSTRUCTIONS.

- The net weight of the light fixture is 2.18 lb. (0,99 kg).
- This fixture is intended for indoor use. It is not suitable for damp or outdoor locations.
- To avoid personal injury, the use of gloves or protective clothing may be necessary when handling fixture parts with sharp edges.




BATTERY WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected of being swallowed or inserted inside any part of the body.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type (CR2025).
- Nominal battery voltage: 3V.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

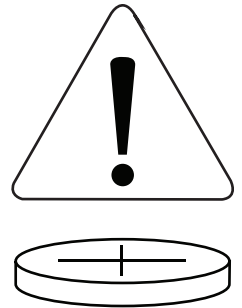


ASSEMBLY INSTRUCTIONS

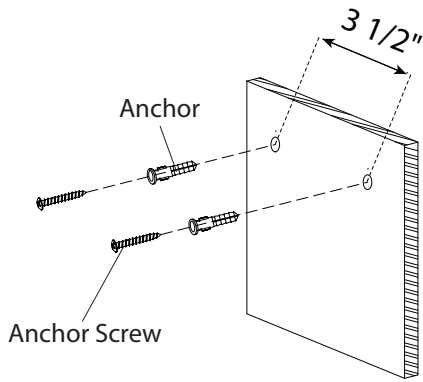


1

1. Determine the desired location of the fixture assembly. Mark the anchor locations on wall and drill each hole 7 mm in diameter. Insert the anchors and tap into the wall until secure. Using a screwdriver, set two anchor screws into the anchors leaving enough exposed to set into the keyhole slots on the preassembled wall plate.

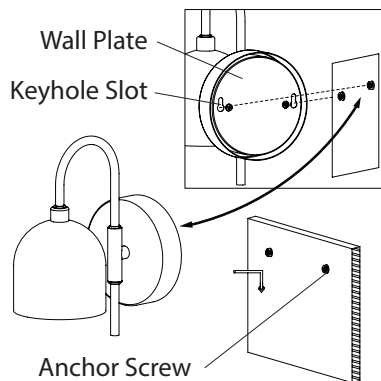


2

2. Align the keyhole slots on the wall plate with the anchor screws on the wall and then gently push the wall plate against the wall and slide down until secure.

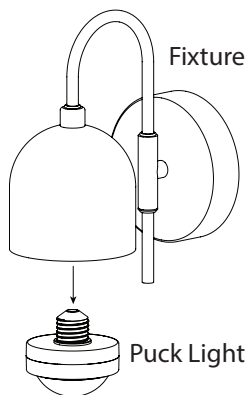

3


3. Remove preinstalled puck light from fixture for battery installation.

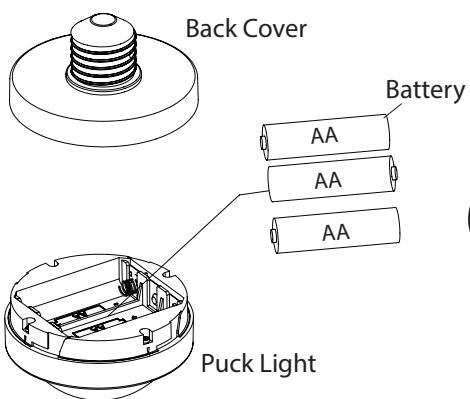

4


4. Remove the battery cover from the back of the puck light. Insert the batteries ensuring polarity of battery matches the polarity indicated in the battery compartment -- positive (+) to positive (+) and negative (--) to negative (--).

ASSEMBLY INSTRUCTIONS

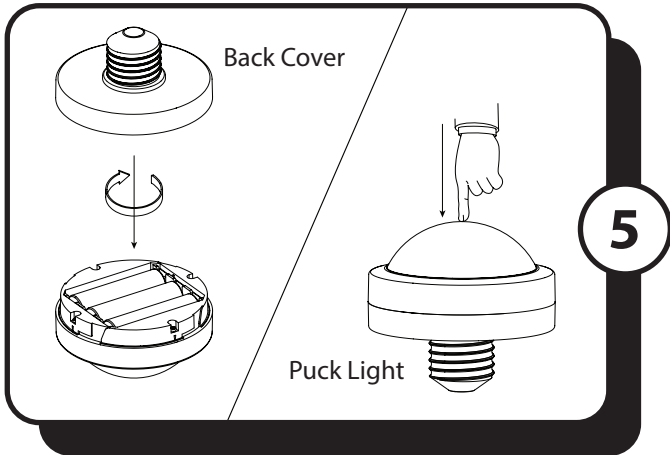

5. Replace the back cover to puck light and press light to ensure light turns on/off.



Quickly pressing puck light will change color temperatures. Pressing for 2 seconds will adjust the brightness of puck light.

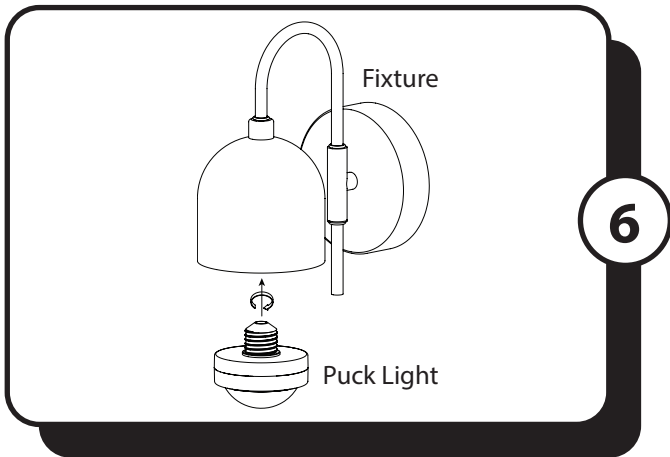

6. Screw puck light into the socket of the fixture.

Assembly is complete.

OPERATION INSTRUCTIONS

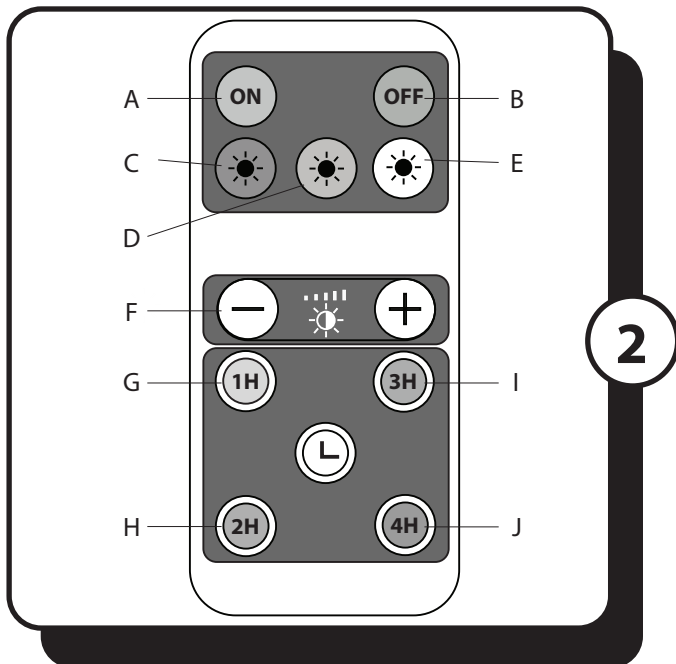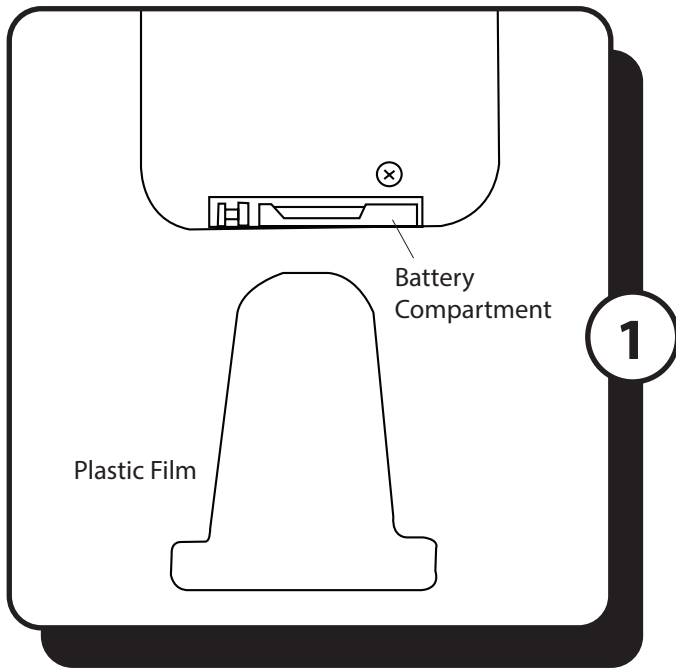

1. Batteries were preinstalled in the battery compartment of the remote. Pull the plastic film in the direction of the arrow to remove, which will activate the batteries.

2. To operate the fixture using the remote from remote pack, press the following buttons:

A - Light On

B - Light OFF

C - Light Color Daylight

D - Light Color Warm

E - Light Color Cool

F - Dimmer - Press (--) to dim lights or (+) to brighten lights.

G - 1 Hour Timer - Turns off light after 1 hour.

H - 2 Hour Timer - Turns off light after 2 hours.

I - 3 Hour Timer - Turns off light after 3 hours.

J - 4 Hour Timer - Turns off light after 4 hours.

TROUBLESHOOTING

If you have difficulty operating your new light fixture, or have difficulty with installation, please contact Customer Service : 1-877-706-3267, 8 a.m. - 5 p.m. Central Time.

WARNING: Ensure the power is turned off to the ceiling fan and light kit before performing any maintenance.

PROBLEM	SUGGESTED REMEDY
Fixture does not light up.	1. Replace batteries.

WARRANTY

1-YEAR LIMITED WARRANTY

To obtain service, please contact Customer Service:
1-877-706-3267, 8 a.m. - 5 p.m. Central Time.

Model Name: Battery-Operated Wall Sconce (2-pack)
Model No: 51899

The manufacturer warrants all of its light fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The manufacturer will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.