


## PACKAGE CONTENTS

ISSUED 07-2015

UM-TST21813E

PART	DESCRIPTION	QUANTITY
A	Crossbar Assembly (Pre-assembled to Socket Assembly)	1 pc
B	Green Ground Screw (Pre-assembled to Crossbar)	1 pc
C	Wire Connector	3 pcs
D	Outlet Box Screw	2 pcs
E	Fixture Chain	1 pc
F	Quick Link	2 pcs
G	Ceiling Canopy	1 pc
H	Flat Washer	1 pc
I	Nipple with Hex Nut	1 pc
J	Rod Assembly	1 pc
K	Socket Assembly	1 pc
L	Side Arm	3 pcs
M	Shade	1 pc
N	Finial	1 pc

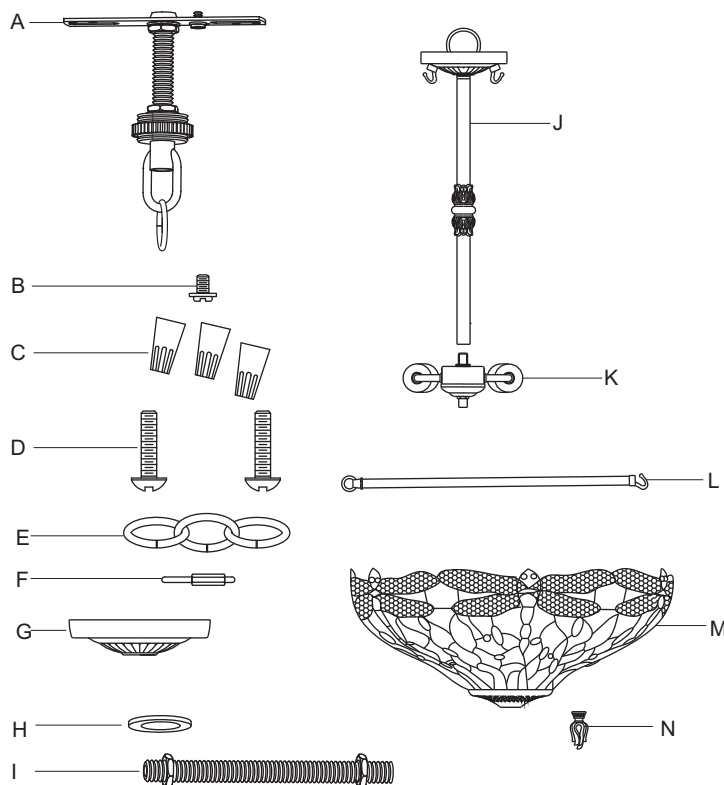

## WARNINGS AND CAUTIONS

### WARNING:


- Before beginning the installation, turn off electricity at the circuit breaker box or the main fuse box by switching off the circuit breaker or removing the fuse.


### CAUTION:

- These instructions are provided for your safety. It is very important that they are read completely before the installation of your fixture. We strongly recommend that a professional electrician install the fixture.
- Disconnect fixture from the power source before replacing the bulb(s), making sure that bulb(s) had sufficient time to cool down. DO NOT subject the lamp to any shock while lit as shattering of lamp may result.

## PREPARATION

- Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and diagram above. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement part.
- Estimated Assembly Time: 35 - 45 minutes
- Bulb Recommended:** (3) 100W Type-A medium base bulbs, Alternate (3) CFL bulb.
- Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

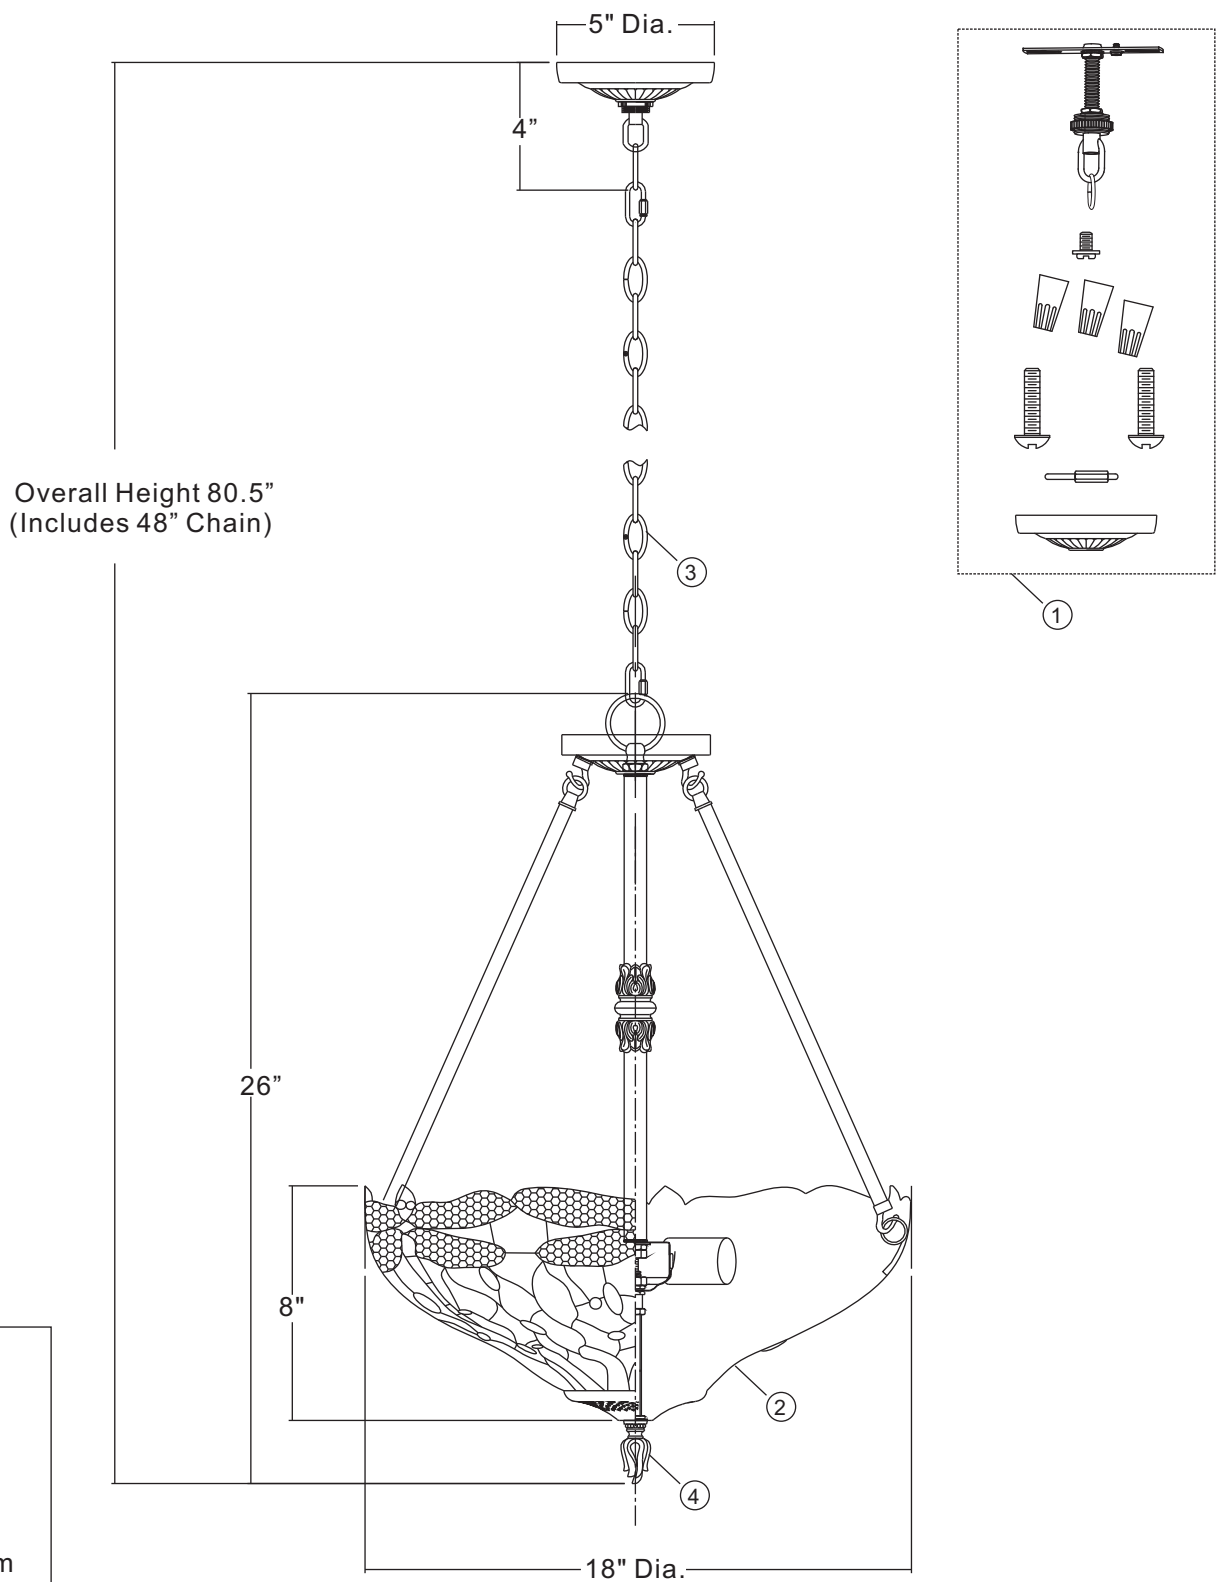




(3)100W Medium Base Bulbs  
(Not Supplied)

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	911997KIT	MOUNTING KIT	1
2	G12001SH	SHADE	1
3	M2038CHRS	FIXTURE CHAIN	1
4	M2342FIRS	FINIAL	1

## INSTALLATION INSTRUCTIONS


### STEP 1:

- a. Secure the Crossbar Assembly to the outlet box (not included) with outlet box screws. Tighten until snug.

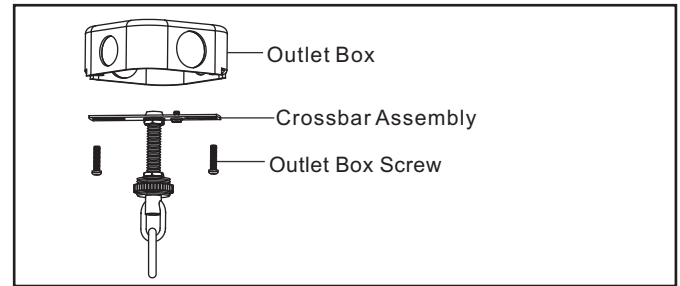


### STEP 2:

- a. Remove the pre-assembled canopy lock ring from crossbar assembly. Temporarily attach the Ceiling Canopy to the pre-assembled nipple on the crossbar assembly, securing with canopy lock ring. If the ceiling canopy is not snug against the ceiling, remove it from the Crossbar Assembly and adjust the length of the pre-assembled Nipple by unscrewing the pre-assembled hex nut. Screw the nipple in or out of the crossbar until the correct length is achieved, then re-attach the Ceiling Canopy.

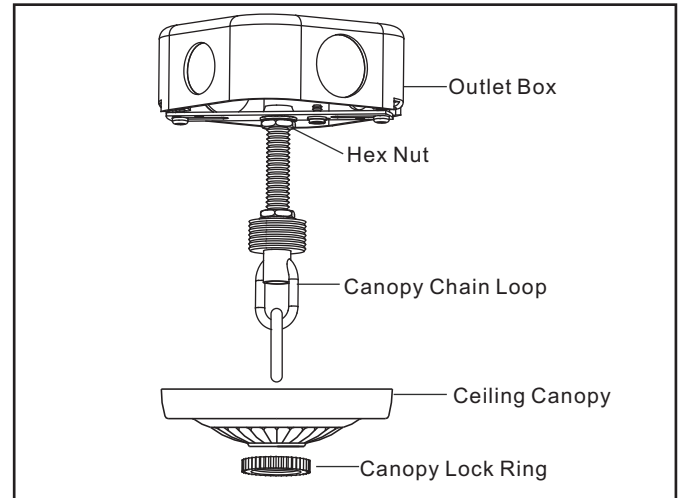


### STEP 3:

- a. Thread the Rod Assembly onto the nipple on the top center of the Socket Assembly. Hand tighten until snug.

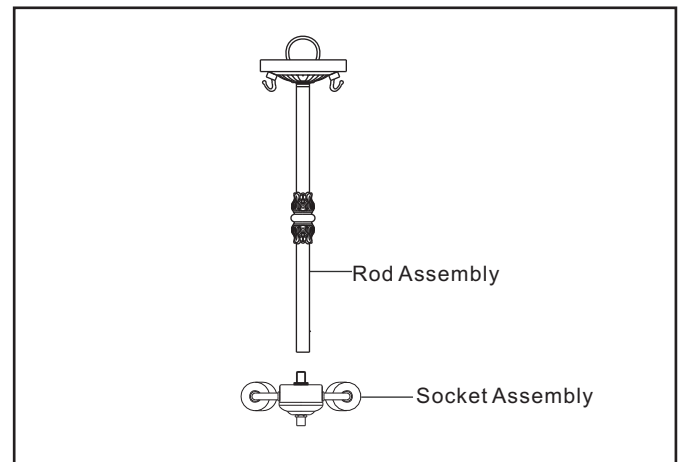

### STEP 4:

- a. Adjust the Fixture Chain to your desired length by removing the links if needed. You may need to use pliers to open the chain links. If so, put a cloth over the chain to protect the finish from the pliers. Suggested mounting height over a table or island is 30 inches from the table/island top to the bottom of the fixture.
- b. Attach one end of the Fixture Chain onto the Canopy Chain Loop with a Quick Link Connector and then attach the other end of the Fixture Chain onto the Fixture Loop on the top of the fixture with another Quick Link Connector.

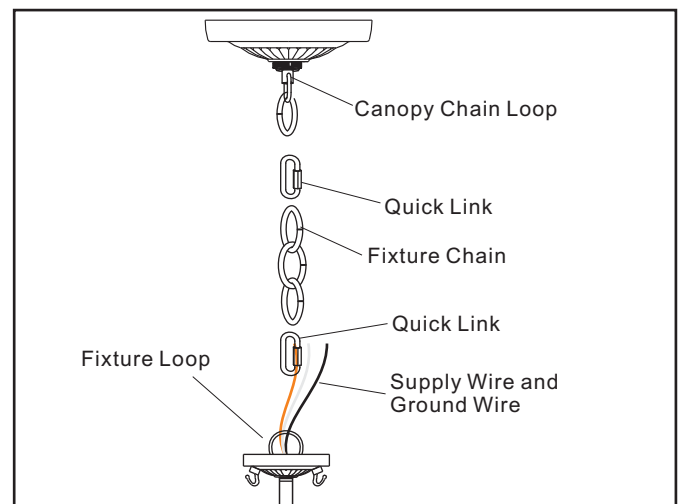

### Suggested chain length for ceiling height:

- 8' ceiling: 4" Fixture chain + (2) 2" H. Quick links  
9' ceiling: 16" Fixture chain + (2) 2" H. Quick links  
10' ceiling: 28" Fixture chain + (2) 2" H. Quick links


## INSTALLATION INSTRUCTIONS

### STEP 5:

- a. Confirm that the mounting height is acceptable. Refer to step 5 if changes are required.


**Note:** To make the next step easier, cut the supply wire and ground wire 24 inches longer than the distance from the fixture loop to the ceiling.

- b. Pull the Supply Wires and Ground Wire up through the Fixture Chain alternating links. Push the wires up through the Canopy Chain Loop into the outlet box.

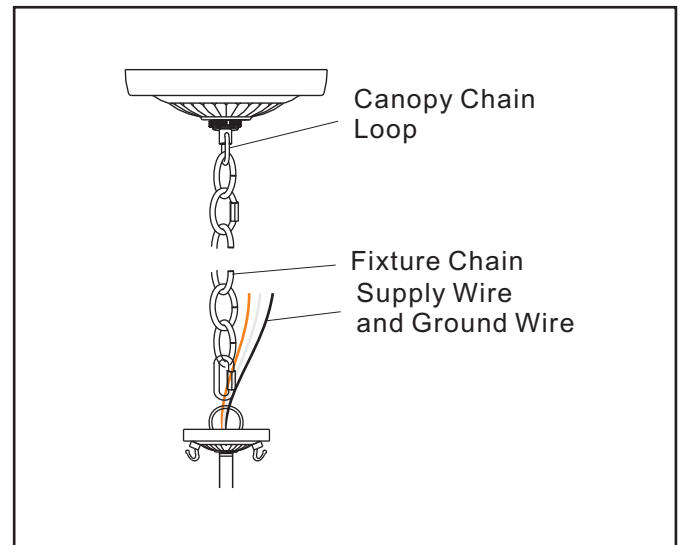

### STEP 6:


- a. Un-thread the Canopy Lock Ring and slide Canopy Lock Ring and Ceiling Canopy down the Fixture Chain.
- b. Push all slack fixture wire through Canopy Chain Loop into outlet box. Trim excess fixture wire leaving a minimum of 6 in. Hanging out of the outlet box.
- c. Refer to STEP 7 to connect the wires.
- d. Re-attach the Ceiling Canopy as shown in STEP 2.

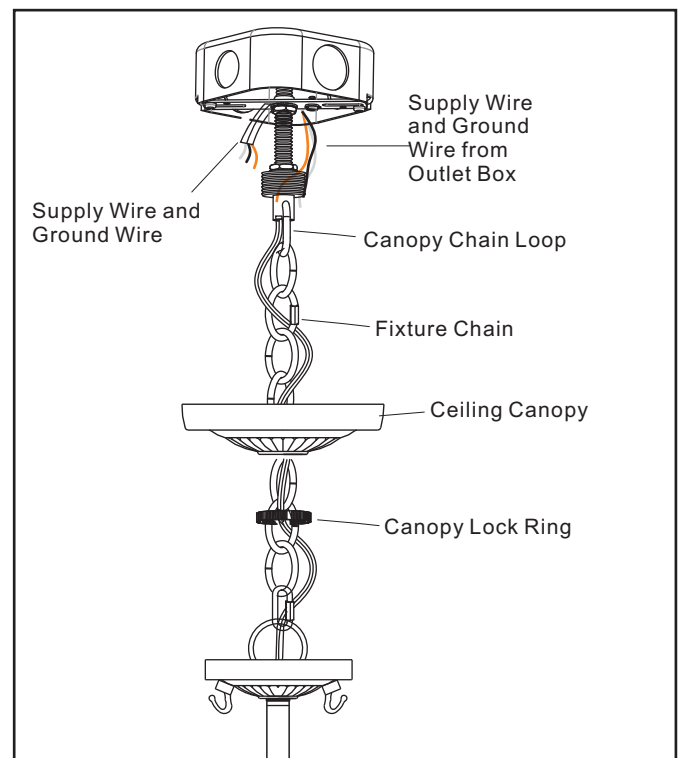

## INSTALLATION INSTRUCTIONS


### STEP 7:

- ✱ Use Wire Connectors (supplied) to connect the wires.
- a. Connect the House Ground Wire to the Fixture Ground Wire.
- b. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or or Ribbed Side).
- c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
- d. Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the Outlet Box.

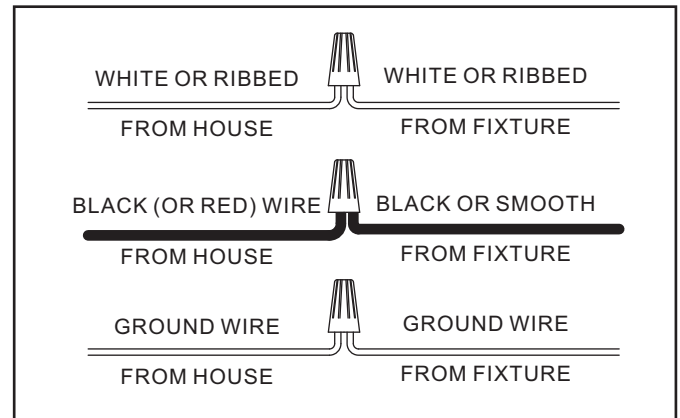


### STEP 8:

- a. Thread the one end of Nipple with Hex Nut into the Coupling underside of the Socket Cluster. Hand tighten until snug.

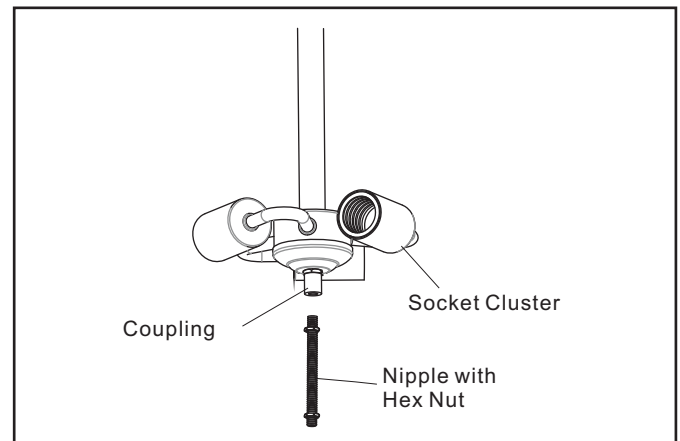

### STEP 9:

- a. Place Flat Washer over the center hole on the Shade over the end of the Nipple with Hex Nut.
- b. Connect the Side Arm Loops to the Hooks on the side of the Fixture Canopy. While another person holds the shade centered over the Nipple and Flat Washer, connect the Side Arm Hooks to the Loops inside the shade.
- c. Thread the Finial onto the Nipple with Hex Nut underside of the Shade. Hand tighten until snug.

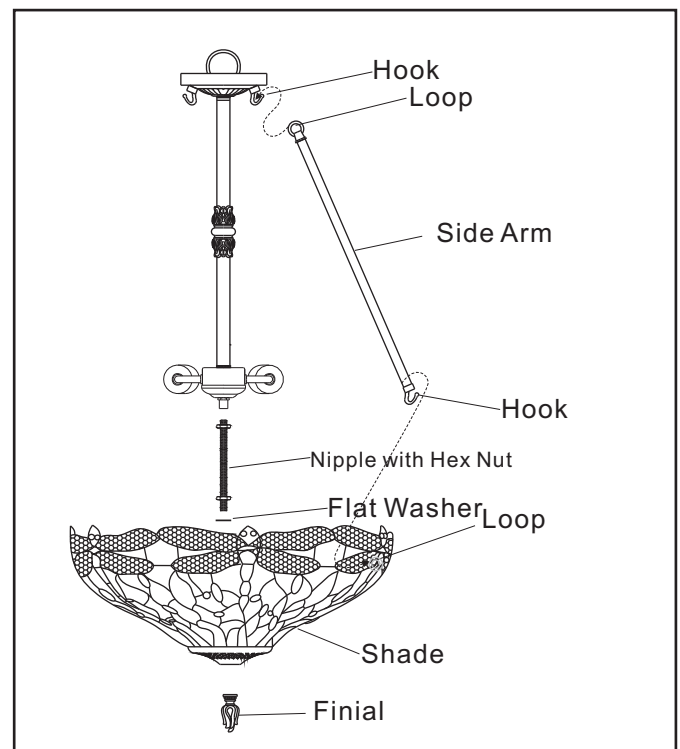


## INSTALLATION INSTRUCTIONS

---

### STEP 10:

- a. Thread the Hex Nut inside of Shade against the bottom of the Shade. Tighten gently until snug.

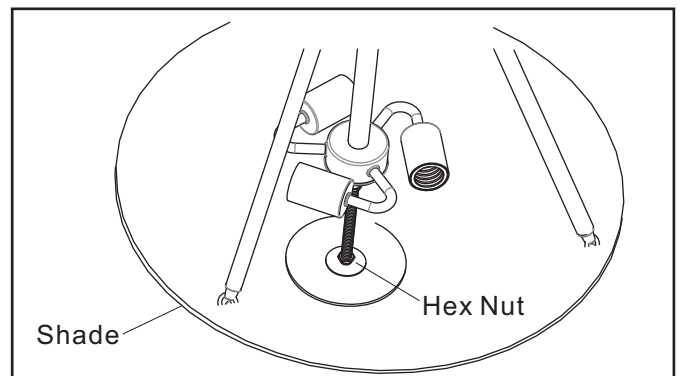

### STEP 11:

- a. Install correct bulbs referring to fixture markings and/or labels for maximum wattage.

Your installation is completed now. Restore electricity. Retain this sheet for future reference.