


# Assembly Instruction Sheet #IS-FSN5206RK For Style FSN5206RK

Please go to www.quoizel.com for product cleaning tips. Go to the Care+Maintenance selection. Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source: (6) B10 Candelabra Base Bulbs 60W Maximum. Estimated Assembly Time: 30-45 minutes Preparation: Identify and inspectall parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts. A Warnings and Cautions Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Package Contents STEP 2 - Install Fixture Loop Figure 2 and Ring to Fixture Body A. Remove lock screws from the Fixture Body (B). Place Lock the Ring (C) over the Fixture Screw В Body (B) and align the holes Fixture on the Ring (C) to mounting A Loop holes on wood arms. Secure x 1 with lock screws previously removed. Hand tighten until snug. B. Thread the Fixture Loop (A) Fixture Ring onto the top center of the Body B С x 1 Fixture Body (B). Hand x 1 tighten until snug. С Socket Assembly Rod D x 1 x 1 STEP 3 - Install the Crossbar to the junction box A. Attach the Crossbar (AA) to the Outlet Box with the head of the Hardware Contents Canopy Green Ground Screw facing you. Secure it with Outlet Box Screws EE Chain Loop (not included), tighten until snug. x 1  $\odot$ Canopy Lock **Outlet Box** Ring Crossbar AA x 1 x 1 Green Ground AA **Fixture Chain** Screw GG Lock Washer x 1 RR **Outlet Box Screw** x 2 Quick Link (not included) Hex Nut CC x 2 Figure 3 x 2 Ceiling Nipple II Canopy DD x 1 STEP 4 - Install the Canopy Chain Loop and Nipple x 1 A. Thread one Hex Nut (CC) to one end of the Nipple (DD) until it is at STEP 1 - Install Socket least 0.25" from the end. Pass one Lock Washer (BB) over the end Assembly and Rod to of the Nipple (DD) and thread the Canopy Chain Loop (EE) onto **Fixture Body** В the Nipple (DD). By using pliers, thread the Hex Nut (CC) against the Canopy Chain Loop (EE) and hand tighten until snug. A. Pass the supply wires and B. Thread another Hex Nut (CC) to the middle of the Nipple (DD). ground wire through the D Place another Lock Washer (BB) over the Nipple (DD) and then Rod (D) and the Fixture thread the Nipple (DD) into the Crossbar (AA) until the Nipple (DD) Body (B). Thread the is about 0.375" above the Crossbar (AA). Socket Assembly (E), the C. Remove the Canopy Lock Ring (FF) from the Canopy Chain Loop Supply Wires Rod (D) and the Fixture (EE). Place the Ceiling Canopy (II) over the Canopy Chain Loop and Ground Body (B) together. Hand (EE) against the ceiling to determine the correct position of the Wire tighten until snug. ÷ Nipple (DD). Thread the Canopy Lock Ring onto the Canopy Chain Loop (EE). Adjust the Nipple (DD) to allow the Ceiling Canopy (II) Е to rest against the ceiling when held in place by the Canopy Lock Figure 1 Ring (FF). Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com Released Date: 2017-06-09 © 2017 Quoizel Inc.

## (Step 4 Continued)

D. Remove the Canopy Lock Ring (FF) and the Ceiling Canopy (II). Tighten the Hex Nut (CC) against the Crossbar (AA) to secure in place.

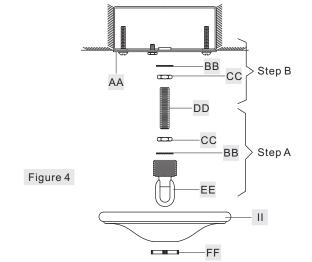


## STEP 5 - Install the Fixture Chain and Ceiling Canopy

- A. Adjust the Fixture Chain (GG) to your desired length by removing links if needed.
- B. Pull the supply wires through the Fixture Chain (GG) alternating links. After the wires are through the Fixture Chain (GG), pull the Supply Wires and the Ground Wire through the Canopy Lock Ring (FF) and the Ceiling Canopy (II) in order.
- C. Attach one end of the Fixture Chain (GG) to the Fixture Loop with one Quick Link (HH). Lift the fixture and Fixture Chain (GG) up and attach the other end of the Fixture Chain (GG) onto the Canopy Chain Loop (EE) with another Quick Link (HH). The fixture will now hang safely.
- D. Feed the Supply Wires and Ground Wire through the Canopy Chain Loop (EE) and Nipple (DD) into the Outlet Box. Cut the wires leaving approximately 8" of wire extending from the Outlet Box.
- E. Go to Step 6 for wire connections and follow the directions. Return to Step F in this step when
- complete with Step 6. F. Raise the Ceiling Canopy (II) and Canopy Lock Ring (FF) up the Fixture Chain (GG) and over the Canopy Chain Loop (EE). Tighten the Canopy Lock Ring (FF) onto the Canopy Chain Loop (EE) until tight.

Suggested chain length for Ceiling height : 8' ceiling : use 1 links of chain and 2 quick links 9' ceiling : use 11 links of chain and 2 quick links 10' ceiling : use 21 links of chain and 2 quick links


Figure 5

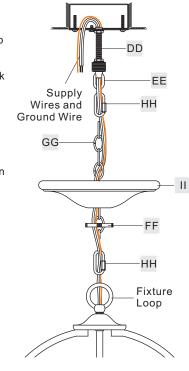

#### STEP 6 - Making the Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.


Note: If the electrical wire is going to be cut shorter than provided you will need to identify the "L" line wire and the "N" neutral wire before you cut the excess wire off. One is labeled N and the other labeled L. To do this separate the "L" line wire and the "N" neutral wire as far as you need to. Re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the fixture and not on the excess wire being cut and removed.

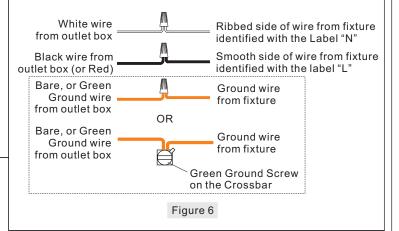

#### STEP 7 - Install Bulbs

A. Insert bulbs onto sockets and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!

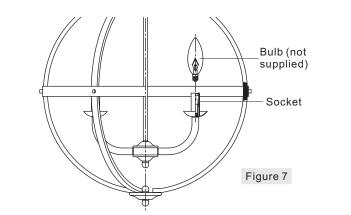

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com

© 2017 Quoizel Inc.

Released Date: 2017-06-09

