


Installation Guide For Style PCSBC5012C

Tools Required

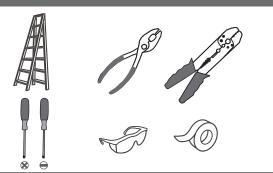

Light Source



BULB SHAPE TYPE G9 XENON

12 BULBS REQUIRED BULBSNOTINCLUDED

Fixture Height Adjustable 17.25" to 47.25"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

 
Do not touch the bulb with bare hands use a cloth or glove.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.





Lock Screw



 
Outlet Box Screw



 
Wire Connector




E Ceiling Canopy







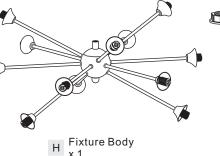



K Socket Collar



L x 12 Shade

  Table of **Contents**





STEP 2

