

Bar Height Stool

ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.

Our Warranty Statement

This warranty covers manufacturing defects associated with your new product. The product is warranted from the original purchase date and to the original purchaser for normal usage, according to the below-referenced specifications and limitations.

- Non-moving metal parts are warranted for 5 years.
- Component parts including pneumatic cylinder, control mechanism, base and casters are warranted for 2 years.
- All other items are warranted for 1 year.

Normal usage means use in compliance with the restrictions and weight limits specified for the product. In the absence of product-specific restrictions and weight limits, normal usage means use for no more than forty hours per week by persons weighing 250 lbs. or less. Coverage terminates if the product is sold or otherwise transferred. Repairs made by parties other than Belnick also void this warranty.

This warranty will not cover: (1) labor, freight, or damage from misuse, abuse, negligence, alteration, assembly, installation, attachments, accident, vandalism, acts of nature or any other event beyond the control of Belnick; (2) tearing, scratching, scuffing, or blemishing of leather or fabric; (3) cosmetic damage that may result from normal usage; (4) damage attributable to use by persons exceeding specified weight limits or commercial use exceeding forty hours per week; or (5) rust or other damage caused by exposure to moisture. The user assumes all risk of injury resulting from use of this product. Liability for incidental or consequential damage is excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

A x 4 B x 1 Upper Leg Connector Footrest F x 1 G x 4 + (1 Spare) A x 4 B x 1 Lower Leg Connector F x 4 + (1 Spare) A x 4 + (1 Spare)

Screw

M8x30mm


STEP1 STEP2


Screw

M6x25mm

Align the cutouts in the Upper Leg Connector (Part B) and the Lower Leg Connector (Part C).

Allen Wrench

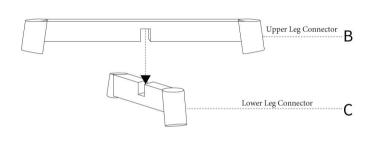

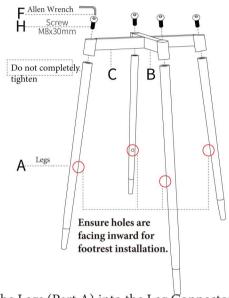

Screw

M6x45mm

Insert the Legs (Part A) into the Leg Connectors (Part B & C) and insert (4) M8x30mm Screws. **Do not tighten screws completely at this time.**

A Legs D Footrest M6x25mm G Allen Wrench F Step 1 Step 1 Step 1 Step 1 Step 2 Loyer Leg Connector

E Seat

Align the holes on the Footrest (Part D) with the holes on the Legs (Part A). Attach using (4) M6x25mm Screws (Part G). Tighten using Allen Wrench (Part F). After installation of Footrest, completely tighten screws from Step 2 in the Leg Connectors.

Align the holes on the underside of the Seat (Part E) with the holes in the Upper and Lower Leg Connectors (Parts B & C). Attach using (4) M6x45mm Screws (Part I). Tighten using Allen Wrench (Part F).