

Our Warranty Statement






















This warranty covers manufacturing defects associated with your new product. The product is warranted from the original purchase date and to the original purchaser for normal usage, according to the below-referenced specifications and limitations.

- Non-moving metal parts are warranted for 5 years.
- Component parts including pneumatic cylinder, control mechanism, base and casters are warranted for 2 years.
- All other items are warranted for 1 year.

Normal usage means use in compliance with the restrictions and weight limits specified for the product. In the absence of product-specific restrictions and weight limits, normal usage means use for no more than forty hours per week by persons weighing 250 lbs. or less. Coverage terminates if the product is sold or otherwise transferred. Repairs made by parties other than Belnick also void this warranty.


This warranty will not cover: (1) labor, freight, or damage from misuse, abuse, negligence, alteration, assembly, installation, attachments, accident, vandalism, acts of nature or any other event beyond the control of Belnick; (2) tearing, scratching, scuffing, or blemishing of leather or fabric; (3) cosmetic damage that may result from normal usage; (4) damage attributable to use by persons exceeding specified weight limits or commercial use exceeding forty hours per week; or (5) rust or other damage caused by exposure to moisture. The user assumes all risk of injury resulting from use of this product. Liability for incidental or consequential damage is excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

PARTS

PART1 QTY:1  Backrest	PART2 QTY:1  Seat	PART3 QTY:2  Armrests	PART4 QTY:1  Control Unit	PART5 QTY:1  Gas Lift Cover	PART6 QTY:1  Gas Lift	PART7 QTY:1  Base Center	PART8 QTY:2  Base Arms
PART9 QTY:5  Casters x5	PART10 QTY:1  Back Plate	PART11 QTY:1  Lumbar Support	PART12 QTY:4  M6x20mm	PART13 QTY:4  M8x30mm	PART14 QTY:4  M6x30mm	PART15 QTY:3  M8x20mm	PART16 QTY:3  M8x18x1.5mm
PART17 QTY:3  M8 Lock Washer	PART18 QTY:4  M6x18x1.2mm	PART19 QTY:4  M6 Lock Washer	PART20 QTY:4  Screw Caps	PART21 QTY:1  Allen Wrench			


STEP1

STEP1: Turn Base Center (Part 7) upside down and insert Base Arms (Part 8) into the Base Center vertically and then slide into the parallel position.

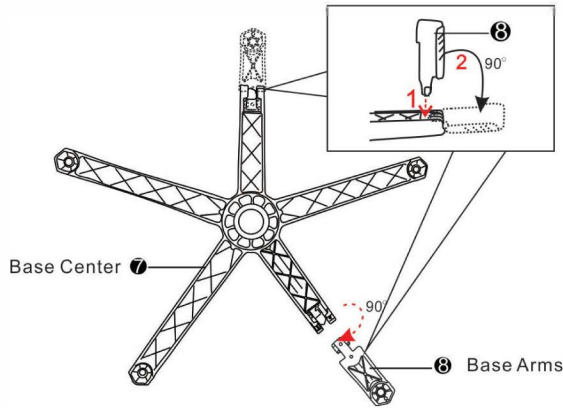


STEP2

STEP 2: Insert (5) Casters (Part 9) into the base arms and return base assembled base to the upright position. Insert the wide end of the Gas Lift (Part 6) into the Base Center. Slide the Gas lift Cover (Part 5) downwards over the Gas Lift.

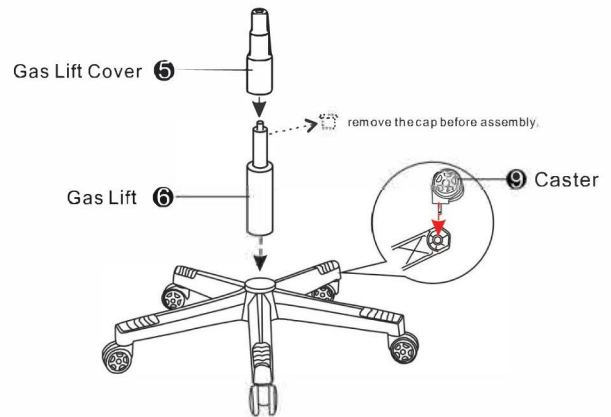


STEP3

STEP 3: Lay the Seat (Part 2) face down on a smooth clean surface. Attach the Control Unit (Part 4) to the underside of the Seat using (4) M6x20mm Screws (Part 12). Tighten with Allen Wrench (Part 21).

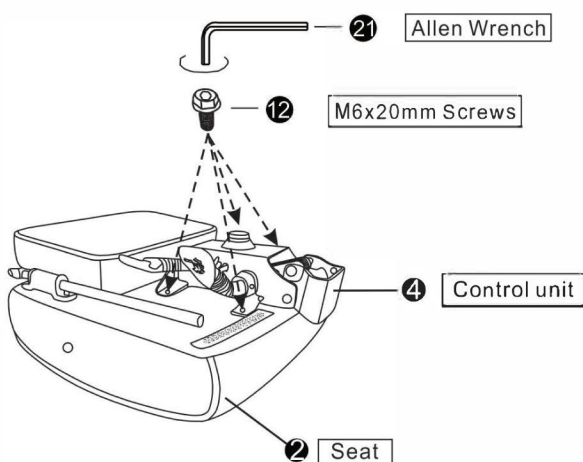

STEP4


STEP 4: Attach one side of Back Plate (Part 10) to Backrest (Part 1) using (4) M6x18x1.2mm Flat Washers (Part 18), (4) M6 Lock Washers (Part 19), and (4) M6x30mm Screws. Attach the other side of the Back Plate to the Control Unit using (3) M8x18x1.5mm Flat Washers (Part 16), (3) M8 Lock Washers (Part 17), and (3) M8 x 20 Screws (Part 15). Tighten using Allen Wrench (Part 21).

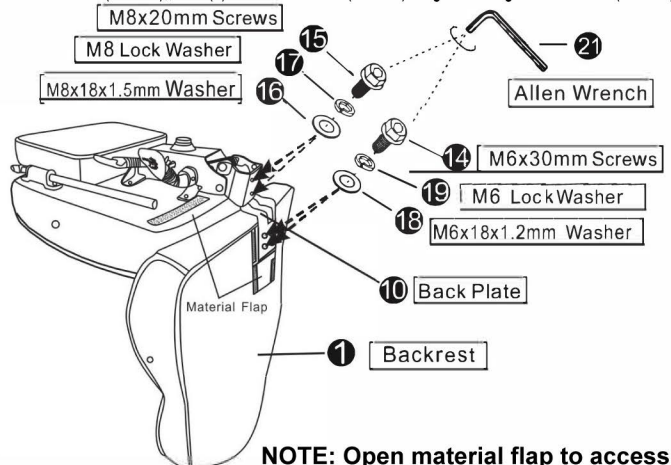

NOTE: Open material flap to access screw holes on backrest.

STEP5


STEP 5: Place the Control Unit onto the Gas Lift and press down to seat.

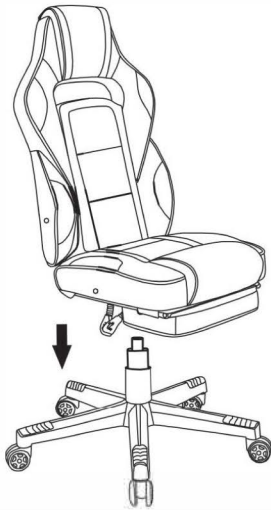

STEP6


STEP 6: Attach the lower Armrests (Part 3) to the Seat using (2) M8x30mm Screws (Part 13). Tighten loosely with Allen Wrench (Part 21).

NOTE: DO NOT TIGHTEN SCREWS COMPLETELY

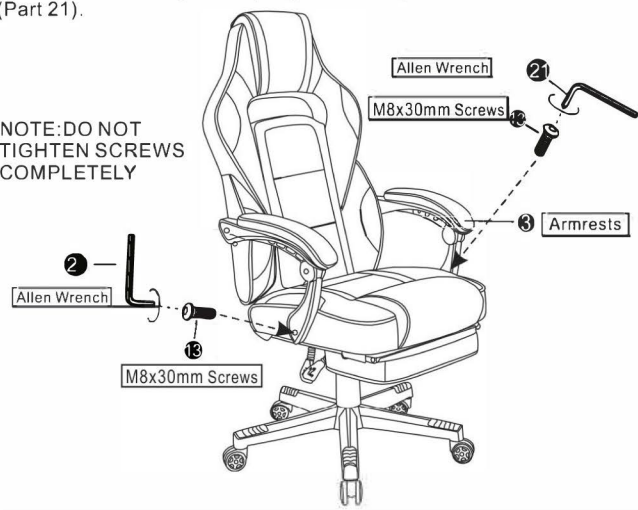

STEP7

STEP 7: Attach Backrest (Part 1) to Armrests using (2) M8x30mm Screws (Part 13). Completely tighten all screws.

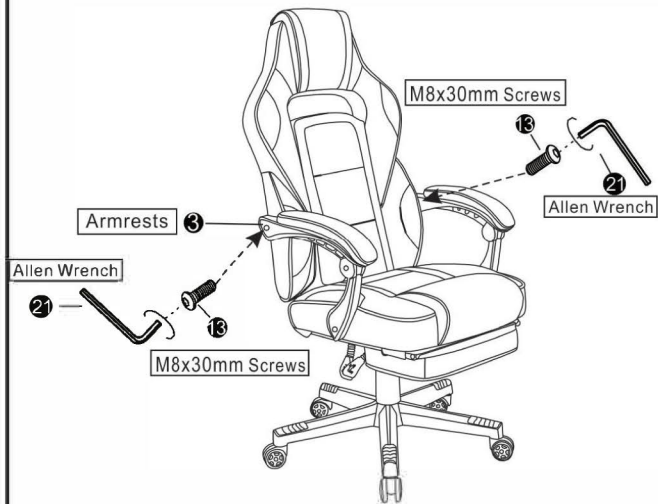

STEP8

STEP 8: Cover Screws with (4) Screw Caps (Part 20)



STEP9

STEP 9: Attach Lumbar Support (Part 11)



STEP10



Thank you for your purchase!



Ergonomic Gaming Chair with Reclining Back & Arms and Slide-Out Footrest

ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.
