



## CADEN PLUG-IN TOWEL WARMER

### INSTALLATION INSTRUCTIONS

Before you begin, read the installation instructions below. Observe all local building and safety codes.

This electric towel warmer is intended for drying towels in an indoor residential environment. Other forms of use or changes to the product are deemed to be contrary to the intended use and may result in risks such as the danger of death, injury and damage. Signature Hardware does not accept any liability for injury or damage resulting from use of this product contrary to its intended use. This product is not intended to be used for commercial purposes.

Unpack and inspect the product for any shipping damages and ensure that none of the required pieces are missing. If you find damages, do not install. Contact Customer Service at 1.866.855.2284. If you need assistance or have questions while installing your towel warmer, contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Hardwired towel warmers should be installed by a licensed electrician. Signature Hardware accepts no liability for any damage to the towel warmer or wall, or for personal injury during installation.

#### TOOLS AND MATERIALS:

Safety glasses	Tape Measure	Level	Allen Wrench (provided)
Drill	Screwdriver	Pencil	

#### WALL MOUNT INSTALLATION

1. Prior to installing the towel warmer, a single-gang switch box should be installed in the wall. The electrical plate will cover this switch box.
2. Attach the wall supports to the towel warmer.
3. Using a level and tape measure, determine and mark the installation location of the wall supports. Drill mounting holes and install wall anchors in these locations.
4. Secure the mounting brackets onto the wall using the provided mounting screws.
5. Hang and adjust the towel warmer onto the mounting brackets. Ensure the towel warmer is firmly and safely fixed.

#### OPERATION AND MAINTENANCE

The red light indicates the towel warmer is in the on position. Always turn the power off when the towel warmer is not in use.

**Note:** Fabrics that contain soap or detergent residue may show what appears to be scorch marks. These marks are simply the discoloration of the residue.