RIDGEWAY PULL-DOWN TOUCHLESS KITCHEN FAUCET WITH DECK PLATE

SKU: 951733-S

Code: SH482241, SH482397, SH482398, SH482399



FEATURES

Material: Metal construction for strength and durability

Installation Type: Single-Hole Connection Type: Compression

Flow Rate: 1.75 gpm (6.6 L/min) @ 60 psi

Spray Type: Stream

Cartridge Type: Ceramic Disc

 
Swivel Spout: Yes

NSF/ANSI 372, NSF/ANSI 61, NSF/ANSI/CAN 61, NSF/ANSI/CAN 61-9:Q≤1, LISTED ID: N/A, SHXCRD100E*



ADDITIONAL FEATURES


- The sensor is activated when motion is detected 2-3/8" in front of the spout.
- A manual override option exists for those who wish to turn off sensor technologies.
- Four AA batteries are included for your convenience.
- Sprayer Button Functions: Stream and spray.
- Spray activation type: Button.
- Included deck plate can be used to cover unused faucet holes.



RIDGEWAY PULL-DOWN TOUCHLESS KITCHEN FAUCET WITH DECK PLATE

SKU: 951733-S

Code: SH482241, SH482397, SH482398, SH482399

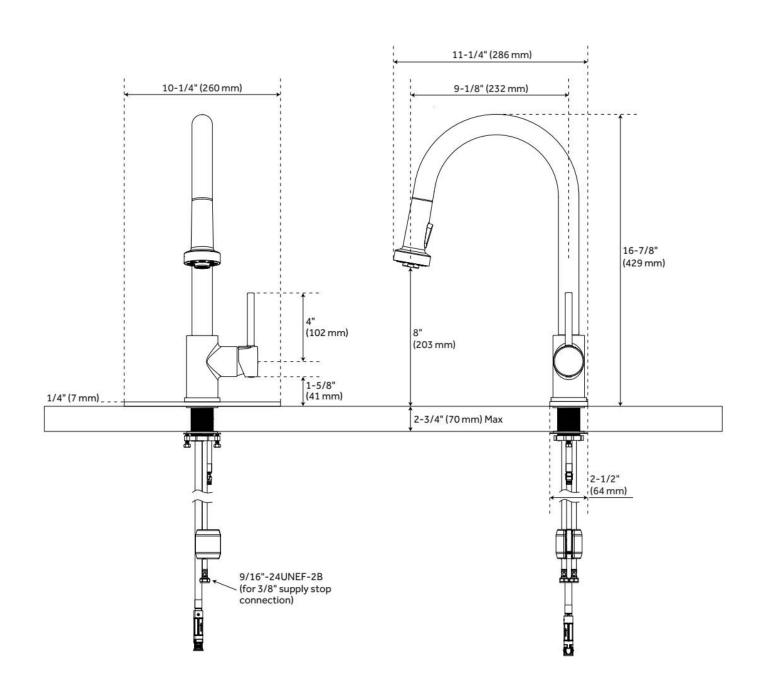

REVISED 5/21/2024