

SPEAKMAN®

AL2-C1D2

Installation, Operation & Maintenance Instructions

ALARM SYSTEM

DESCRIPTION

Emergency equipment alarm with electric horn and rotating light activated by a vapor proof flow switch. Alarm unit meets indoor / outdoor hazardous location requirements for Class 1, Division 2 Groups C, D electrical classification.

SPECIFICATIONS

ACTIVATOR: ¾" Vapor Proof Flow Switch

HORN: 100dB @10 Ft.

LIGHT: 25 Watt Incandescent Bulb

SHIPPING WEIGHT: 21 lb.

INLET: 1 NPT Female

OUTLET: 1-1/4 NPT Female

ELECTRICAL DATA

ELECTRICAL SUPPLY: 120 VAC, 60 Cycle, Single Phase.

ELECTRICAL RATING: 5.5 Amps @ 120 VAC.

COMPLIANCE: Unit rated for *NEMA 4* Indoor/Outdoor *Hazardous Locations (Cl. 1, Div. 2, Groups C,D)*.

*Power supply to be in compliance with (N.E.C.) National Electric Code.

OPTIONS:

DPDT	Double Pole, Double Throw Flow Switch for Remote Locations
RED DOME	
CLEAR DOME	
BLUE DOME	
GREEN DOME	

INSTALLATION

To avoid electric shock make sure power supply is shut off before doing any electrical maintenance to this unit. Power supply requirement is 120 VAC, 60 cycle, single phase. Ground-fault protection should be GFPD with a nominal 30 milliampere trip level to prevent nuisance tripping. Minimum 15 AMP breaker is required. Make sure power supply and installation is in compliance with all local codes and the **National Electric Code** (N.E.C.).

OPERATION

Alarm sounds and lights flashes automatically when emergency equipment is activated. This continues until the emergency equipment is deactivated.

TESTING PROGRAM

The American National Standards Institute (ANSI) states that all safety emergency equipment shall be activated on a weekly basis to flush the line and verify proper operation. Speakman Company furnishes a testing record tag (91-0635) with each unit. On this tag the date of inspection and the inspector's initials should be noted.


SPEAKMAN®

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747
03/01/18 www.speakman.com 92-AL2-C1D2-01

MAINTENANCE

To avoid electric shock make sure power supply is shut off before doing any electrical maintenance to this unit. Should you need to replace/repair any part on this unit, please reference the parts list below for correct part number. Be sure water supply is shut off if flow switch is being repaired.

ROUGH-IN

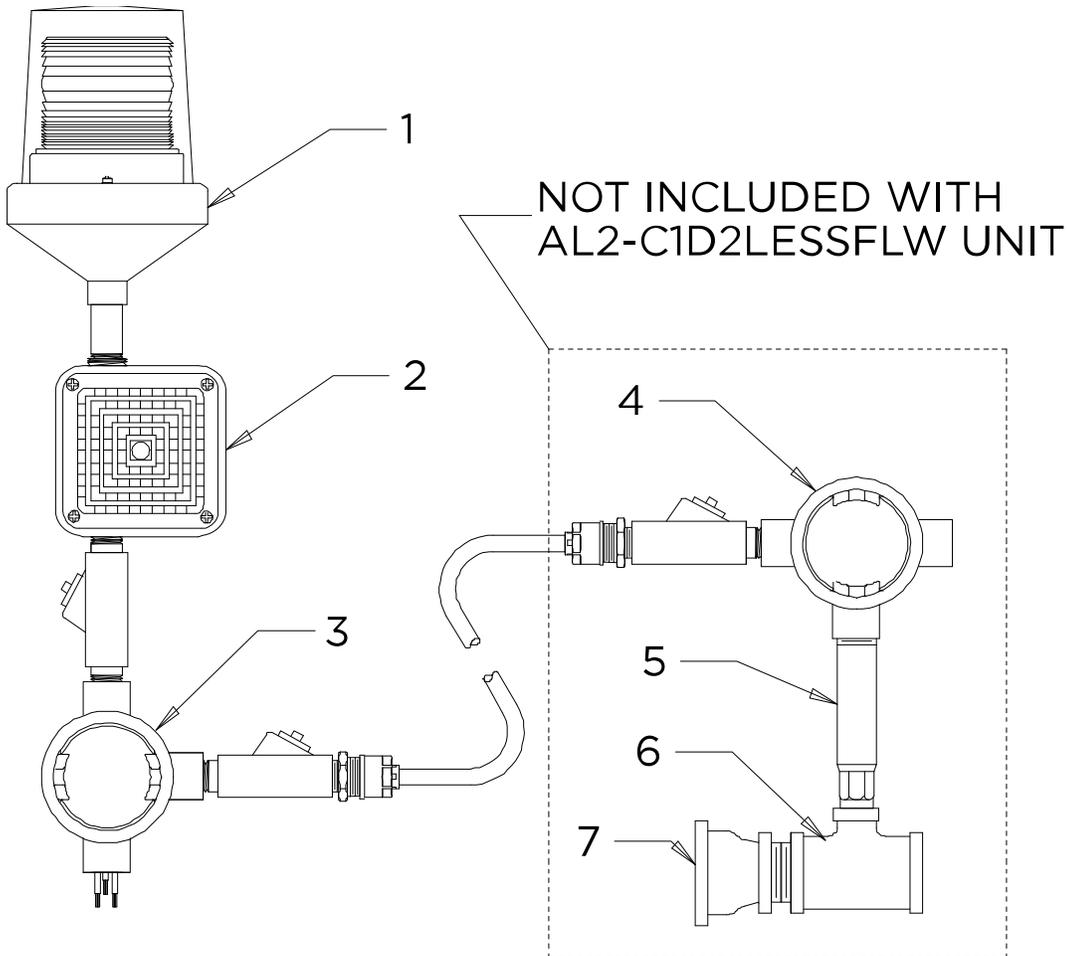

REPLACEMENT/REPAIR PARTS

ITEM	PART/GROUP #	DESCRIPTION
1	76-0206	Visual Flashing Light
2	76-0207	Audible Horn
3	76-0208	(3) Outlet 3/4" Junction Box
4	76-0173	(2) Outlet 3/4" Junction Box
5	76-7355	SPDT Flow Switch
6	24-0250-GAL	1 X 1 X 1/2 Galv. Tee
7	05-1835-GAL	1-1/4 X 1 Bell Reducer

WARNING: Use only genuine Speakman parts when repairing or replacing components. To order parts call 1-800-537-2107.

SPEAKMAN®