

SPEAKMAN®

SE-565

Installation, Operation & Maintenance Instructions

EYESAVER® EYEWASH

DESCRIPTION

Deck mounted emergency eyewash. Supplied with stainless steel bowl, stay-open full flow ball valve; activated by stainless steel trigger bar; adjustable volume regulator, aerated spray outlets with individual adjustments for maximum performance, and mounted on counter tops up to 2" thick.

SPECIFICATIONS

BOWL: 300 SERIES STAINLESS STEEL
SPRAY HEADS: (2) BRASS, CHROME-PLATED, AERATED
VALVE: 1/2" NPT FEMALE BRASS, CHROME-PLATED
ACTIVATOR: STAINLESS STEEL TRIGGER BAR
INLET: 1/2" NPT FEMALE
SHIPPING WEIGHT: 7.1 LBS
EMERGENCY SIGN: 7-7/8" X 7-7/8" PLASTIC WALL SIGN

OPTIONS:

PT	P-Trap
ILS	In-Line Strainer
FPV	Anti-Freeze Protection Valve
SPV	Anti-Scald Protection Valve

SSBV2	1/2" Stainless Steel Valve
HS	SE-920 Hand Held Drench Hose
HFO	Hand/Foot Operation

INSTALLATION

NOTE: This unit should be connected to an uninterrupted source of potable water, with a minimum flowing pressure of 30 PSI and a maximum static pressure of 125 PSI.

Use cutting/drilling instruction template (supplied) to cut and drill holes in desired location on countertop. Once bowl is mounted securely to countertop using mounting hardware supplied, complete assembly of ball valve and push handle. Review drawing (as shown on other side) to assure proper installation. Be sure to apply a bead of waterproof caulk along edge of bowl and countertop to prevent water draining under countertop. Connect a water supply to the unit (use pipe sealant on all joints) that is a 1/2" minimum uninterrupted source of potable water. Failure to use potable water can result in emergency units producing impure or contaminated water causing possible further injury. The drain tailpiece or waste should be connected to an adequate drain in compliance with local plumbing codes. This unit is supplied with a volume control that can control the amount of water delivered, even at higher pressures. This should be set after unit is completely installed so that streams from spray outlets converge in the middle of the eyewash bowl.

OPERATION

The eyewash is activated by pushing the trigger bar back 90°. Once the unit is activated, water will discharge from the spray outlets until the trigger bar is manually pulled back to the off position.

TESTING PROGRAM

The American National Standards Institute (ANSI) states that all safety emergency equipment shall be activated on a weekly basis to flush the line and verify proper operation. Speakman Company furnishes a testing record tag (91-0635) with each unit. On this tag the date of inspection and the inspectors initials should be noted.


SPEAKMAN®

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747
11/03/17 www.speakman.com 92-SE-565-01

MAINTENANCE

The valve and the eyewash are the only portions of the unit that may require maintenance. Should you need parts to repair this unit, please reference the parts listing below for correct part numbers. Reference additional technical sheet (supplied) for information on the SE-505 eyewash. Before any maintenance is done be sure to shut the water supply off.

ROUGH-IN

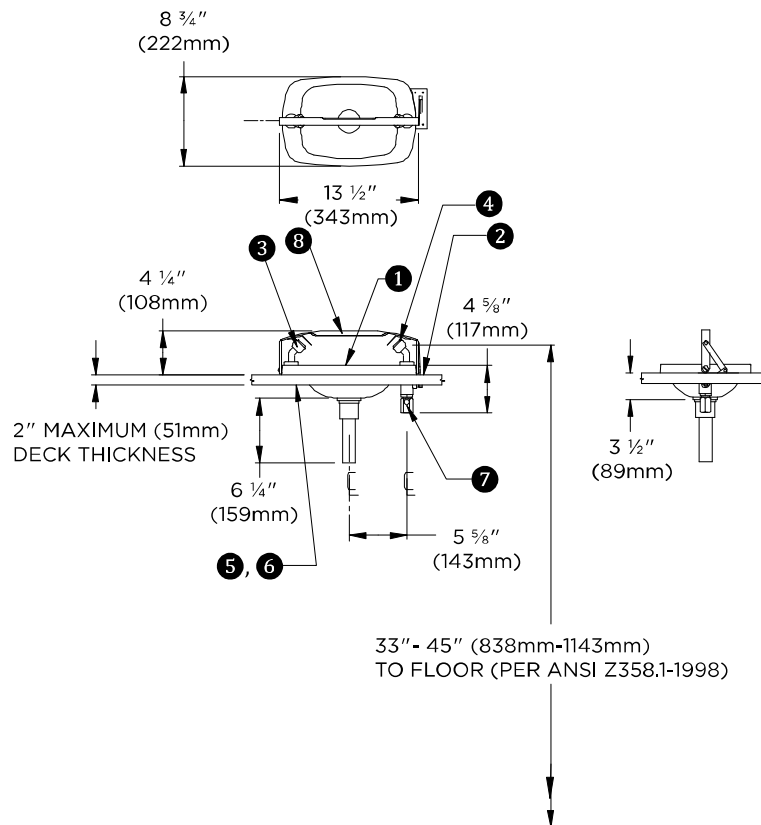

Note: All units meet existing ANSI Z358.1 Standards and OSHA Rules. Product improvements may cause specification and dimensional changes without notice.

FLOW DATA

EYEWASH:

FLOW PRESSURE PSI (BAR)	30 (2.07)
FLOW RATE GPM (LPM)	3 (11)

REPLACEMENT/REPAIR PARTS

ITEM	PART/GROUP #	DESCRIPTION
1	SE-505	Eyewash
2	73-0079-MO	Cover Plate
3	RPG42-0087-PLAS	Outlet Assemblies (2)
4	RPG05-1177	Aerators (6)
5	32-0171	1/4" #20 2-1/2" Lg. Brass Thread Screw
6	45-0173	Brass Washer
7	RPG20-1720-RCP	Volume Control
8	RPG20-1962	Panic Bar & Ball Valve Assembly

WARNING: Use only genuine Speakman parts when repairing or replacing components. To order parts call 1-800-537-2107.

SPEAKMAN®

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747
11/03/17 www.speakman.com 92-SE-565-01