


Instructions for Models:

SB-1811
SB-1811-E

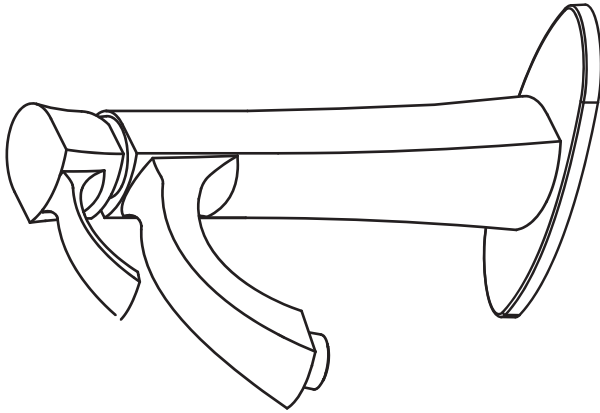

Need Help?

For additional assistance or service call:

SPEAKMAN Company
400 Anchor Mill Road
New Castle, DE 19720

PHONE: 800-537-2107
EMAIL: customerservice@speakman.com
WEB: www.speakman.com

 
92-SB-1811-R2

What You Need To Know:

Tools:

Required:

- * Adjustable Wrench
- * Groove Joint Pliers
- * Phillips Screwdriver



- * Teflon Tape




Helpful:

- * Supply Lines
- * Basin Wrench
- * Pipe Wrench



- * Hacksaw
- * Tubing Cutter
- * Utility Knife

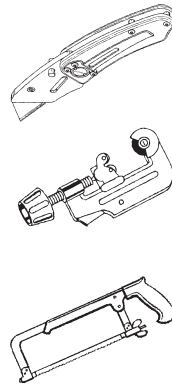

- * Eye Protection



Important Notes:

Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur. This faucet has an operating range of 20-80 psi.

Safety Tips:


Cover your drain to prevent loss of parts. Be sure to wear eye protection while cutting pipe.

Maintenance:

Your new Lavatory Faucet is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.


1

Shut off water supplies. Remove old faucet. Clean sink surface in preparation for installation of new faucet. Place Faucet Body (1), Slip Ring (2), and optional Deck Plate (3), as well as optional Putty Plate (4) in order shown below.

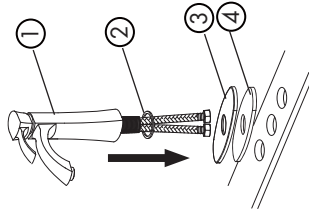


2

Slide Rubber Washer (1), and Metal Washer (2) onto threaded shank of faucet. Thread Mounting Nut (3) onto faucet shank until hand tight. Use phillips screwdriver to tighten Mounting Screws (4), securing the faucet to the sink.

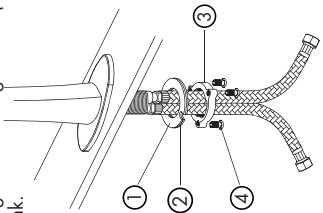


3

Connect Hose with red stripe (1), to HOT water supply. Connect Hose with blue stripe (2), to the COLD water supply. Use adjustable wrench to tighten connections. Take care to not overtighten. Note: Angle valves shown are not included.

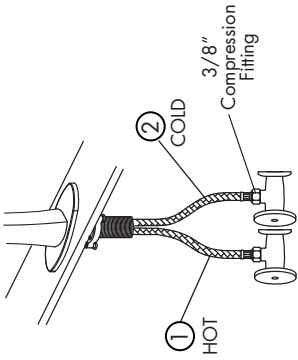


4

Insert Drain Body (1) into drain hole of sink from above. From underneath install Rubber Gasket (2), Red Fiber Washer (3), and Lock Nut (4) in the order shown below. Secure Lock Nut with Groove Joint Pliers. Take care to not overtighten.

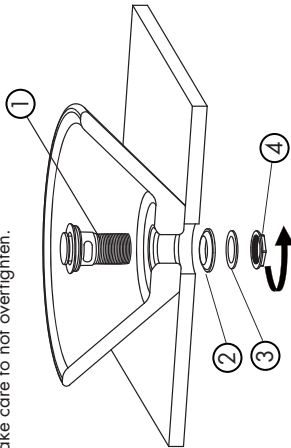


5

Install Rubber Washer (2) between Lower Drain Pipe (3) and Drain Body (1). Thread Lower Drain Pipe (3) onto Drain Body (1).

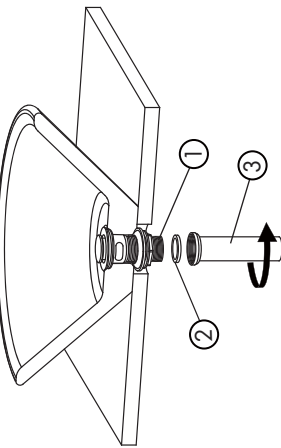

6

IMPORTANT:
After installation is completed, remove aerator. Turn on water supply and allow both hot and cold water to run for at least one minute each to remove the debris. While water is running, check for leaks. Replace aerator.

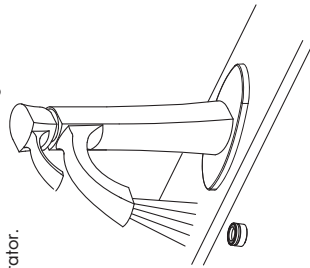

- 1 RPG05-0914
- 2 RPG05-0915 (1.5GPM)
- 3 RPG45-0058
- 4 RPG63-0090
- 5 RPG04-0412 (-BN)
- 7 RPG05-40126 (1.2GPM)

