



UPRIGHT FREEZER/REFRIGERATOR

Models:
UF15W
UF18W
UF22W
R221FFPL

User Manual

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS.

Write Serial Number (on lower left corner of inside cabinet) here:

Serial No.: _____

Felix Storch, Inc.
An ISO 9001:2015 registered company
770 Garrison Avenue
Bronx, NY 10474
www.summitappliance.com

TABLE OF CONTENTS

<i>Appliance Safety</i>	3
<i>Important Safeguards</i>	3-4
<i>Location of Parts</i>	6
<i>Installation Instructions</i>	7-8
<i>Before Using your Appliance</i>	7
<i>Installing Your Appliance in a Garage</i>	7
<i>Leveling your Appliance</i>	7
<i>Moving your Appliance</i>	7
<i>Electrical Connection</i>	8
<i>Extension Cord</i>	8
<i>Operating your Appliance</i>	9
<i>Control Panel</i>	9
<i>Maintenance and Care</i>	10
<i>Cleaning your Appliance</i>	10
<i>Defrosting</i>	10
<i>Power Interruptions</i>	10
<i>Troubleshooting</i>	10-11
<i>Disposal</i>	11
<i>Notes</i>	12
<i>Limited Warranty</i>	13

APPLIANCE SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the Safety Alert Symbol. The symbol alerts you to potential hazards that can kill or injure you and others. All safety messages will follow the Safety Alert Symbol and either the word DANGER or WARNING.



DANGER means that failure to heed this safety statement may result in severe personal injury or death.



WARNING means that failure to heed this safety statement may result in extensive product damage, serious personal injury, or death.

All safety messages will alert you about the potential hazard, tell you how to reduce the chance of injury, and let you know what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS



Before the appliance is used, it must be properly positioned and installed as described in this manual, so read the manual carefully. To reduce the risk of fire, electrical shock or injury when using the appliance, follow basic precautions, including the following:



- Plug into a grounded 3-prong outlet, do not remove grounding prong, do not use an adapter, and do not use an extension cord.
- Replace all panels before operating.
- It is recommended that a separate circuit serving only your appliance be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean appliance parts with flammable fluids. These fumes can create a fire hazard or explosion. And do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- This appliance is CFC- and HFC-free and contains small quantities of Isobutene (R600a) which is environmentally friendly, but flammable. It does not damage the ozone layer, nor does it increase the greenhouse effect. Care must be taken during transportation and setting up of the appliance that no parts of the cooling system are damaged. Leaking coolant can ignite and may damage the eyes.

- In the event of any damage:
 - Avoid open flames and anything that creates a spark,
 - Disconnect from the power supply
 - Air the room in which the appliance is located for several minutes and
 - Contact the Service Department for advice.
- The more coolant there is in an appliance, the larger the room it should be installed in. In the event of a leakage, if the appliance is in a small room, there is the danger of combustible gases building up. For every ounce of coolant, at least 325 cubic feet of room space is required. The amount of coolant in the appliance is stated on the data plate inside the appliance. It is hazardous for anyone other than an Authorized Service Person to carry out servicing or repairs to this appliance.
- Take serious care when handling, moving and using the appliance to avoid either damaging the refrigerant tubing or increasing the risk of a leak.
- Replacing component parts and servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

WARNING

FOLLOW WARNING CALLOUTS BELOW ONLY WHEN APPLICABLE TO YOUR MODEL

- Use two or more people to move and install appliance. Failure to do so can result in back or other injury.
- To ensure proper ventilation for your appliance, the front of the unit must be completely unobstructed.
- Choose a well-ventilated area with temperatures above 44°F (7°C) and below 90°F (32°C).
 - This unit can be used in a garage as a freezer. (Recommended ambient temperature range: 0°F/-17.7°C to 110°F/43.3°C) or as a refrigerator (temperature must be above 38°F (3.3°C)).
- The appliance should not be located next to ovens, grills, or other sources of high heat.
- The appliance must be installed with all electrical, water, and drain connections in accordance with state and local codes. A standard electrical supply (115 V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances, is required.
- Do not kink or pinch the power supply cord of the appliance.
- The size of the fuse (or circuit breaker) should be 15 amperes.
- It is important that the appliance be leveled in order to work properly. You may need to make several adjustments to level it.
- All installations must be in accordance with local plumbing code requirements.
- Make certain that the pipes are not pinched, kinked, or damaged during installation.
- Check for leaks after connection.
- Never allow children to operate, play with or crawl inside the appliance.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Use this appliance only for its intended purpose as described in this *Instruction Manual*.
- Keep fingers out of the “pinch point” areas. Clearances between the door and cabinet are necessarily small. Be careful closing the door when children are in the area.

WARNING

Risk of child entrapment!

Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous, even if they will “just sit for a few days”.

Before discarding your old freezer/refrigerator:

Take off the doors

Leave the shelves in place so that children may not easily climb inside.

WARNING

 
- Do not store explosive substances such as aerosol can with a flammable propellant in this appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.

WARNING

Electric Shock Hazard!

- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the food storage compartments the appliance, unless they are of the type recommended by the manufacturer.
- **WARNING–DANGER:** Never allow children to play with, operate, or crawl inside the freezer. Risk of child entrapment. Before you throw away your old freezer:
 - 1) Take off the doors
 - 2) Leave the shelves in place so that children may not easily climb inside
- This freezer can be used by children aged eight years and older and persons with reduced physical or mental capabilities or lack of experience and knowledge if they are given supervision or instruction concerning the use of the freezer in a safe way and understand the hazards involved. Children should not play with the freezer. Cleaning and maintenance should not be performed by children without supervision.
- Do not store or use gasoline or any flammable liquids inside or in the vicinity of this freezer.
- Do not use extension cords or ungrounded (two-prong) adapters with this freezer. If the power cord is too short, have a qualified electrician install an outlet near the freezer. The use of an extension cord can negatively affect the freezer's performance.
- Follow local regulations regarding disposal of the freezer due to flammable refrigerant and gas. All refrigeration products contain refrigerants, which under the guidelines of federal law must be removed before disposal. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.

- SAVE THESE INSTRUCTIONS - LOCATION OF PARTS

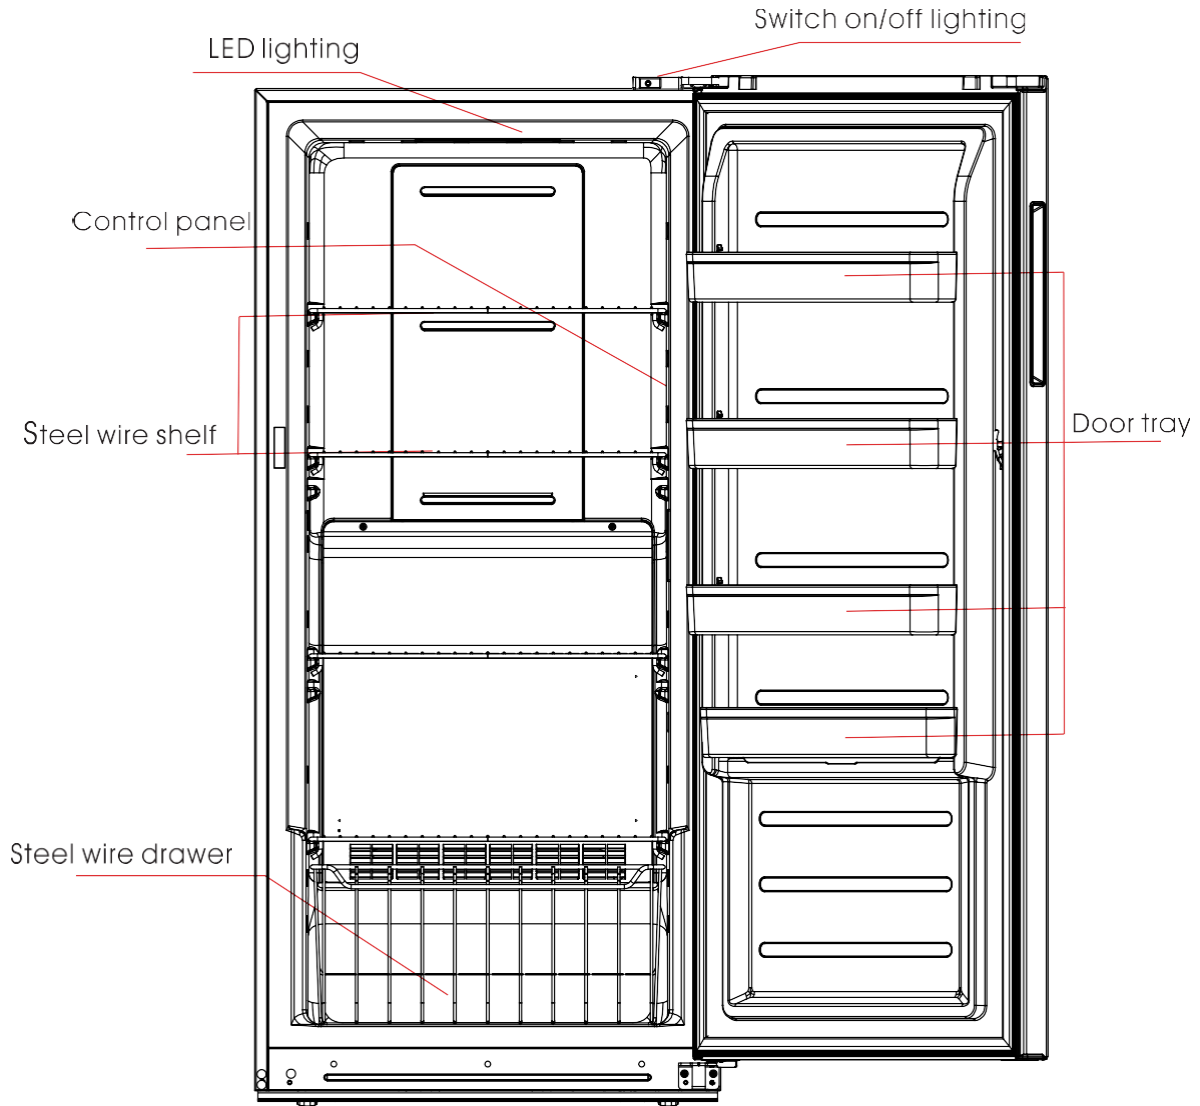

(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)

INSTALLATION INSTRUCTIONS

- Remove all packing materials, including the bottom cushions, foam pads, and tape inside the freezer/refrigerator. Tear off all protective film on the doors and on the freezer/refrigerator body.
- Place the freezer/refrigerator in a well-ventilated place, on flat sturdy ground.
- Avoid locating the freezer/refrigerator in moist or humid areas. Excess moisture in the air may cause frost to form quickly on the evaporator and cabinet, requiring frequent defrosting. Locate the freezer/refrigerator away from direct sunlight and other heat sources. Direct sunlight may affect the performance of the appliance.
- The freezer/refrigerator should be placed against the wall with at least 4" (10cm) of free space to allow for heat dissipation. There should also be at least 11" (30cm) of space above the appliance, as well.

Installing Your Appliance in a Garage

- As a freezer, this unit can be installed in a well-ventilated area inside a garage where the ambient temperature is between 0°F (-17.7°C) and 110°F (43.3°C).
- If you are using this unit as a refrigerator in a garage setting, the ambient temperature must be above 38°F (3.3°C)

 
Before Using your Appliance

1. Keep the freezer/refrigerator upright for half an hour before connecting it to the power supply.
2. Connect the appliance to a power supply, and let the unit run for 2-3 hours.

NOTE: If the ambient temperature of the room is higher than normal (starting the machine in the summertime, for example), it may take up to 4 hours to start using the appliance.

Leveling the Appliance

Use the leveling feet to ensure the appliance does not wobble or tip.

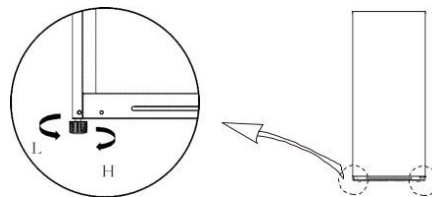

- Turn the feet clockwise to raise the unit and turn the feet counterclockwise to lower the unit.

CAUTION: Do not place any additional appliances, such as a microwave, on top of the unit unless expressly recommended by the manufacturer.

Moving the Appliance

Remove all objects from the appliance before moving. Affix the glass partitions, vegetable holder, and freezing chamber drawers with tape. Tighten the leveling feet, close the doors, and affix them with tape. Keep the appliance inclined by more than 45°. DO NOT lay the appliance on its side or upside down.

Electrical Connection



WARNING

Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by a qualified electrician or an authorized service center.

This appliance should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three-prong wall outlets to minimize the possibility of electrical shock.

Do not under any circumstances cut or remove the third (ground) prong from the power cord supplied. For personal safety, this appliance must be properly grounded. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized service center.

This appliance requires a standard 115/120 Volt AC ~60Hz three-prong grounded electrical outlet. Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded. When a standard 2-prong wall outlet is encountered, it is your responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.

 
The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating label on the appliance. This provides the best performance and also prevents overloading house wiring circuits that could cause a fire hazard from overheating. Never unplug the appliance by pulling on the power cord. Always grip the plug firmly and pull straight out from the receptacle. Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.

Extension cord

Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord is 115 volts and at least 10 amperes.

OPERATING YOUR APPLIANCE

Control Panel

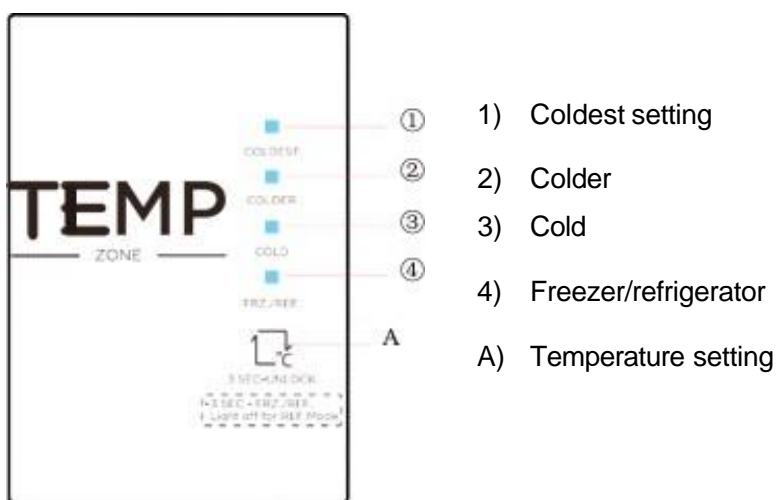

- Once powered on, the display screen will fully display for three seconds, and then the normal operation functions will display.

Lock/Unlock

- When the temperature control panel is unused for 15 seconds, the panel will automatically lock.
- To unlock, press the Temperature Setting key (A) for three seconds. All of the LED lights will blink for two seconds when the panel is unlocked.

Temperature Setting

- Press the Temperature Setting key (A) each time to change the temperature setting. The settings will cycle 1 through 3, in order.
- Do not press any key for 15 seconds to program the unit to the desired the temperature
- Press the Temperature Setting key (A) for three seconds, the Freezer/Refrigerator (4) light will illuminate, and the appliance will run as a freezer.
- Press the Temperature Setting key (A) for another three seconds, and the Freezer/Refrigerator (4) light will turn off, and the appliance will run as a refrigerator.

Indicator Lights

In the case of a program failure, the following LED indicator lights will blink:

Error Code	Error Description
Indicator light 3 and 4	Refrigerator sensor circuit failure
Indicator light 2 and 4	Freezer defrost sensor
Indicator light 1 and 4	Ambient temperature sensor

MAINTENANCE AND CARE

CAUTION: Be sure to unplug the appliance before defrosting or cleaning to prevent personal injury or appliance malfunction.

 
Cleaning your Appliance

NOTE: It is important to regularly clean your appliance to maintain proper cooling and energy-saving functionality.

- Use a soft towel or sponge dipped in water and a non-corrosive neutral detergent to clean the inside of the freezer/refrigerator.
- Clean the freezer/refrigerator with water and a dry cloth.
- Open the door to let the cabinet dry naturally before reconnecting the appliance to a power source.
- Do not use hard brushes, steel scrubber pads, wire brushes, abrasives (such as toothpaste, organic solvents, boiling water, acid, or alkaline items to clean the freezer/refrigerator, as this may damage the freezer/refrigerator surface and interior.

Cleaning the Door Tray

Remove the door tray before cleaning by squeezing the tray inward, then pushing the tray upward to remove it. Wash the tray and replace the tray in the door.

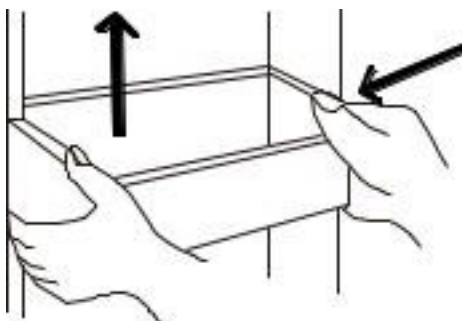

Defrosting

This appliance uses an automatic defroster. Frost formed due to warmer weather, or a higher ambient temperature may be manually removed by first disconnecting the appliance to let defrost, or removing the frost with a dry towel.

Power Interruptions

- In case of an interruption of power, food inside the appliance can be kept for several hours if the door remains closed. DO NOT add any more food to the freezer/refrigerator during this time.
- In the event of a long-term power interruption, unplug and clean the appliance, and leave the doors open to prevent a build-up of odors.

TROUBLESHOOTING

Many issues with your freezer/refrigerator may be able to be solved on your own. See the table below for solutions to many common issues. If an issue cannot be resolved, contact a qualified service professional.

Problem	Possible Solution
The appliance does not operate.	Make sure the appliance is connected to the power supply. Ensure the voltage is not too low. Check the circuit has not been tripped.
There is an odor.	Odorous foods should be tightly wrapped. Make sure no foods have gone bad in the appliance. Clean the inside of the appliance.
The compressor will not stop running.	Long operation of the appliance is normal during the summer/in warmer weather when the ambient temperature is high. Too much food has been added to the appliance at one time. Ensure food has cooled before adding to the appliance. The door is opened too frequently.
The compressor will not start	The compressor will not start if the ambient temperature is below 0°F or above 110°F.
The light does not turn on.	Make sure the appliance is connected to the power supply. Replace the light bulb.
The doors will not close properly.	The appliance is blocked by food packages. The appliance is not properly leveled.
There is a loud noise coming from the appliance.	Check whether the floor is level, and whether the appliance is placed stably.
The door does not seal tightly.	Remove foreign matter from the door seal. Heat the door seal, and then cool it for restoration.
The water pan overflows.	There is too much food in the appliance, or the food stored contains too much water, resulting in heavy defrosting. The doors are not closed properly, resulting in frosting due to the entry of air and increased water due to defrosting.
The appliance housing is hot.	Heat dissipation of the built-in compressor, via the housing, which is normal. The ambient temperature is too high. There is too much food stored in the appliance, or the compressor has shut down, providing for insufficient heat dissipation.
There is condensation on the surface of the appliance.	When the ambient temperature is high, condensation on the outside of the appliance is normal. Wipe the condensate clean with a towel.
There is an abnormal noise coming from the appliance.	The compressor may produce a loud buzzing sound during operation, particularly upon start up or stop. This is normal. Refrigerant flowing inside of the appliance may produce a creaking sound, which is normal.

If your unit shows other symptoms than those described above, or if you have checked all items listed as the cause and the problem still exists, then please call **SUMMIT** Customer Service at **1-800-932-4267** or visit www.summitappliance.com/support.

Disposal

Proper disposal is required for an appliance using flammable refrigerant. Keep the appliance away from any fire source, and have it disposed of by a qualified recovering company, so as to prevent damage to the environment or any other harm.

Proper Disposal



This marking indicated that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

CALIFORNIA CARB/SNAP DISCLOSURE

This product uses eco-friendly hydrocarbon refrigerant and fully complies with California CARB regulations.

However, we are required by California Law to provide the following disclosure statement in every product sold in California.

“This equipment is prohibited from use in California with any refrigerants on the ‘List of Prohibited Substances’ for that specific end-use, in accordance with California Code of Regulations, title 17, section 95374. This disclosure statement has been reviewed and approved by Felix Storch, Inc. and Felix Storch, Inc. attests, under penalty of perjury, that these statements are true and accurate.”

This product does not use any refrigerants on the ‘List of Prohibited Substances’

LIMITED WARRANTY

ONE-YEAR LIMITED WARRANTY

Within the 48 contiguous United States, for one year from the date of purchase, when this appliance is operated and maintained according to instructions attached to or furnished with the product, warrantor will pay for factory-specified parts and repair labor to correct defects in materials or workmanship. Service must be provided by a designated service company. Outside the 48 states, all parts are warranted for one year from manufacturing defects. Plastic parts, shelves and cabinets are warranted to be manufactured to commercially acceptable standards and are not covered from damage during handling or breakage.

5-YEAR COMPRESSOR WARRANTY

1. The compressor is covered for 5 years.
2. Replacement does not include labor.

ITEMS WARRANTOR WILL NOT PAY FOR:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace or repair fuses or to correct wiring or plumbing.
2. Service calls to repair or replace appliance light bulbs or broken shelves. Consumable parts (such as filters) are excluded from warranty coverage.
3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by warrantor.
4. Replacement parts or repair labor costs for units operated outside the United States.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR. WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.



WARNING: This product can expose you to chemicals including Nickel (Metallic) which is known to the State of California to cause cancer.

For more information go to www.P65Warnings.ca.gov

Note: Nickel is a component in all stainless steel and some other metal components.

FELIX STORCH, INC.
770 Garrison Avenue
Bronx, NY10474
Phone: (718) 893-3900
Fax: (844) 478-8799
www.summitappliance.com

SUMMIT

For parts and accessory ordering,
troubleshooting and helpful hints, visit:
www.summitappliance.com/support