INSTALLATION INSTRUCTIONS

For Model 72771-66/72772-66/72773-66

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

HANGING THE FIXTURE (Fig. 1)

- 1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
- 2. Carefully unpack your new fixture and lay out all the parts in a clear area. Take care not to misplace any small parts necessary for installation.
- Thread the 2 mounting screws (B) into the mounting plate (D) spaced the same distance apart as the holes in the fixture back plate (F). (You can adjust the length of the screws if necessary.)
- Attach the mounting plate (D) to the outlet box (A) (not supplied) with mounting screws (C). (Size: #8-32*0.78"L). Note: The side of mounting plate marked "GND" must face out.

CONNECTING THE WIRES (Fig. 2).

5. Connect the electrical wires as shown in Fig.2. making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate (D) using the green screw provided.

COMPLETING THE INSTALLATION (Fig.1)

- 6. Align the fixture back plate (F) to mounting plate (D) and secure with cap nuts (E).
- Raise the glass shade (H) over socket (K). Secure with inserting metal plate (I) and screwing lamp cup (G) over socket (K) to secure.
- 8. Install (1) one medium base bulb up to 100 watts or CFL or LED equivalent (not included) in accordance with the fixture specification.- DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)
- To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside of fixture back plate where it meets the wall leaving a space at bottom to allow moisture a means to escape. (Fig. 3)

Your installation is now complete. Return power to the junction box and test the fixture.



