



## ASSEMBLYINSTRUCTIONS

## STYLE#21321

## Carefully unpack all lamp parts from the carton.

- 1. Take the lamp carefully out of the carton, and place it on a flat surface.
- 2. Be sure the power to the installation point is powered off.
- 3. Adjust cord to desired length for your ceiling height. Cut and remove excess cord.
- 4. Thread Nipple#2 on the bottom of the Rod onto the Rod Base, then secure it with Finial Screw. Hand tighten until sung. Secure the rest eight rods the same way.
- 5. Fasten the Cross bar to the outlet box. Locate the Washer and Nipple #1, then thread them into the center of the Cross Bar.
- 6. Secure Nipple #1 onto the Canopy with Loop#1.
- 7. Thread Loop #2 onto Nipple #2. Hand tighten until sung.
- 8. Connect the Chain and Loop #1 with Quick Link #1, then connect Loop #2 with Quick Link#2.
- 9. Pass supply wire through Loop #2 and Quick Link #2, then wind onto the Chain and thread from the center of the Cross Bar.
- 10. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.
- 11. Connect the wires as shown: A. Connect the House Ground Wire to the Fixture Ground Wire.
  - B. Connect the House White or Ribbed Wire to the Fixture Supply Wire (White or Ribbed Side).

C. Connect

the House Black/Red Wire to the Fixture Supply Wire (Black or Smooth Side).

D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.

- **12.** Adjust each **Wire** to a natural bendingsituation.
- 13. Install correct Bulbs referring to fixture markings and/or labels for maximum wattage. (Bulbs Included)



PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com