MANUFACTURERS OF WALL DECOR, LIGHTING,

UTTERMOST

ASSEMBLY & INSTALLATION INSTRUCTIONS FOR #21530

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

Carefully unpack all lamp parts from the carton.

- 1. Take the parts out of the mounting package.
- 2. Srew (3) the CIRCULAR MOUNTING BRACKET (2) to each end of OUTLET BOX (1).
- 3. Pull the SUPPLY WIRES (6&8) and the SUPPLY GROUND WIRE (5) out from the OUTLET BOX (1). Attach the CIRCULAR MOUNTING BRACKET (2) assembly to the OUTLET BOX (1). (See Fig.1).
- 4. Put the FIXTURE SCREW (12) and HEX NUT (11) into the hole of the CIRCULAR MOUNTING BRACKET (2). Place the CANOPY (16) over the OUTLET BOX (1) and adjust the FIXTURE SCREW (12) and HEX NUT (11) together with the mounting bracket until properly aligned with the CANOPY (16).
- 5. Install the HANGING RODS (14) to the FIXTURE BODY (13). Adjust the length of wire needed for the installation and remove the excess.Determine the number of rods to be assembled in accordance with the hanging height. Pull supply and ground wire through the selected rods. Tighten and connect the top end of the RODS (15)to the canopy.
- 6. Unravel the FIXTURE LEAD WIRE (7 & 9) and FIXTURE GROUND WIRE (4). Connect the power supply wires with the fixture lead wires using WIRE CONNECTORS (10). Loop the FIXTURE GROUND WIRE (4) around the ground screw of the MOUNTING BRACKET (2). Note: Be sure to provide extra 3" length of the GROUND WIRE (4). Connect the remaining FIXTURE GROUND WIRE (4) to the SUPPLY GROUND WIRE (5) using WIRE CONNECTOR (10). Place wiring and connections in the outlet box (1).
- 7. Hang the SAFETY CABLE (17) on the MOUNTING BRACKET (2). Adjust the CANOPY (16) and screw the two DECORATIVE NUTS (18) onto the FIXTURE SCREW (12) with HEX NUT (11) to fix in place (See Fig.1).
- Screw light bulbs into the lamp sockets (19) and make sure they do not exceed the maximum wattage specified on the fixture's wattage rating capacity. MAXIMUM 60W.
- 9. INSTALLATION IS NOW COMPLETED.



PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com