



UTTERMOST

ILLUSTRATION

STYLE NO. : 22198

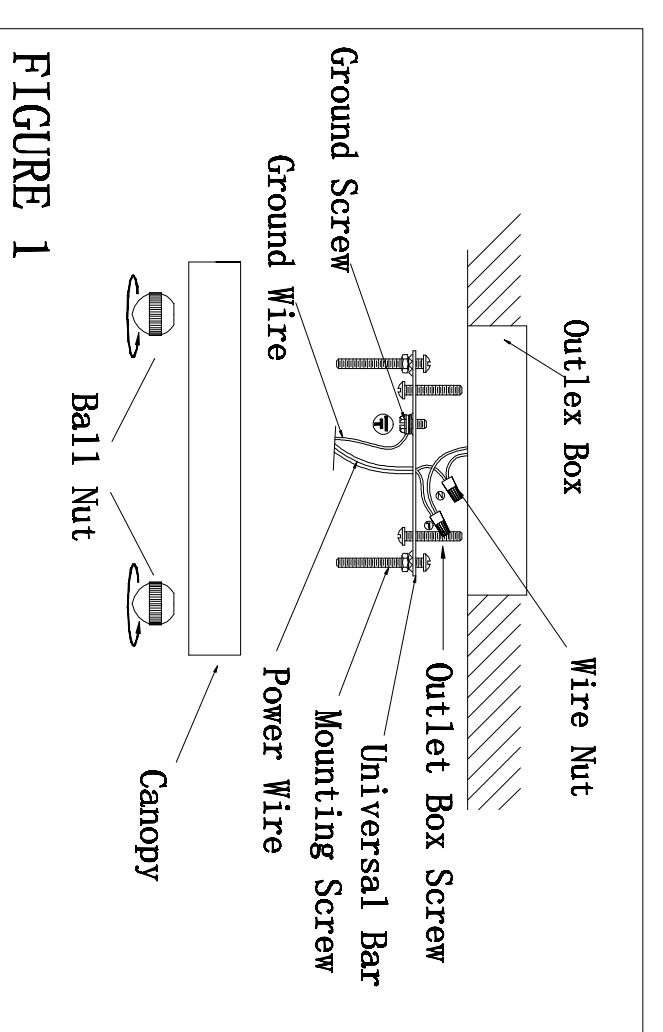 


FIGURE 1

 
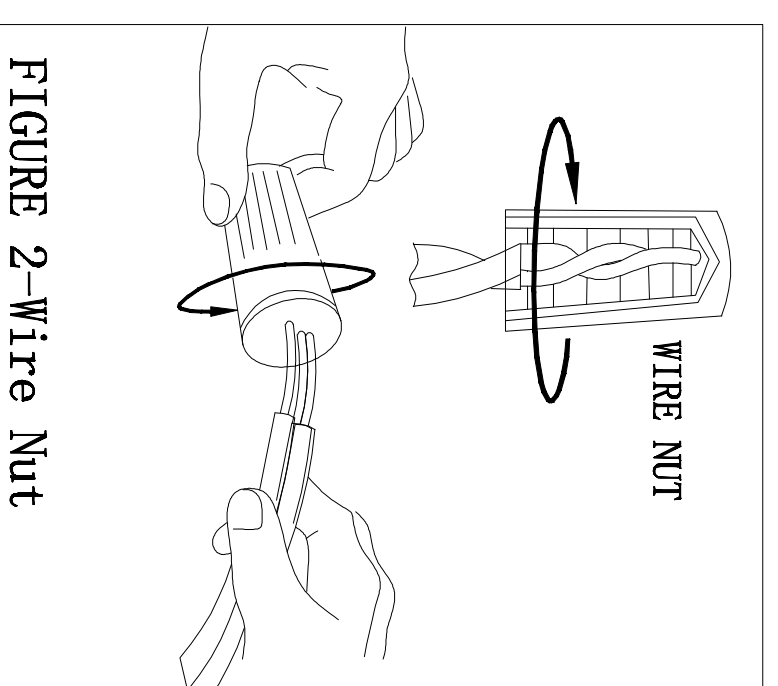 


FIGURE 2-Wire Nut

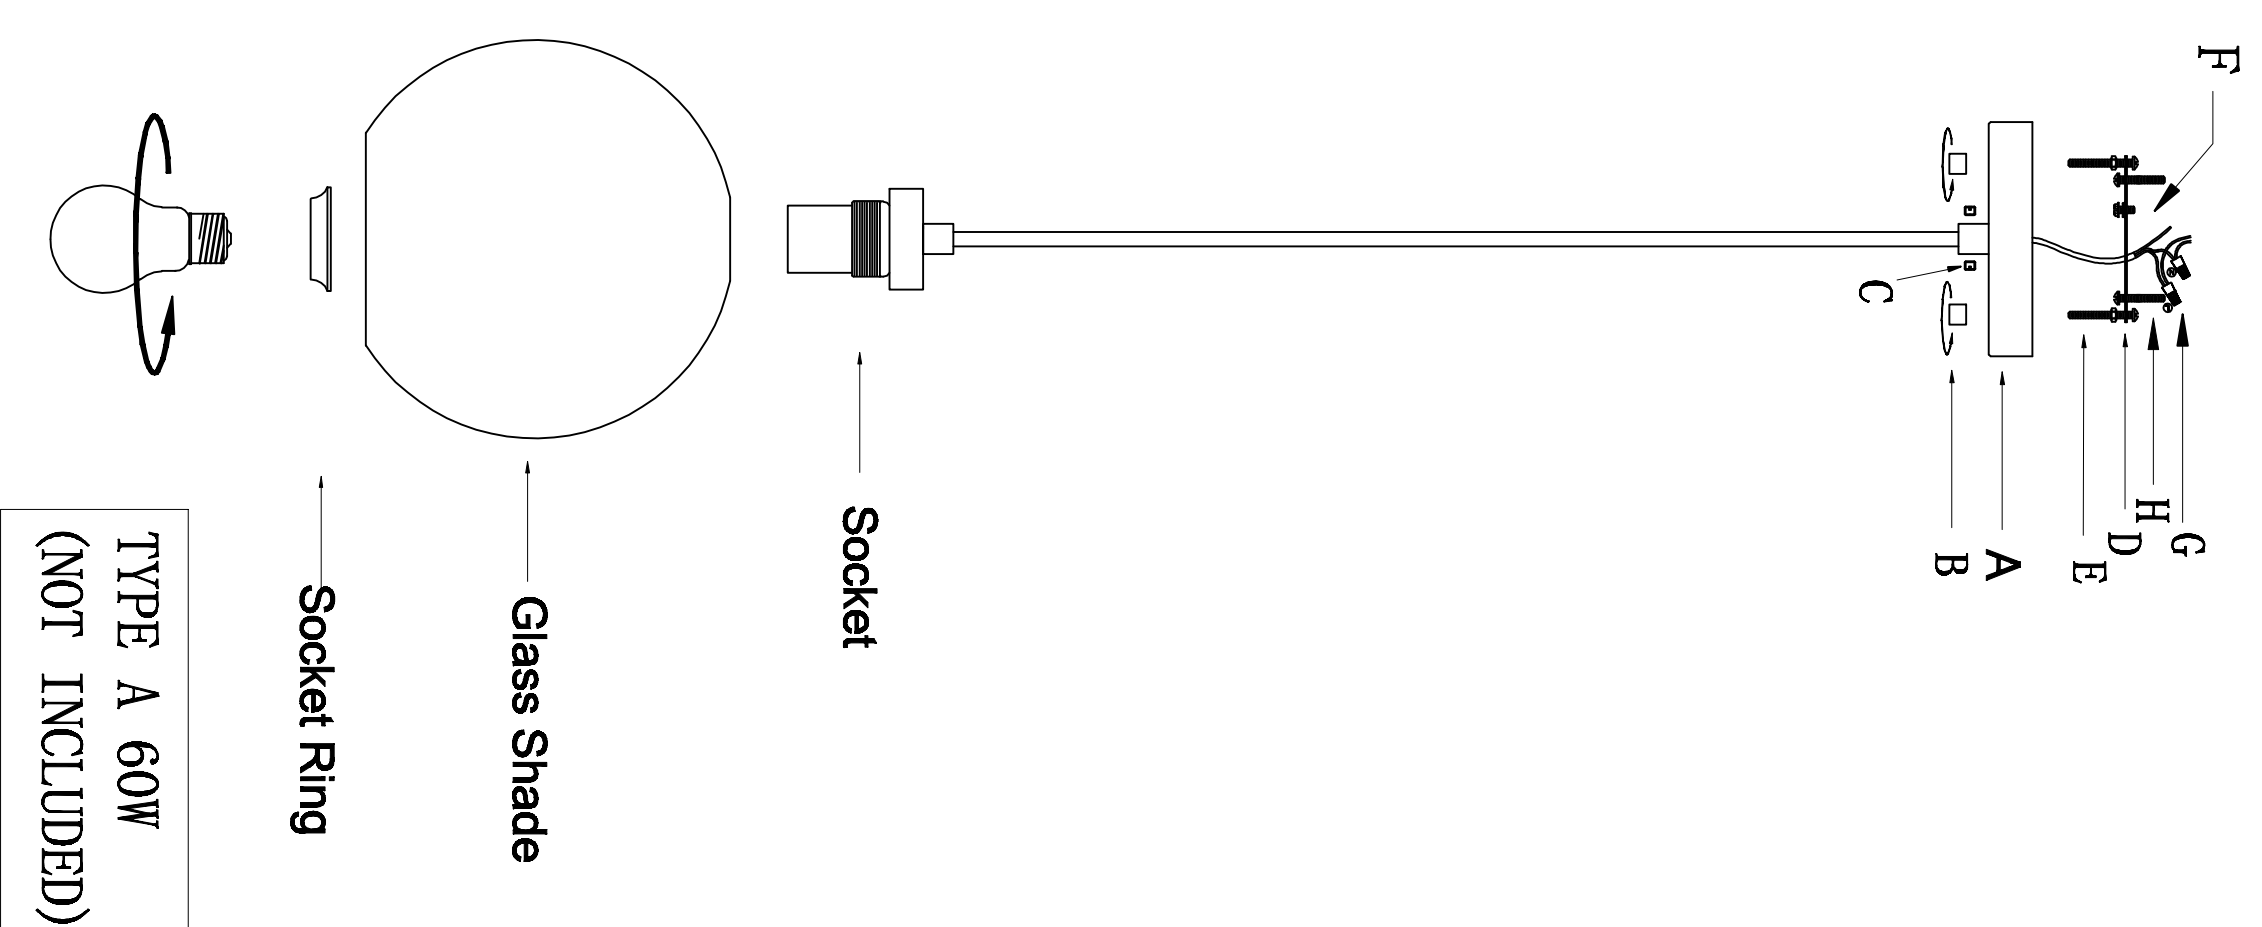

UTTERMOST

STYLE NO. : 22198 Parts and Hardware List

A.	Ceiling Assembly	1PC
B.	Ball Nut	2PCS
C.	plastic screws	2PCS
D.	Universal Bar	1PC
E.	Mounting Screw	2PCS
F.	Green Ground Screw	1PC
G.	Wire Nut	3PCS
H.	Outlet Box Screw	2PCS

Please make sure that you have all the parts indicated before you begin assembling this item.

Please read Wiring Instructions before you begin assembling and installing your Ceiling Lamp.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock.

Assembly Instruction

Carefully unpack all lamp parts from carton. We suggest a licensed electrician for all fixture installations.

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged.
2. Remove the Ball Nuts(B) under the Canopy from the Mounting Screws(E), and take out the Universal Bar(D). Attach the Universal Bar(D) to the Outlet Box by using two Outlet Box Screws(H). (See Figure1)
3. Adjust the length of the wire needed for your installation, remove excess. Install the ground wire in the Universal Bar(D) with the supplied Green Ground Screw(F).
4. Place the null wire, ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box. (Connecting the Wires-See Figure 2)
5. After the wires are connected, tuck them carefully inside the Outlet Box. Attach the Ceiling Assembly(A) to the Mounting Screws(E) and secure with two Ball Nuts(B). (See Figure 1)
6. If you want to adjust the wire height, please loosen the plastic screws (C). Please secure well after adjust the wire.
7. Place the Glass Shade onto the socket and secure by Socket Ring.
8. Install the 1*60 Watt, Type A bulb into the socket of the fixture.

Your installation is complete. Turn electrical power back ON.