

ASSEMBLY AND INSTALLATION INSTRUCTIONS

 
P0077 / P0078

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

**NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.**

Parts:

Parts Number (4840MM For P0077)
Parts Number (4843MM For P0078)

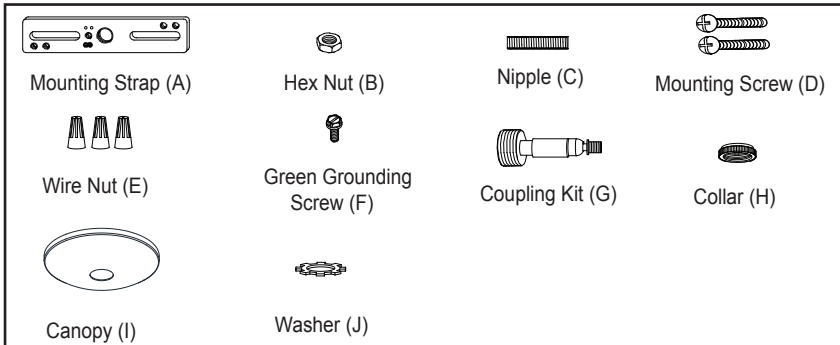

Parts Number (4842RR For P0077)
Parts Number (4845RR For P0078)



12" Rod (K) (X4)

Parts Number (4841RR For P0077)
Parts Number (4844RR For P0078)



 
6" Rod (L) (X1)

Parts Number (4840RR For P0077)
Parts Number (4843RR For P0078)




3" Rod (M) (X1)

Parts Number (9489S For P0077)
Parts Number (9490S For P0078)

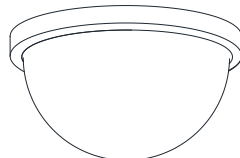

Glass Shade (N) (X1)

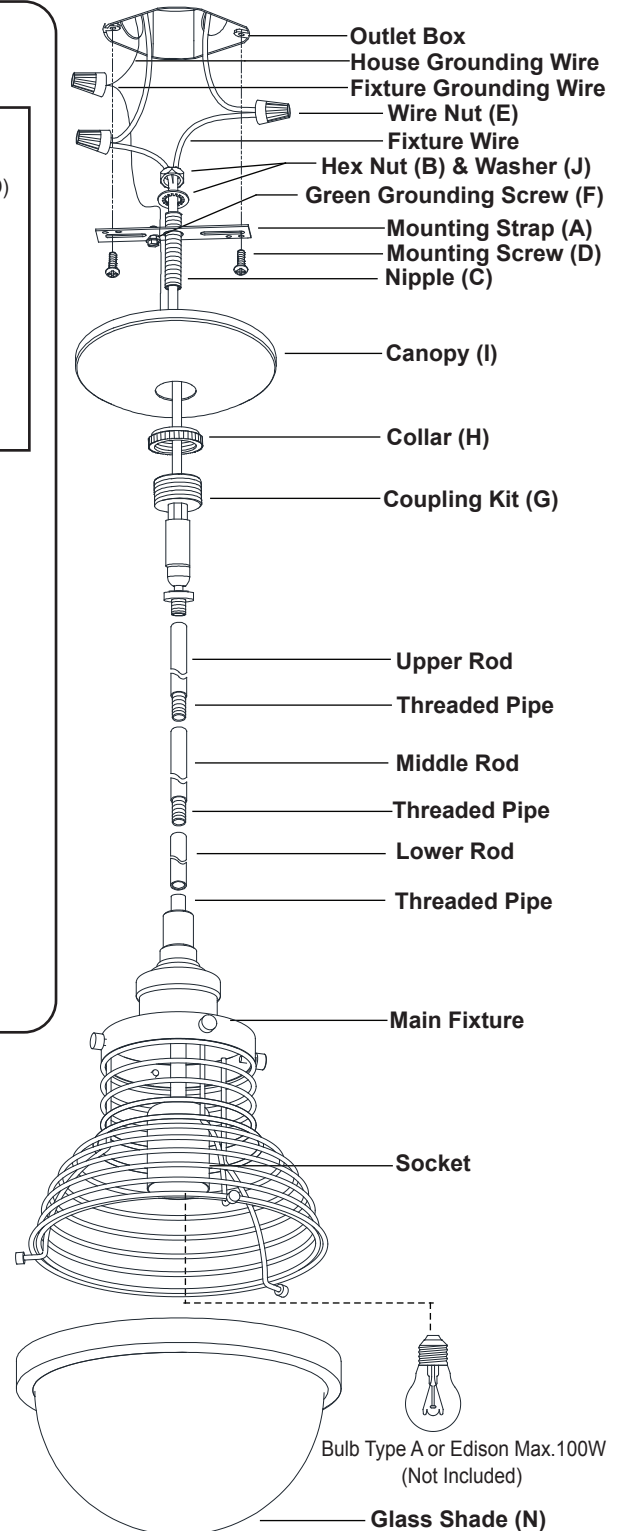 

1. Rod Connections:

- Thread the fixture wire from the main fixture through the lower rod, secure the lower rod onto main fixture using the threaded pipe.
- Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
- Thread the fixture wire through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.

The height can be adjustable to 18-3/4"~72-3/4", by using the rods.



- Thread the fixture wire through the coupling kit, collar, canopy, then secure the rod assembly to the coupling kit.
- Thread the fixture wire through the nipple and mounting strap. Screw the nipple into the coupling kit.
- Attach the nipple to the mounting strap, then secure it with a washer and hex nut, adjust the height of the nipple you need.

Bulb Type A or Edison Max.100W
(Not Included)

VAXCEL

130828

  
5. Attach the mounting strap to outlet box by using two mounting screws.
6. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections using the wire nuts:
 - The black wire from fixture to the black wire from power source.
 - The white wire from fixture to the white wire from power source.
 - Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.
 Carefully put the wires back into the outlet box.
7. Attach the canopy to the mounting strap, and secure it with collar.
8. Assembly for main fixture with glass shade. Note that top, inner rim of glass shade has three slots. To lock the glass shade to main fixture, align the three bumps on outside rim of main fixture with three slots on inner rim of glass shade and carefully raise glass shade into main fixture. Hold and twist glass shade counterclockwise until the glass shade is firmly locked in place. (See Fig. 1)
9. Install a bulb (not included). See relamping label at socket area or packaging for maximum allowed wattage.
10. Turn on the power at the main fuse or circuit breaker box.
11. **Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 2)**

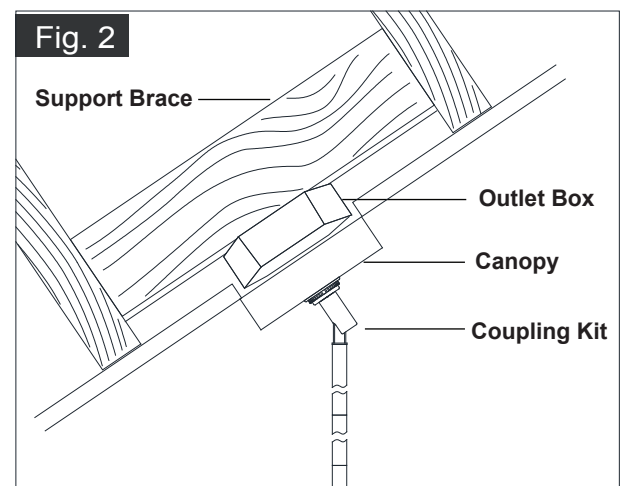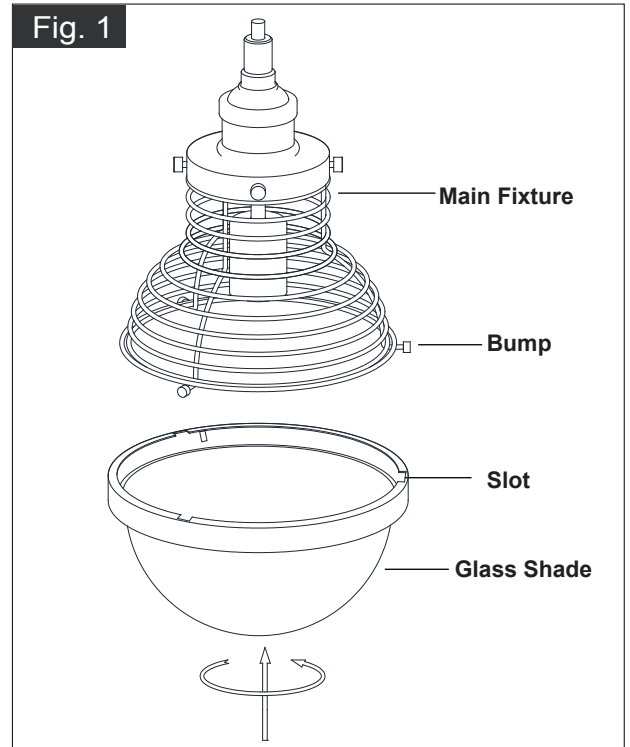


How to Replace the bulb:

1. Turn OFF the electric power at the main fuse or circuit breaker box.
2. Allow the bulb and fixture to cool down completely before relamping the bulb.
3. Lift and twist glass shade clockwise, remove the glass shade from main fixture. (See Fig. 3)
4. Install the new bulb into the socket.

  Note: See relamping label at socket area or packaging for maximum allowed wattage.
5. Restore the glass shade.
6. Turn on the power at the main fuse or circuit breaker box.

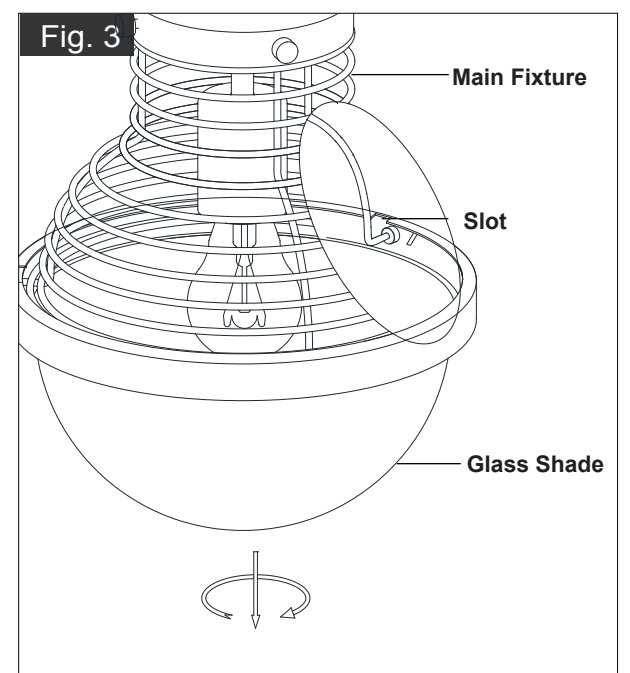

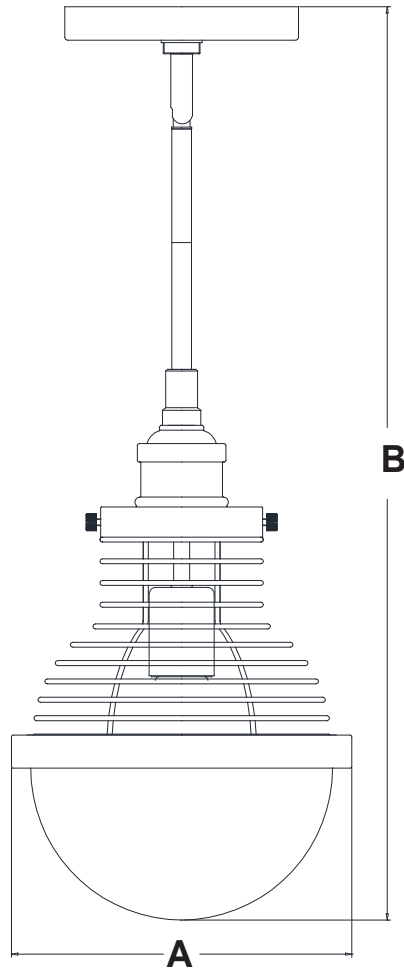

A: 8"

B: 18-3/4" ~ 72-3/4"