

 
ASSEMBLY AND INSTALLATION INSTRUCTIONS

PD35491A/C PD35491BN PD35491RBZ/B

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save this instructions.

Hardware Package (included):




Installation Steps


Turn off the power at fuse or circuit box.

1. Connect the fixture and socket by the threaded pipe.
2. Rod Connections:
 - a. Thread the fixture wire from the fixture through the lower rod, then secure the lower rod onto fixture using the threaded pipe.
 - b. Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
 - c. Thread the fixture wire through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.

Note: Length adjustable from 25-1/2" to 67-1/2". Use fewer rods if shorter length is desired.
3. Thread the fixture wire through the canopy kit, then secure the rod assembly to the set threaded pipe of the canopy kit.
4. Attach the mounting strap unit (A) to outlet box by using two mounting screws (B).
5. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
 - Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire to the mounting strap unit (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C).

Carefully put the wires back into the outlet box.
6. Attach the canopy kit to the mounting strap unit (A) by inserting the fixture mounting screws, then secure it with two bolt nuts (D).
7. Attach the glass shade to fixture, then secure it with the socket ring.

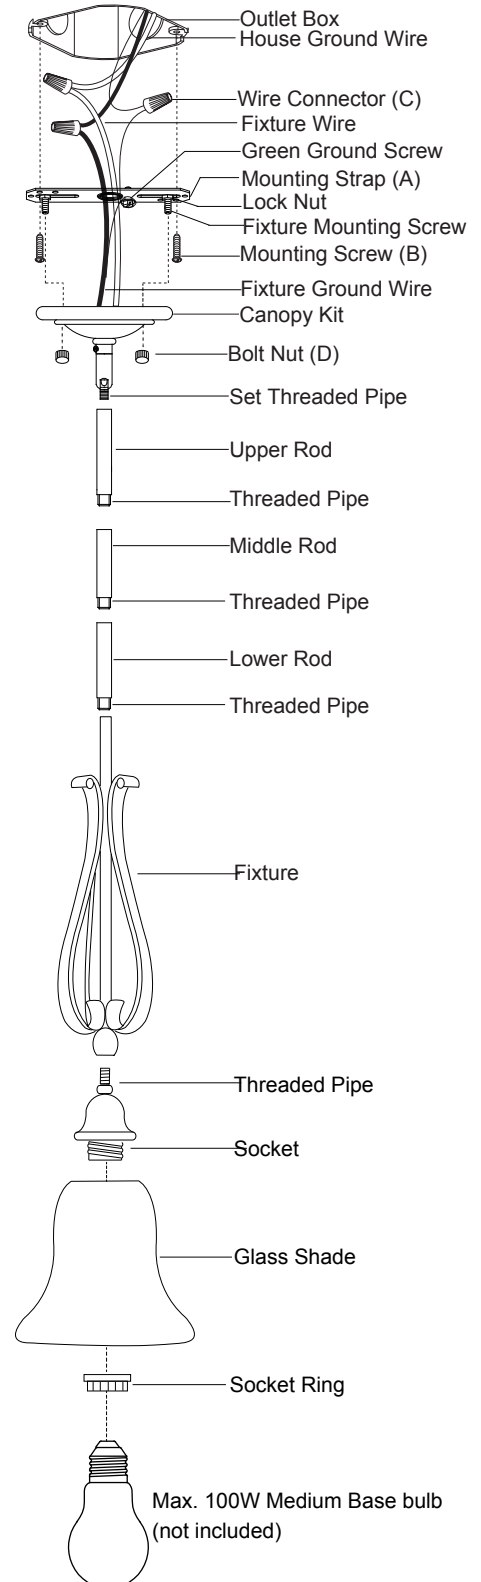

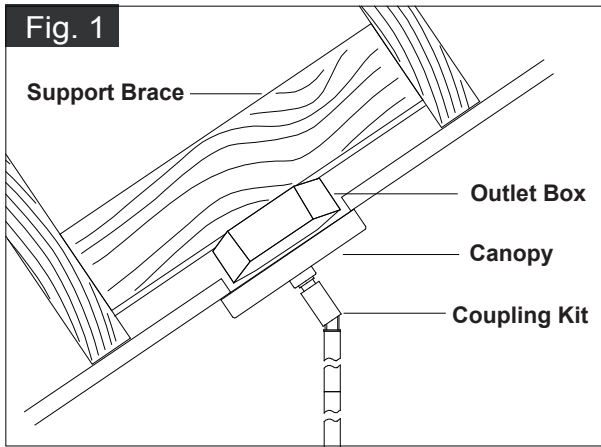


8. Install 1 X 100W Max. medium base bulb (not included). See relamping label at socket area or packaging for maximum wattage allowed.
9. Angled mounting recommended for a vaulted or angled ceiling. (See Fig.1)

Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

Spare Parts List:

				<p>Mounting Hardware 5841MM (1 SET) for PD35491A/C X-H35491BN (1 SET) for PD35491BN 5843MM (1 SET) for PD35491RBZ/B</p>
Mounting Strap Unit (A)	Mounting Screw (B)	Wire Connector (C)	Bolt Nut (D)	
12" Rod 3120RD for PD35491A/C 3123RD for PD35491BN 3126RD for PD35491RBZ/B	6" Rod 3121RD for PD35491A/C 3124RD for PD35491BN 3127RD for PD35491RBZ/B	3" Rod 3122RD for PD35491A/C 3125RD for PD35491BN 3128RD for PD35491RBZ/B	Glass Shade 935491C for PD35491A/C 935491FS for PD35491BN 935491B for PD35491RBZ/B	

 

A: 25-1/2" ~67-1/2"

B: 8-3/4"

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com
1-800-482-9235