



**Read and Save These Instructions**  
**All Hoods Must Be Installed By A Qualified Installer**

# **INSTALLATION INSTRUCTIONS**

## **CWEH9 WALL MOUNT HOOD**

**Read All Instructions Thoroughly Before Beginning Installation**

**WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK,  
OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:**

- A. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. Switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally during installation.**
- B. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.**
- C. Ducted fans must always be vented to the outdoors.**
- D. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and local code authorities.**
- E. ASHRAE residential ventilation standard 62.2 limits exhaust fans (total) to a maximum of 15 CFM per 100 square feet of occupiable space, unless a back drafting test is performed or make-up air is provided. Consult a local HVAC engineer for make-up air evaluation.**

**WARNING - TO REDUCE THE RISK OF FIRE, USE ONLY METAL  
DUCTWORK**



## Ducting Do's and Don'ts

### General Requirements

- Observe local codes regarding special duct requirements and placement of duct against combustibles.
- Using Vent-A-Hood transitions (back page) will ensure proper efficiency.
- Using Vent-A-Hood roof jacks or wall louvers (back page) will ensure proper efficiency.
- Where possible, seal joints with duct tape.
- The hood must be ducted to the outdoors without restrictions.

### Blower Requirements

- The single blower unit (B100) requires 6" round duct or equivalent (28 square inches), and the dual blower unit (B200) requires 8" round duct or equivalent (50 square inches).


Blower	Combined Duct Size	Sq. Inch Area	Vent-A-Hood Transition
Single (B100)	6" round or equivalent	28 sq. in.	N/A
Dual (B200)	8" round or equivalent	50 sq. in.	N/A
Single and Dual (B100 & B200)	10" round or equivalent	79 sq. in.	N/A
Two Duals (Two B200s)	12" round or equivalent	113 sq. in.	N/A

### Ducting Requirements

- NEVER reduce the duct size.
- When combining ducts together, the square inch area must reflect the total square inch area of the ducts being combined.
- Do not use flexible or corrugated duct. This type of duct will restrict airflow and reduce performance.
- Only use smooth, galvanized, metal duct.
- Make the duct run as short and as straight as possible with as few turns as possible.
- Avoid sharp-angled turns. Instead, use smooth, gradual turns such as adjustable elbows or 45 degree angled turns.
- For duct runs over 20 feet, increase the duct diameter by one inch for every ten feet of duct.
- A 90 degree elbow is equal to 5 feet of duct.

### Termination Requirements


- Airflow must not be restricted at the end of the duct run.
- A wall louver or roof jack is required for each duct run.
- Every wall louver or roof jack must include a gravity damper to prevent back drafts.
- Do not use screen wire or spring-loaded doors on wall louvers or roof jacks.
- Do not terminate venting into an attic or chimney.

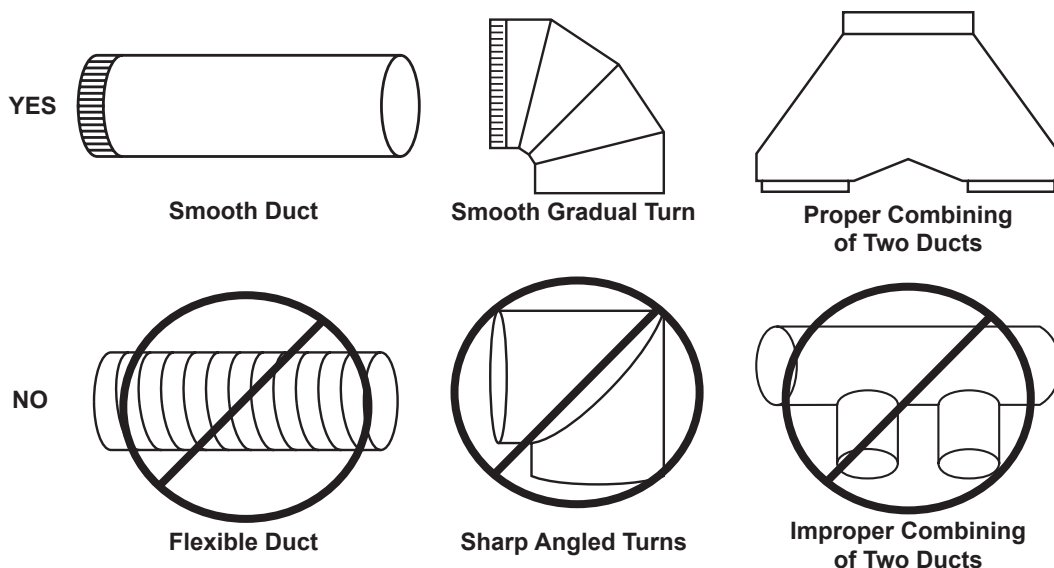



## Installation Details

- 1) Read all instructions thoroughly before beginning installation. Note: These instructions apply to standard hoods only. Custom hoods may require additional specification consideration.
- 2) When installing a CWEH9 wall mount hood, it is recommended that the bottom edge of the hood be located no more than 27" above the cooking surface for optimum performance.

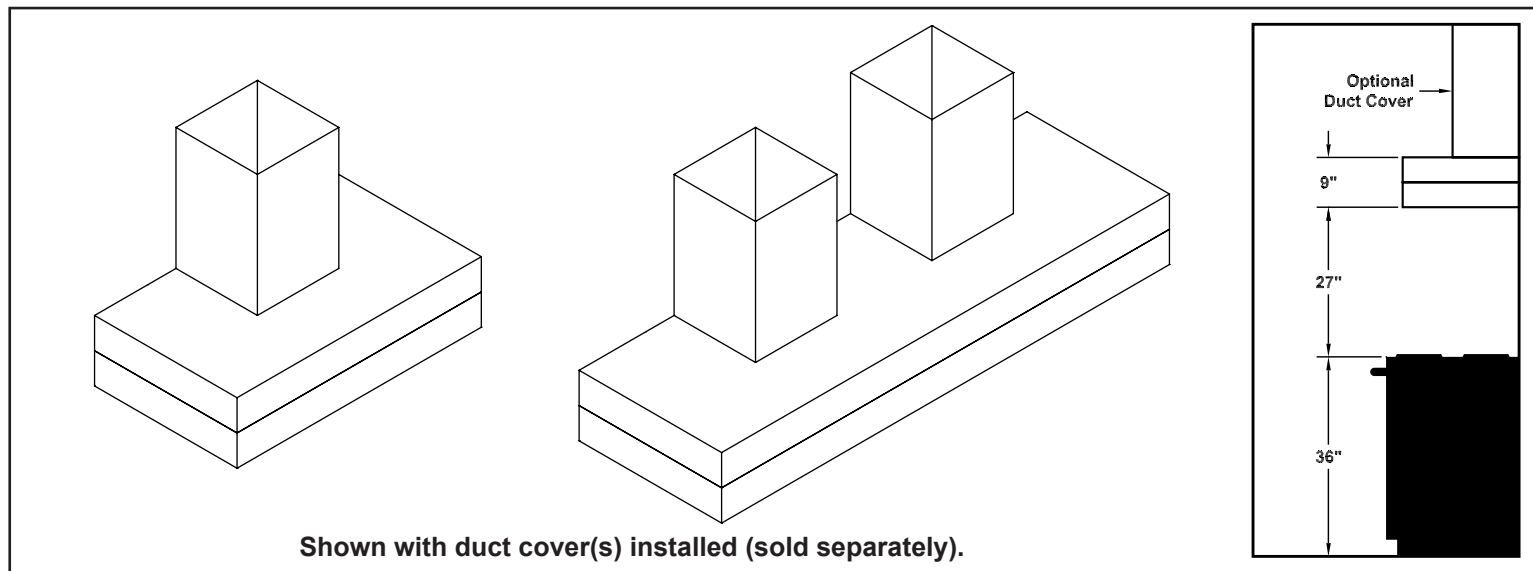

- 3) Select the appropriate installation method. Method 1 allows the hood and duct cover to be installed together as a single unit. The final duct connection is made at the ceiling as the hood is attached to the wall. Method 2 allows the duct cover to be slid into place after the hood is attached to the wall. Caution must be taken when using this method to prevent scratching the top of the hood or the ceiling.
- 4) IF THE HOOD IS TO BE "BACK VENTED", PROCEED DIRECTLY TO STEP 5.

Consult the connection diagrams (on next page) for further details on exhaust outlet placement.

**Method 1:** Install the duct(s) from the outside of the home to the ceiling over the exhaust outlet(s) on the hood. The end of the duct(s) should extend 1" below the ceiling.

**Method 2:** Install the duct(s) from the outside of the home down to the location of the exhaust outlet(s) on the top of the hood.

Use duct tape to seal all joints. A complete listing of available Vent-A-Hood ducting materials is provided on the back page of this instruction sheet.

Transition heights are as follows:

**Single Blower (B100):**

6" round duct will connect directly to the top of the hood.

**Dual Blower (B200):**

8" round duct will connect directly to the top of the hood.

**Single and Dual Blower (B100 & B200):**

6" round duct will connect directly to the top of the hood; 8" round will connect directly to the top of the hood.


**Two Dual Blowers (Two B200s):**

Two 8" rounds connect directly to the top of the hood.

# Vent-A-Hood®


## Installation Details Continued

### Connection Diagram (30" - 48" Widths)

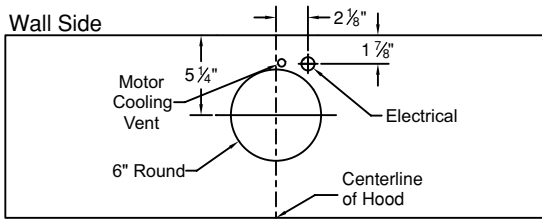


**300 CFM B100 Single Blower  
(Top View)**

### Connection Diagram (30" - 54" Widths)

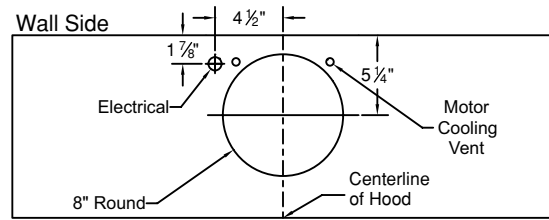

**600 CFM B200 Dual Blower  
(Top View)**

### Connection Diagram (42" - 60" Widths)

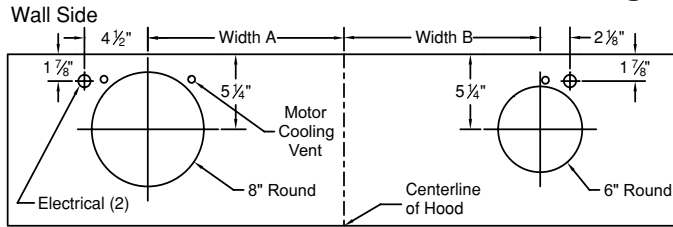


**900 CFM B200 Dual & B100 Single Blower  
(Top View)**

Model	Width A	Width B
CWEH9-342	8"	8"
CWEH9-348	10"	10"
CWEH9-354	11"	11"
CWEH9-360	12"	12"

**Outlet Spacing for  
900 CFM Models**

### Connection Diagram (48" - 66" Widths)



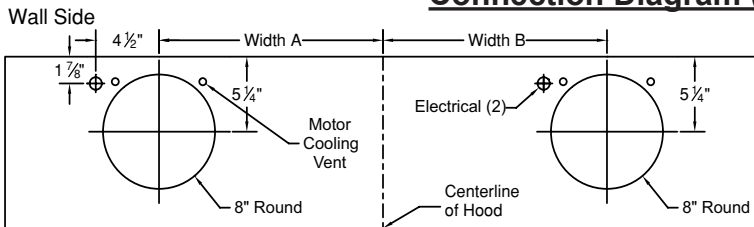


**1200 CFM Double B200 Dual Blowers  
(Top View)**


Model	Width A	Width B
CWEH9-448	11"	11"
CWEH9-454	11"	11"
CWEH9-460	12"	12"
CWEH9-466	13"	13"

**Outlet Spacing for  
1200 CFM Models**

- Remove the hood from its packaging and place the back of the hood on the floor or countertop in front of the wall where it will hang.
- Remove the shipping tape that is securing the E-Z Clean shield(s) inside the hood. Remove the E-Z Clean shield(s) by lightly pulling it toward the front of the hood. Gently close the back draft damper(s) from the top side of the hood. To remove the blower housing(s), unsnap the suitcase latches (one on each side of the housing). The housing(s) should be pulled forward and gently "tipped" to clear the blower wheel(s) and then out of the hood.

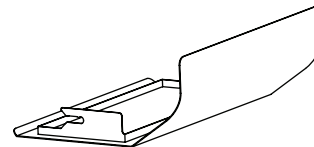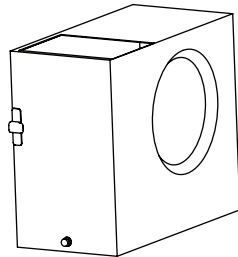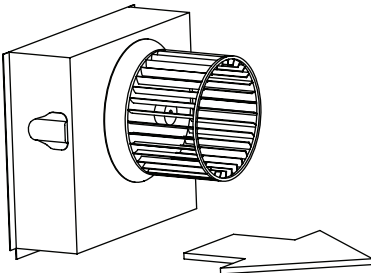

- Remove the three screws retaining the blower motor(s). Unplug and remove the motor(s), taking care not to damage the blower wheel(s). It is not necessary to remove the blower wheel from the motor.

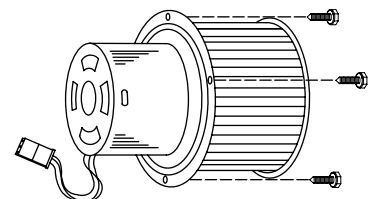

# Vent-A-Hood®

## Installation Details Continued

**Warning: Make sure power is off and locked at the service disconnecting means on the service panel during installation.**

- 8) Install an appropriate 1/2" UL listed electrical wire clamp through each motor box electrical opening on top of the hood. Install electrical wiring from the service panel to the hood location for each motor box. Consult the connection diagrams (on previous page) for further details on electrical placement.

**Method 1: Extend wire to the hood. Electrical connection(s) will occur before the hood is installed on the wall.**

**Method 2: Extend wire to 24" above the countertop. Electrical connection(s) will occur after the hood is installed on the wall.**

Model	Volts	Amps	Hz	RPM	CFM SP@0.0"	Equivalent CFM*	CFM SP@0.1"	CFM SP@0.2"	CFM SP@0.3"	Minimum Round Duct Size	Sones#
B100 Single	115	2.5	60	1550	300	450	273	245	225	6" (28 in. <sup>2</sup> )	5.4
B200 Dual	115	4.0	60	1550	600	900	531	480	430	8" (50 in. <sup>2</sup> )	6.5
B200 Dual & B100 Single	115	6.0	60	1550	900	1350	804	725	655	10" (79 in. <sup>2</sup> )	6.3
Two B200 Duals	115	7.5	60	1550	1200	1800	1062	960	860	12" (113 in. <sup>2</sup> )	6.6

\* Because the Magic Lung® blower uses centrifugal filtration rather than conventional baffle or mesh filters, the Magic Lung® blower can handle cooking equipment with higher cubic feet per minute (CFM) requirements and can deliver equivalent CFM much more efficiently than other than other filtration systems. When comparing the Magic Lung® with other blower units made by other manufacturers, use the "Equivalent CFM".

# Ratings in accordance with the Standard Test Code by the Energy Systems Laboratory of the Texas Engineering Experiment Station.

- 9) Remove the duct cover(s) from its packaging. Place the duct cover(s) over the top of the hood taking care to align the single flange on top of the hood between the double flange on the bottom of duct cover. Press the duct cover down to engage the flanges. Lift the hood and hold in place on the wall in the location where it will be installed. Lightly mark the wall with a short horizontal mark along the bottom edge of the hood.

- 10) Remove the hood and duct cover assembly from the wall. On the back side of the hood, measure the distance between the bottom edge of the hood and the top edge of the wood mounting strip. Measure this distance above the horizontal line made in Step 9 and lightly mark the wall with a level, horizontal line. Measure where the center (left to right) of the hood will be and mark the upper horizontal line on the wall with a short vertical centerline.

- 11) Remove the screws inside the top of the back of the hood that retain the wood strip that is recessed in the mounting channel. Note: Some retaining screws may be located behind the blower(s). Remove the wood mounting strip from the back of the hood and place the top edge of the strip on the upper, level horizontal line on the wall. Referencing the vertical centerline from Step 10, place the mounting strip so it is centered (left to right) on the wall in the space where the hood will be located. Drill pilot holes in the strip to prevent splitting. Using proper hardware, attach the mounting strip to at least two wall studs.

- 12) FOR BACK VENTING APPLICATIONS ONLY. IF NOT BACK VENTING, PROCEED DIRECTLY TO STEP 13.

**Note: Wall studs may interfere with back venting installations. Additional framing may be required. It is necessary to cut duct access hole(s) in the wall prior to installing the hood.**

To accomplish this, first remove and set aside the duct cover(s) that was previously installed in Step 9. Hold the hood on the mounting strip by aligning the channel at the top of the back of the hood over the wood mounting strip on the wall. Place the appropriate elbow(s) on top of the hood in line with the hood exhaust collar(s). On the wall, trace around the elbow(s). Remove the hood and elbow(s) from the wall. Cut around the outside of the traced line(s), avoiding wall studs. Install the duct from the outside of the home to the opening in the wall. Use duct tape to seal joints. Note: If using Method 1, place the duct cover(s) back onto the top of the hood.

- 13) Hang the hood on the mounting strip by aligning the channel at the top of the back of the hood over the wood mounting strip on the wall. While holding the hood in place, mark locations on the mounting strip through the two mounting holes in the channel at the top of the hood. Some mounting holes may be located behind the blower(s). Remove the hood and drill 3/32" pilot holes at the center of the marks in the wood strip to prevent splitting.

- 14) FOR BACK VENTING APPLICATIONS ONLY. IF NOT BACK VENTING, PROCEED DIRECTLY TO STEP 15.

Place the appropriate elbow(s) on the top of the hood. Elbow(s) should be placed with the non-crimped end(s) on the inside the collar(s) of the exhaust outlet(s). Use duct tape to seal joints.



## Installation Details Continued

**14) (Continued) FOR BACK VENTING APPLICATIONS ONLY. IF YOU ARE NOT BACK VENTING, PROCEED TO STEP 15.**

**Method 1:** Insert the electrical wire from the service panel into the electrical wire clamp on each motor box. Tighten the wire clamp(s). While securing the slack in the electrical wire, lift the hood up to the wall and hang the hood on the mounting strip, taking care to properly align the duct connection(s) between the elbow(s) and the duct(s) in the wall.

**Method 2:** Lift the hood up to the wall and hang the hood on the mounting strip, taking care to properly align the duct connection(s) between the elbow(s) and the duct(s) in the wall.

Secure the hood to the mounting strip by installing the screws (previously removed from the strip in Step 10) into the pilot holes drilled in Step 12.

**Method 2:** Insert the electrical wire from the service panel into the electrical wire clamp on each motor box. Tighten the wire clamp(s). Slide the duct cover between the ceiling and the top of the hood while aligning the flange on top of the hood between the double flange on the bottom of the duct cover. Gently slide the duct cover to the wall. Caution must be taken to avoid scratching the hood or ceiling.

**SKIP STEP 15. PROCEED DIRECTLY TO STEP 16.**

**15) FOR TOP VENTING APPLICATIONS ONLY. IF BACK VENTING, PROCEED DIRECTLY TO STEP 16.**

**Method 1:** Insert the electrical wire from the service panel into the electrical wire clamp on each motor box. Tighten the wire clamp(s). Cut a piece of duct for each outlet of sufficient length to meet the duct(s) in the ceiling. One end of the duct must be crimped to fit inside the duct in the ceiling. Insert the non-crimped end into the exhaust collar on the top of the hood and seal with duct tape. While securing the slack in the wire, lift the hood up to the wall and hang the hood on the mounting strip, taking care to properly align the duct connection(s) between the hood and the duct(s) in the ceiling.

**Method 2:** Lift the hood up to the wall and hang the hood on the mounting strip, taking care to properly align the duct connection(s) between the hood and the duct in the ceiling. Duct work must fit inside the exhaust collar. Use duct tape to seal all joints.

Secure the hood to the mounting strip by installing the screws (previously removed from the strip in Step 10) into the pilot holes drilled in Step 12.

**Method 2:** Insert the electrical wire from the service panel into the electrical wire clamp on each motor box. Tighten the wire clamp(s). Slide the duct cover(s) between the ceiling and the top of the hood while aligning the flange on top of the hood between the double flange on the bottom of the duct cover. Gently slide the duct cover(s) to the wall. Caution must be taken to avoid scratching the hood or ceiling.

**16) From inside the hood, using UL listed wire nuts, attach the “neutral” wire(s) to the white lead(s), the “hot” wire(s) to the black lead(s), and the ground wire(s) to the green lead(s) inside the motor box(es).**

**Warning: Do not operate hood without proper ground connection.**

**17) Plug the motor(s) into the hood and reinstall the blower motor(s) using the three retaining screws that were previously removed in Step 7.**

**18) Replace the blower housing(s) and the blower shield(s). Make sure that the damper(s) open and close smoothly.**

**19) Refer to the Owner Maintenance Guide Operating Instructions for proper hood operation. Test all blower and light functions to ensure they are operating properly.**




# VENTING

*Vent-A-Hood®*


# ACCESSORIES

## WALL LOUVER

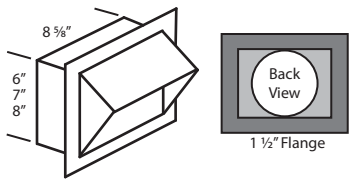


MODEL	DIM
VP526	6" Round
VP527	7" Round
VP528	8" Round

## WALL LOUVER

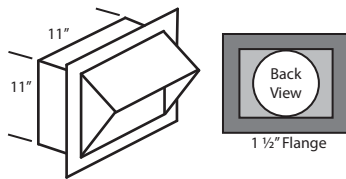


MODEL	DIM
VP554	10" Round

## WALL LOUVER

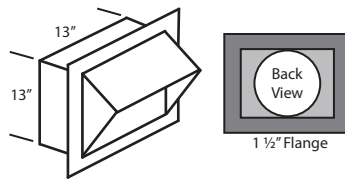


MODEL	DIM
VP555	12" Round

## RECTANGULAR WALL LOUVER

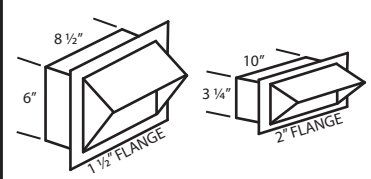


MODEL	DIM
VP538	6" x 8 1/2"
VP560	3 1/4" x 10"

## LOW PROFILE ROOF JACK (MAXIMUM 4/12 PITCH)

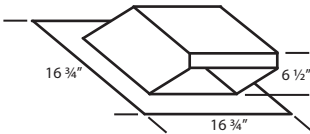


MODEL	DIM
VP539	6" Round
VP540	7" Round
VP541	8" Round

## LOW PROFILE ROOF JACK (MAXIMUM 4/12 PITCH)

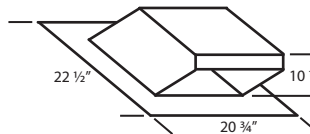


MODEL	DIM
VP552	10" Round
VP553	12" Round

## LOW PROFILE ROOF JACK (MINIMUM 4/12 PITCH)

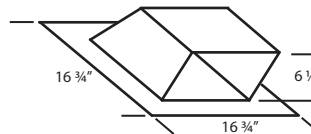


MODEL	DIM
VP539-HP	6" Round
VP540-HP	7" Round
VP541-HP	8" Round

## LOW PROFILE ROOF JACK (MINIMUM 4/12 PITCH)

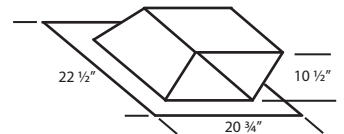


MODEL	DIM
VP552-HP	10" Round
VP553-HP	12" Round

## ADJUSTABLE ELBOW

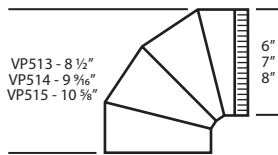


MODEL	DIM
VP513	6" Round
VP514	7" Round
VP515	8" Round

## BACK/SIDE VENT ELBOW

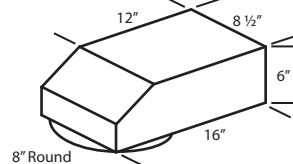


MODEL	DIM
VP561	8" to 6" x 8 1/2"

## 3 1/4" x 10" BACK VENT ELBOW

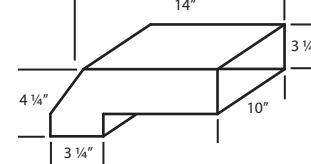


MODEL	DIM
VP559	3 1/4" x 10"

## 3 1/4" x 10" TO 7" TRANSITION

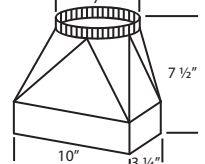


MODEL	DIM
VP521	3 1/4" x 10" to 7"

## MULTI-BLOWER TRANSITION

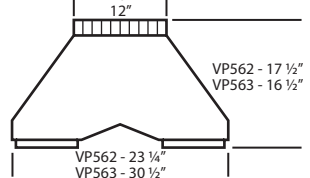


MODEL	DIM
VP562	6" & 8" to 10"
VP563	8" & 8" to 12"

## M1200 STANDARD TRANSITION

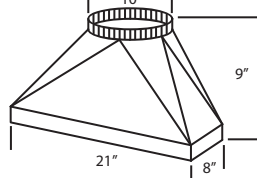


MODEL	DIM
VP566	21" x 8" to 10"

## STANDARD ISLAND TRANSITION

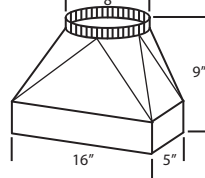


MODEL	DIM
VP565	5" x 16" to 8"

## CLUSTER BLOWER TRANSITION

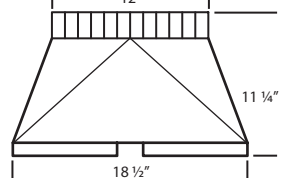


MODEL	DIM
VP564	8" & 8" to 12"

## OFFSET L & R TRANSITION FOR ISLAND BLOWERS

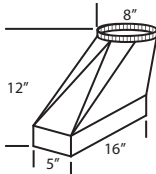


MODEL	DIM
VP542	Top Left
VP543	Top Right

## SIDE VENT TRANSITION L & R FOR ISLAND BLOWERS

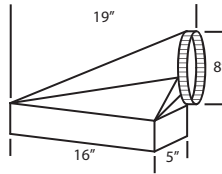


MODEL	DIM
VP544	Left Side
VP545	Right Side

## OFFSET KIT - ROUND

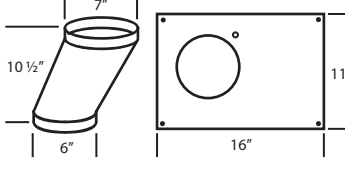


MODEL	DIM
VP529	6" Rnd to 7" Rnd

## OFFSET KIT - RECTANGULAR

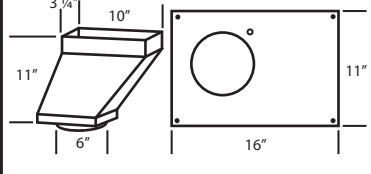


MODEL	DIM
VP550	6" Rnd to 3 1/4" x 10"

## "Y" TRANSITION

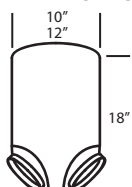


MODEL	DIM
VP517	8" & 8" to 12"
VP518	6" & 8" to 12"
VP551	6" & 8" to 10"

## ROUND DUCT PIPE

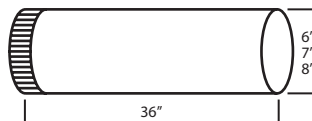


MODEL	DIM
VP500	6" Round
VP501	7" Round
VP502	8" Round

## 3 1/4" RECTANGULAR DUCT PIPE

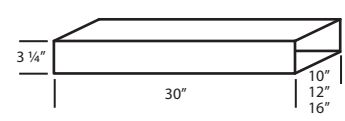

MODEL	DIM
VP504	3 1/4" x 10"
VP505	3 1/4" x 12"
VP506	3 1/4" x 16"

## 6" RECTANGULAR DUCT PIPE

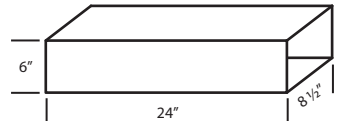

MODEL	DIM
VP507	6" x 8 1/2"