# INSTALLATION INSTRUCTIONS

### PASSAGE AND PRIVACY ROSETTE

**IMPORTANT!** All wood screws require 7/64" pilot holes, 1" deep in the door and jamb. Electric dills/drivers should NOT be used to install any wood screws. NOTE: Passage and privacies fit doors 1-3/8" to 1-3/4" thick.

## Tools Required: #2 Phillips Screwdriver & electric drill, 7/64" bit

# **DOOR HANDING - ROSETTES AND SHORT PLATES**

Door handing is critical for Split-Finish, or Split-Design products. It's also used to determine where the Interior and Exterior halves of the lockset are located on the door. And, it's used to position the latch tongue in relation to the strike plate.

Inside of Door - The Inside of a door refers to the side of the door that **faces the room**. For example, for a bedroom door on a hallway, the Inside of the door would face the bedroom.

<u>Outside of Door</u> - The Outside of a door refers to the side of the door that **faces away from the room**. For example, on a bedroom door, the Outside would face the hallway.



en line state

Hinge is on the right. Door is **Right Hand**.



Hinge is on the left.



Hinge is on the right. Door is **Right Hand**.

### **INSTALLATION RULES:**

- 1) READ ALL INSTRUCTIONS AND FOLLOW EACH STEP IN ORDER.
- 2) DO NOT MIX PARTS FROM ONE BOX WITH THOSE OF ANOTHER.
- 3) Lockset machine mounting screws are inserted from the inside.
- 4) Privacy pin holes are next to the door edge containing the latch.
- 5) Latch tongues have a beveled side, and this side should contact the curved end of the face plate, and curved end of the strike plate. (See \*Latch Tongue Notes on page 2.)

# VIAGGIO®

For assistance call 1(800)522-7336 Monday - Friday 7am–4pm MT or visit www.ViaggioHardware.com/support



VIDEO 🖻

DOORS OPENING OUTWARD

To identify door handing,

face door from the Outside.

#### PK191 04012021



VIAGGIO\* For assistance call 1(800)522-7336 Monday - Friday 7am–5pm MT or visit www.ViaggioHardware.com/support PK 191 04012021



