



WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

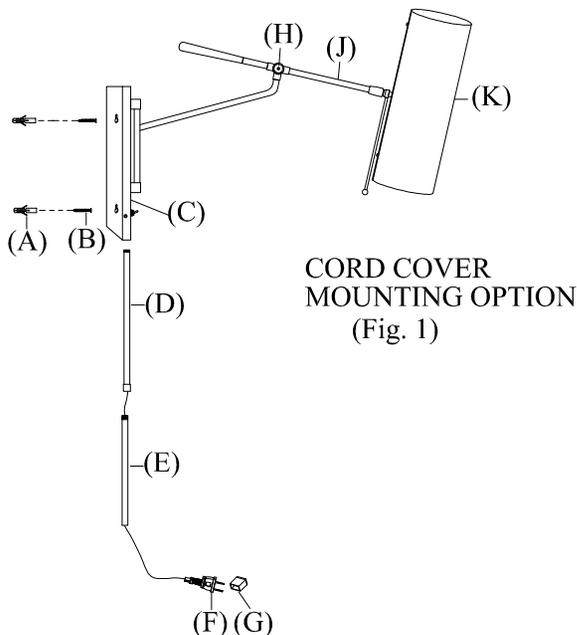

CORD COVER MOUNTING OPTION (Fig. 1)

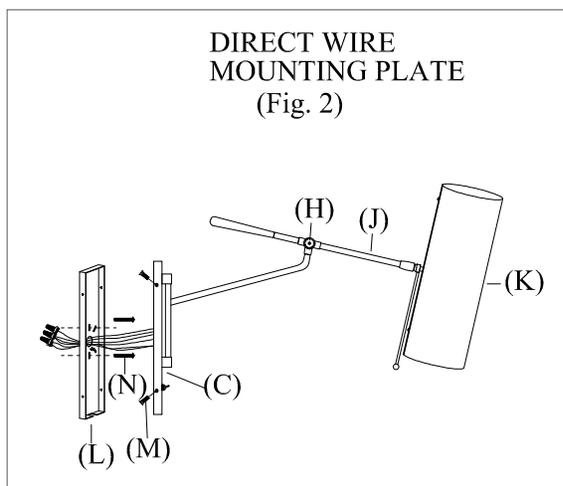

DIRECT WIRE MOUNTING PLATE (Fig. 2)

1. CORD COVER ASSEMBLY (See Fig. 1)
 1. Remove all parts carefully from the box.
 2. Screw threaded nipple of cord cover (D) into bottom threaded opening of back plate (C). Thread cord cover (E) into cord cover (D) and hand tighten.
 3. Measure center points between both mounting holes at back of fixture base (C). Mark two points with the same distance on the wall, make sure they are vertical with each other.
 4. Drill small holes at both points, hole should be big enough to accommodate with plastic anchors (A). Install plastic anchors (A) into the holes in the wall.
 5. Insert mounting screws (B) into plastic anchors (A), make sure screw head 1/8" threads are visible.
 6. Hook fixture base (C) onto both screws (B).
 7. Insert light bulb (not included) into the socket.
 8. Remove plastic cover (G) from plug (F).
 9. Plug lamp into wall outlet.

2. DIRECT WIRE INSTALLATION (See Fig. 2)

We strongly recommend that a professional electrician install the fixture.

 1. Follow step 1 of CORD COVER ASSEMBLY.
 2. Guide wiring from wall outlet through center hole in mounting plate (L). Affix mounting plate (L) to wall outlet box with mounting screws (N) provided.
 3. Cut fixture cord twelve inches away from fixture base (C) and remove by grasping plug (F) and pulling out of cord cover (D & E).
 4. Connect the ground screw (green color) of the fixture to the bare copper ground wire in the outlet box. The insulation on the fixture cord that was cut to twelve inches in length in step 3 has a smooth side and a ribbed side. Connect the smooth wire to the black wire in the outlet box (not shown in diagram). Connect the ribbed wire to the white wire in the outlet box.
 5. Attach fixture base (C) to the affixed mounting plate (L), and secure with base screws (N).
 6. Follow step 7 of CORD COVER ASSEMBLY.

3. ADJUSTMENT INSTRUCTION
 1. Loosen adjustment key (H). Adjust lamp by swing lamp shade (K) and lamp pole (J) to desired position and tighten.