## CHC5132 ASSEMBLY & INSTALLATION GUIDE





## VISUAL COMFORT & CO. Est. 1987

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

## INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

## ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Remove mounting strap with threaded rod (A) from mounting loop (C).
- 2. Thread top nipple of pole (G) into bottom threaded opening of pole (F).
- 3. Attach mounting strap (A) to outlet box with screws (B) provided.
- Connect the hot wires from the fixture (SMOOTH) to the hot outlet box wire from the outlet box (usually BLACK).
  Fasten them together with a plastic wire connector provided and wrap connection with electrical tape.
- Repeat this procedure for the RIBBED neutral wires from the light fixture to the wire from the outlet box (usually WHITE).
- 6. Connect the ground wire from the light fixture (bare copper) to the ground wire from the outlet box (usually green or bare copper).
- 7. Thread mounting loop (C) onto threaded rod attached to mounting strap (A).
- 8. Slip canopy base (D) to ceiling and secure with canopy ring (E).
- 9. Insert light bulb into socket.
- Loosen screws (H), then insert bottom of glass shade (not included) to the lamp fixture (G) and tighten with screws (H).
- Loosen screws (L), then attach brass ring (K) to top of glass shade (J), and tighten with screws (L).
  \*\*\*\*\*\*MAKE SURE SCREWS ARE SECURELY FASTENED. FAILURE TO TIGHTEN SCREWS PROPERLY MAY
  RESULT IN DAMAGE TO FIXTURE