



ESFERA 2-TIERED MEDIUM & X-LARGE CHANDELIERS

KWCH197; KWCH198

General Product Information



  Intertek

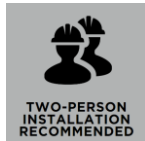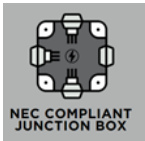

Product Warranty



FCC Statement

Suggested/Required Tools



ELECTRIC DRILL



PHILLIPS-HEAD SCREWDRIVER



ALLEN WRENCH



WIRE CUTTER

Safety Information

Fixtures that are ceiling mounted and weighs more than 50lbs or wall mounted and weighs more than 25lbs should be provided with support independent of the outlet box.

 
 
CAUTION-RISK OF FIRE

 
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved. USE MINIMUM 90°C SUPPLY CONDUCTORS.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

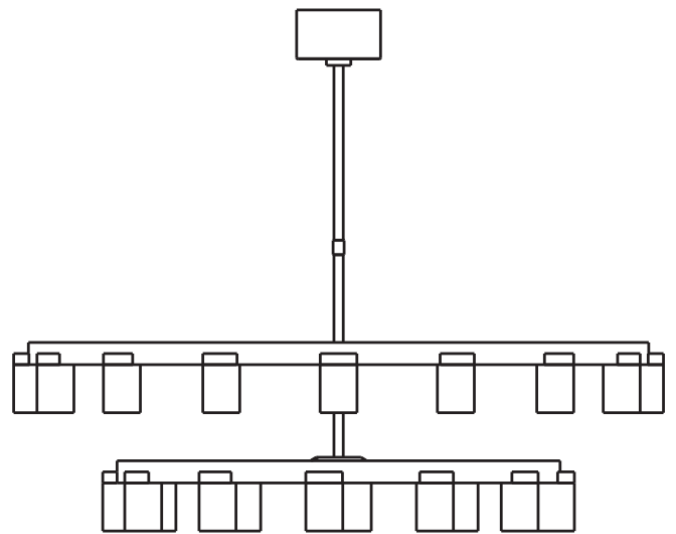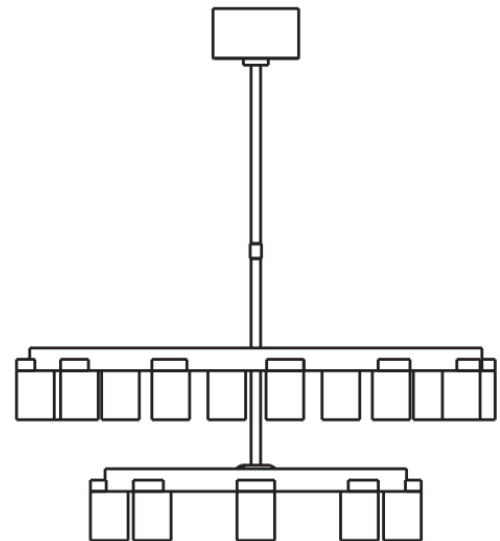

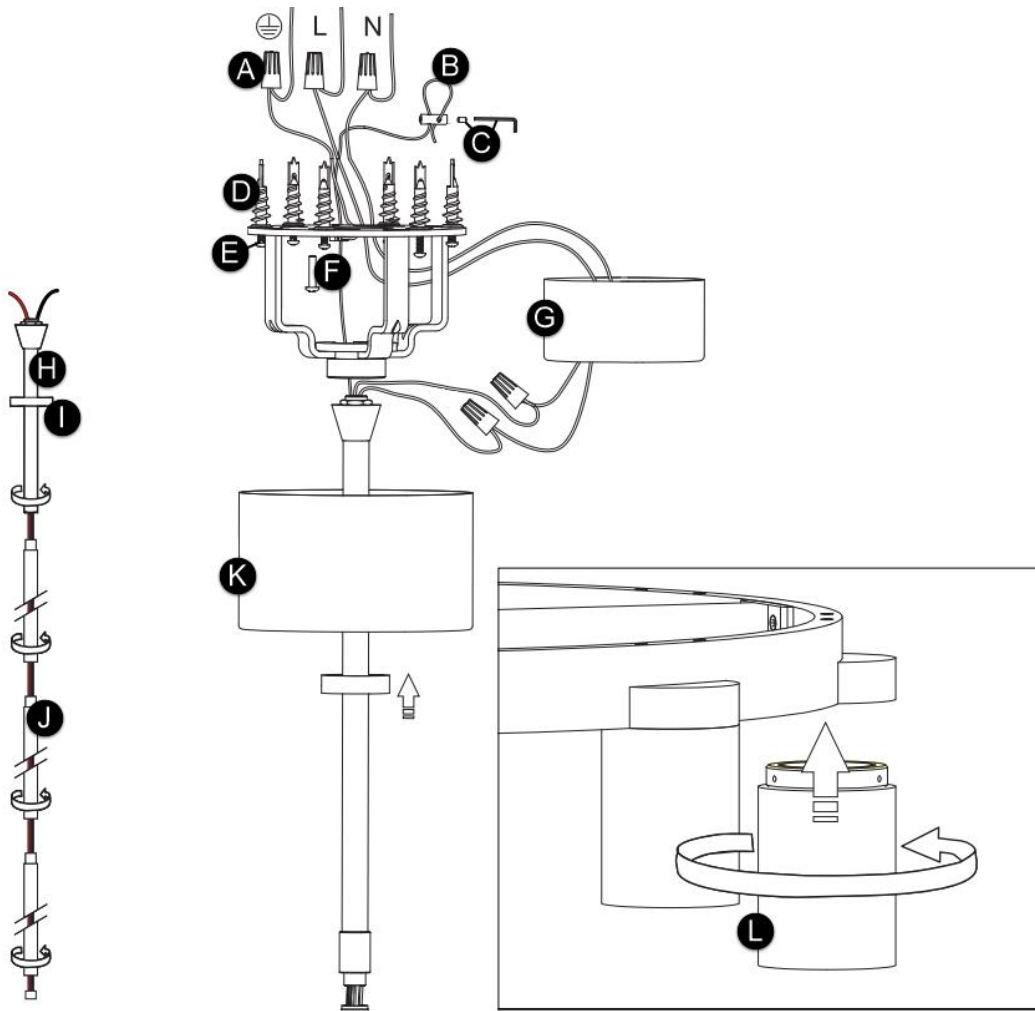

FIXTURE PARTS

- A. Wire Nut Connections
- B. Safety Cable & Cord Grip
- C. Allen Wrench & Allen Screw
- D. Anchors
- E. Anchor Screws & Washers
- F. Mounting Screws
- G. Driver
- H. Top Stem
- I. Collar Nut
- J. Stem Assembly
- K. Canopy
- L. Shades

INSTRUCTIONS

I. Preparing the Fixture

1. Unbox and examine all the items included in the packaging of the fixture.
2. Secure the mounting plate to the junction box with the provided mounting screws.
3. Align an anchor with the center of a mounting plate hole and push the anchor in up to its threads.
4. Screw the anchor in the rest of the way using a screwdriver.
5. Secure the mounting plate to the anchor with an anchor screw and washer. Repeat steps 2–4 for the remaining anchors.
6. Determine the desired height of the fixture using the provided stems, then screw them together accordingly.
7. Feed the fixture wires through the collar nut and stem assembly, then screw the stem assembly onto the top of the fixture.
8. Then feed the fixture wires and stem assembly through the canopy, then insert the top stem into the mounting plate, ensuring no wires are pinched.
9. Remove the cable grips at the canopy end, pull the cable up and down through the mounting plate as shown.
10. Thread the cables through the cable grips, secure them to the mounting plate, and tighten the screws to secure the cables.

II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. Twist the bare ends of the following pairs of wires together, then secure each connection with a wire nut:
 - a) Black driver wire to black fixture wire
 - b) Red driver wire to red fixture wire
3. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around or a house wire (green or bare copper wire without insulation).
4. Connect the following wires using a wire nut:
 - a) White driver wires to neutral power line wire
 - b) Black driver wires to hot power line wire
5. Carefully place the driver and all the wires into the canopy.

III. Installing the Fixture

1. Slide the canopy up over the mounting bracket and secure it in place with the collar nut.
2. Screw the shades onto the shade bases to secure them and complete the installation.