

## INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

## ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Remove back plate (A) from the light fixture (C) by unscrewing the base screws (D) with a screwdriver in a counter-clockwise direction.
- Position the back pate (A) diagonally so that the holes of the back plate (A) and the wall outlet are aligned.
  Tighten the back plate (A) onto the wall outlet by two screws provided (B)
  (wrap in plastic and attached at back of the fixture.)
- 3. Attach the light fixture (C) to the back plate (A) and tighten it by screwing base screws (D).
- 4. Attach cord cover (E) to bottom of light base by turning (E) in counter-clockwise direction.
- 5. Attach cord cover (F) to bottom of (E) by turning (F) in counter-clockwise direction, cord cover (G) to bottom of (F) by turning (G) in counter-clockwise direction.
- 6. Put harp (H) into the harp saddle by squeezing both sides on the harp.
- 7. Remove finial (J) from harp (H), place lamp shade (I) onto the bolt attached to the top of harp. Screw finial (J) onto bolt to secure shade to the harp.
- 8. Insert light bulb.
- 9. Plug lamp cord into wall outlet.