 
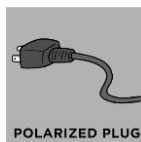 


BALLEROY MEDIUM FLOOR LAMP

LXT1011BBS1

General Product Information:

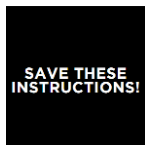

Safety Information

 
IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.




Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

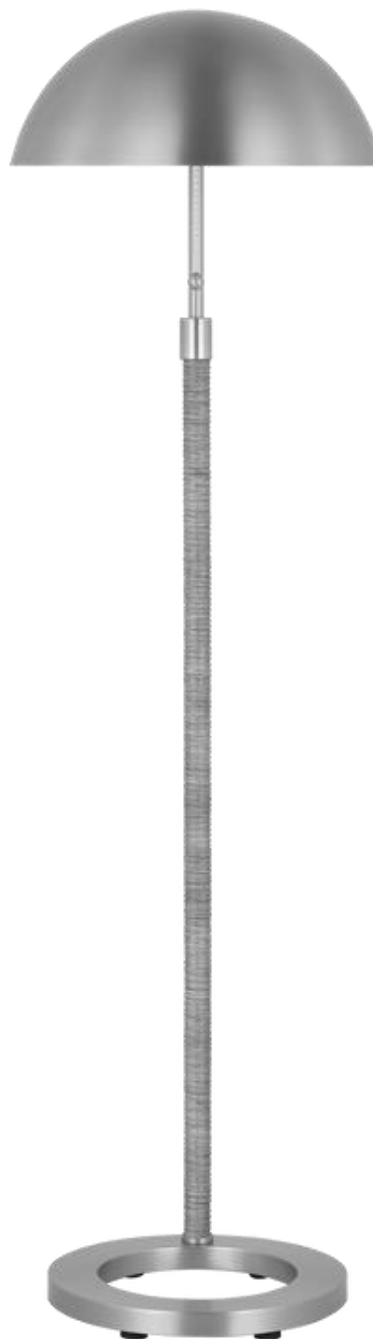

FIXTURE PARTS

 - A. Lamp Shade
- B. LED Bulb (Included)
- C. Socket
- D. Pull Chain Switch
- E. Adjustable Stem
- F. Stem
- G. Lamp Base
- H. Power Cord with Polarized Plug

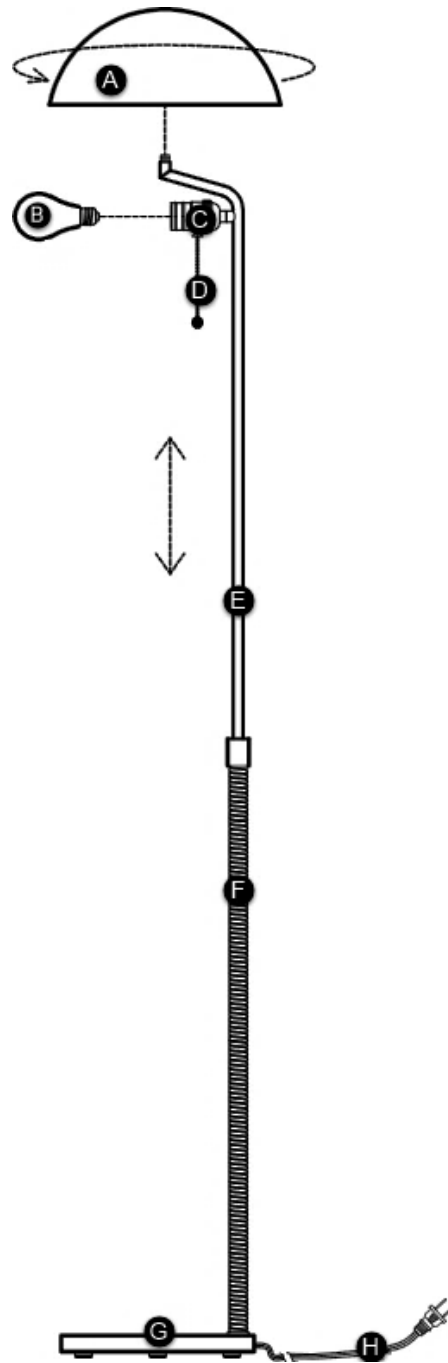

INSTRUCTIONS

1. Remove the lamp and all its parts from the packaging.
2. Hold and slide the adjustable stem to adjust it to the desired height.
3. Secure the lamp shade to the adjustable stem.
4. Screw the light bulb into the socket. Refer to the label on the socket for max wattage information.
5. Remove the protective plug cover from the plug portion of the power cord and plug it into a functioning electrical outlet.
6. Use the switch to turn the lamp on and off to test that it functions properly.