

INSTALLATION INSTRUCTION
Flexrail1™ - Power Feed Cable
HM1-PCC

WAC LIGHTING
Responsible Lighting®

SAFETY INSTRUCTIONS:

Only a qualified electrician must install system. System is intended for installation in accordance with National Electric Code, local and Federal code specifications.

To reduce the risk of fire, electrical shock and injuries to persons:


1. Read all instructions.
2. Turn off power at main switch before installing or modifying the system.
3. Do not install within six inches of any curtain or combustible materials.
4. Do not install less than 5 feet above a floor.
5. Do not install in damp or wet locations.
6. Do not install concealed, or extended through building walls.
7. Do not attempt to energize anything other than a track light fixture.
8. Do not load rail to more than 20 amps per circuit.

The HM1-PCC: Installs to a ceiling junction box.
Consult general instructions for installation steps.

FIELD CUTTING THE FLEXIBLE POWER FEED:

NOTE: The flexible power feed is used for slopped ceiling and custom suspension length applications. It supplies power only, it is not intended to support rail.

1. Separate the canopy from the base plate by loosening the three canopy screws. Remove base plate and undo wire connections.
2. Remove the collar-nut, to release the cord from the canopy.
3. Loosen the cord fitter from the strain relief fitting, but do not remove it.
4. Slide the cord fitter and it's internal parts down the length of the wire and just below the desired cut spot.
5. Before cutting be sure to leave sufficient wire length to complete wire connections.
6. Trim the outer jacket.
7. Make sure the bushing and clamp are seated inside the cord fitter. Re-tighten the cord fitter and give it a sharp tug to check the grip.
8. Insert the cord fitter back into the canopy and install the collar-nut.
9. Strip 3/8" of insulation from the wire ends and re-connect with building wires in the original order.
10. Reinstall canopy to base plate.

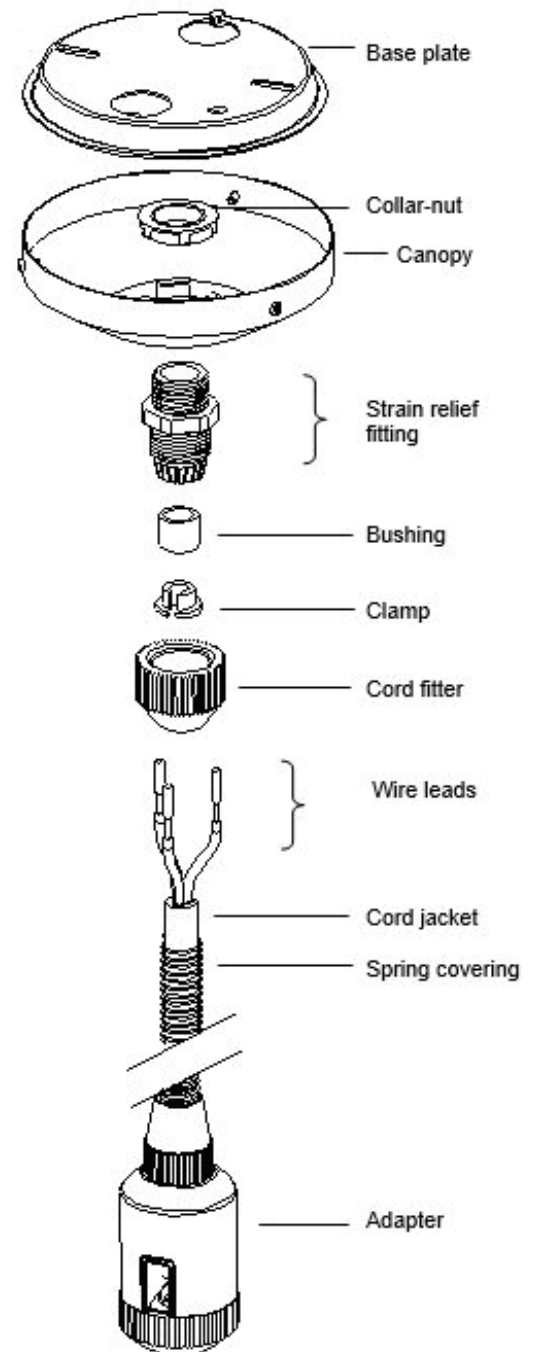

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585