


Instruction Sheet

Fabric Brush Instructions

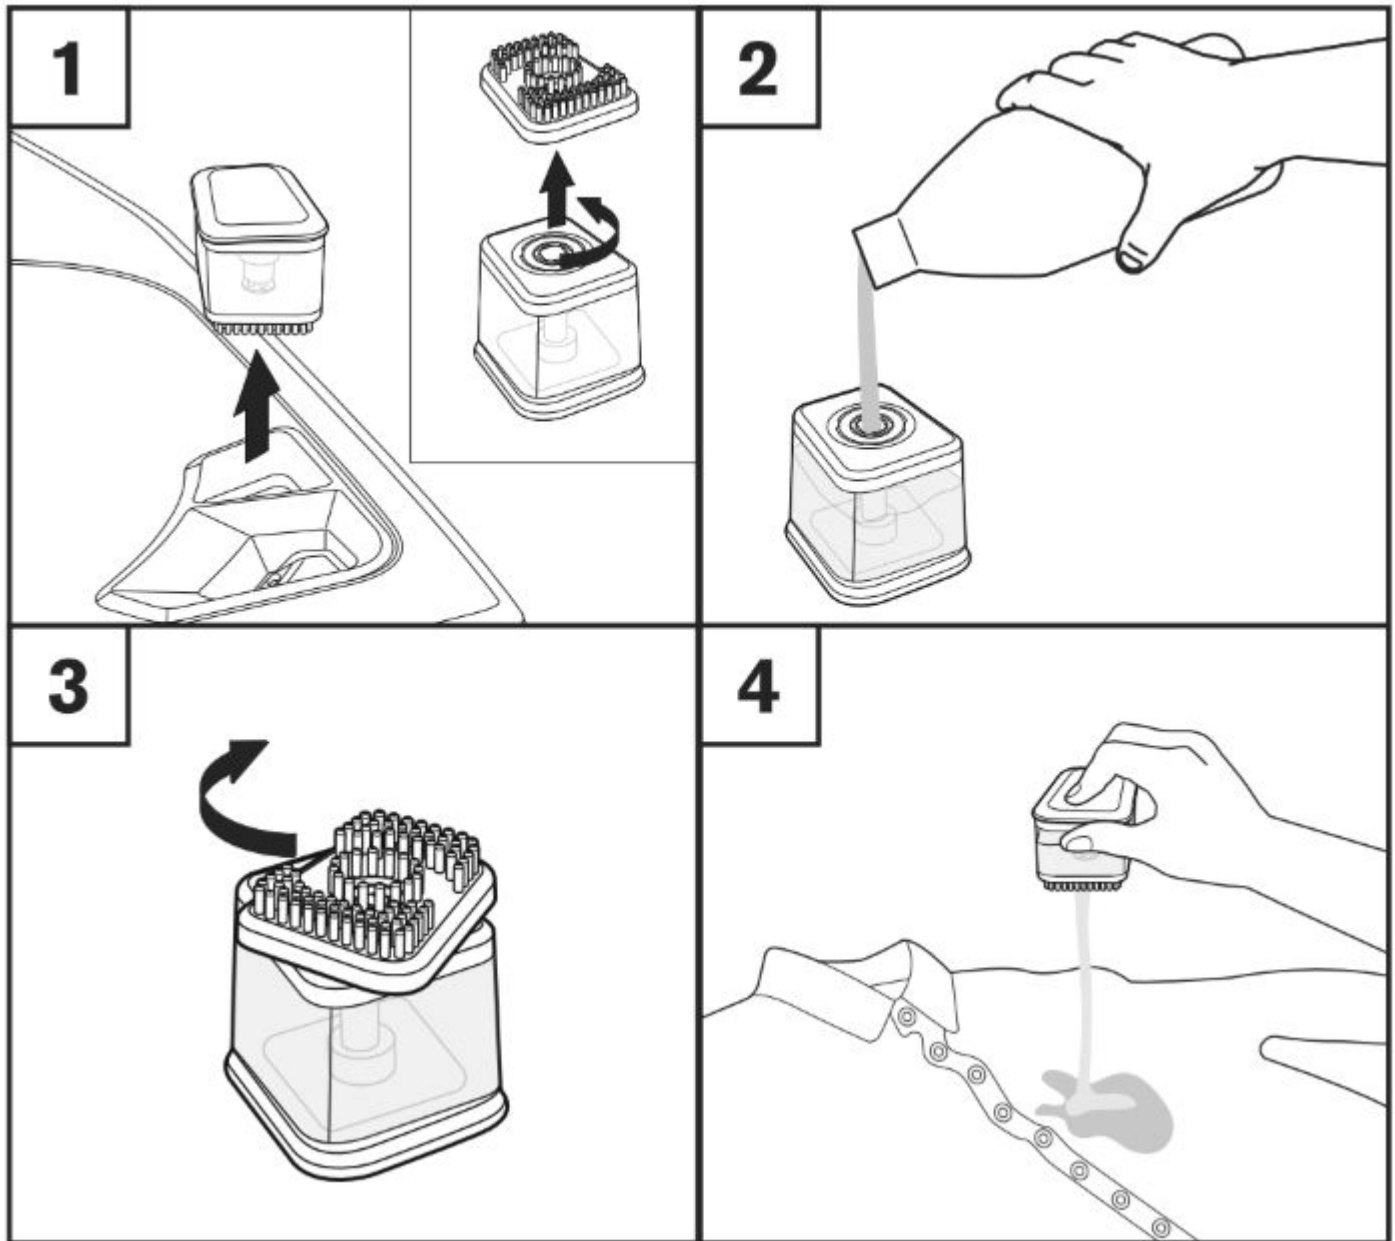

1. Turn brush end of fabric brush counterclockwise to remove.
2. Add liquid laundry detergent.
3. Turn brush end of fabric brush clockwise to close.
4. Push down on button located on top of the fabric brush to dispense detergent.