

Installation instructions

Zip HydroTap G5



Faucets - Touch Free Wave, Elite Plus, Classic Plus, Classic



English



French

Visit our website to
download the manuals

Table of contents

SECTION 1: Using these instructions	2
1.1 Using these instructions.....	2
SECTION 2: Performance data & regulatory standards	3
SECTION 3: Generic installation requirements	4
3.1 Tools needed for faucet installation	4
SECTION 4: Installation - Wave, Elite, Classic Plus, Classic	5
4.1 Positioning	5
4.2 Cut the hole & fit the spacer	5
4.3 Mount the faucet	6
4.4 Secure the faucet.....	6
4.5 Familiarize yourself with the faucet connections	6
4.6 Command Centre connections for the Wave, Elite, Classic Plus, Classic.....	7
SECTION 5: Cleaning and maintenance	7
5.1 Cleaning.....	7

SECTION 1: Using these instructions

1.1 Using these instructions

Please refer to all safety and installation requirements detailed in the Quick start guide provided with the HydroTap Command Centre, and HydroTap Command Centre installation instructions found online, prior to installation of, or any change to, the complete system.



WARNING




**Read the
instructions**

**Before commencing the installation, download
& read the HydroTap Command Centre
installation instructions**

SECTION 2: Performance data & regulatory standards

- The Wave XX, Classic XX, Classic Plus XX, and Elite Plus XX faucets have been certified by IAPMO R&T against NSF/ANSI Standard 42, NSF/ANSI Standard 53, NSF/ANSI Standard 372, CSA B483.1, ASSE 1087, and ASSE 1023 when used as part of the BCS60, BCS20, BCS Home, BC40, and BC Home systems.
-
- The Wave XX, Classic XX, Classic Plus XX, and Elite Plus XX faucets have been certified by IAPMO R&T against NSF/ANSI Standard 42, NSF/ANSI Standard 53, NSF/ANSI Standard 372, CSA B483.1, and ASSE 1087 when used as part of the CS100 and CS Home systems.
-
- XX = Chrome, Brushed Chrome, Matte Black, Rose Gold, Nickel, Brushed Nickel, Gunmetal Gray, Brushed Gold faucet finish options.

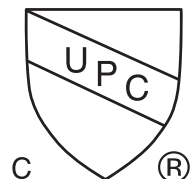

SECTION 3: Generic installation requirements

3.1 Tools needed for faucet installation

In addition to normal tools, the following (or equivalent equipment) will be required, (not supplied).

- 1 $\frac{3}{8}$ ", (35mm) diameter sheet metal hole punch for sinks.
- 1 $\frac{3}{8}$ ", (35mm) diameter hole saw for worktops.
- Tube spanner for fixing the tap assembly (supplied).




Be aware of the risks of hazards which could cause harm when using tools.

Assess the risks before starting the installation.

SECTION 4: Installation - Wave, Elite, Classic Plus, Classic

4.1 Positioning

 - Position the faucet such that it dispenses into the sink bowl with clearance for a cup or tea pot.
- Observe 3.9", (100mm), 360° clearance envelope for Wave only.
- Wave will not operate in temperatures under 50°F, (10°C).


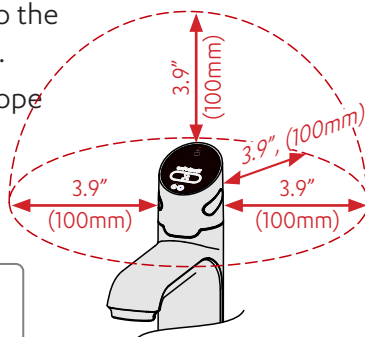


Wave clearance




Ensure that faucets are positioned to minimise the risks of scalding by dispensing boiling water while using the tap.

  Position Command Centre and faucet as close together as possible. See below.

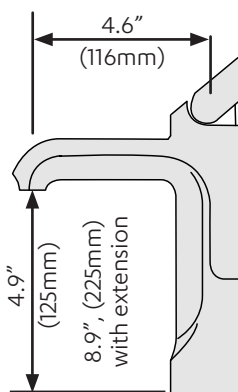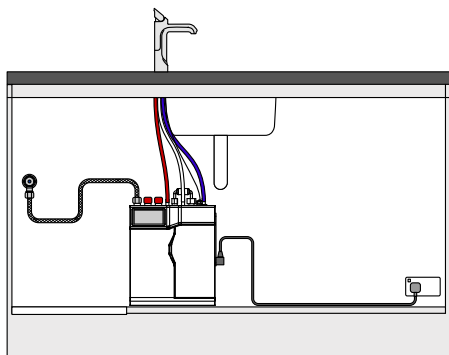


4.2 Cut the hole & fit the spacer

- Cut a 1 3/8", (35mm) hole in the worktop / sink.
- Apply a light smearing of silicone sealant on the underside of the spacer to ensure a watertight fit.

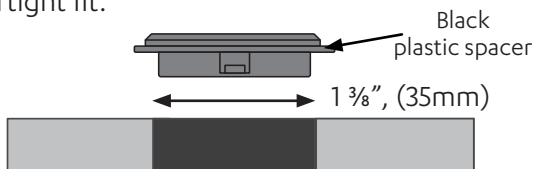


4.3 Mount the faucet

 - Pass the tubes and USB cable through the $1\frac{3}{8}$ " (35mm) hole.

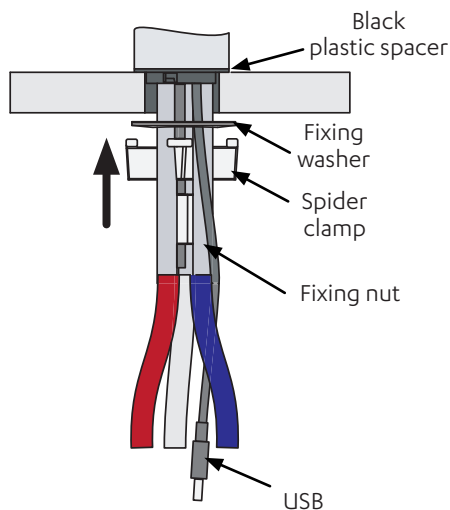


4.4 Secure the faucet

 - Use a tube spanner to secure the tap in place.

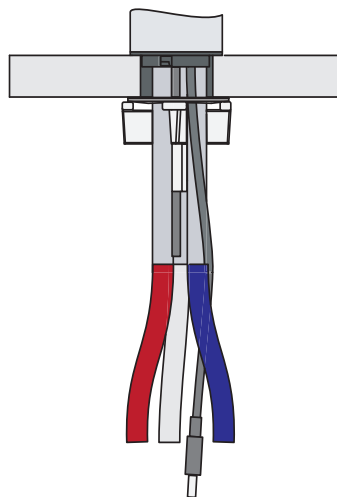


4.5 Familiarize yourself with the faucet connections

 
Boiling chilled

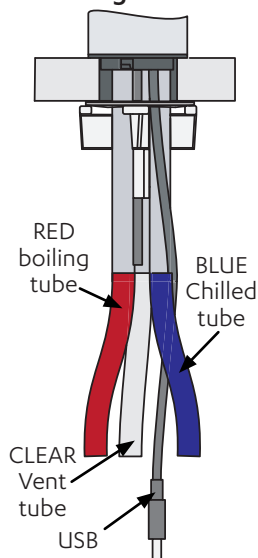

Chilled sparkling

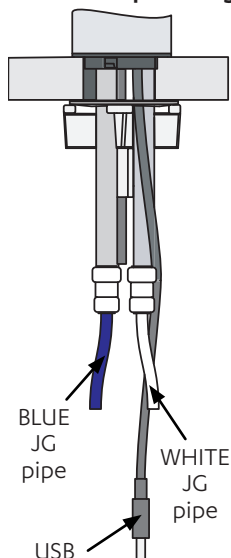 

Boiling chilled sparkling

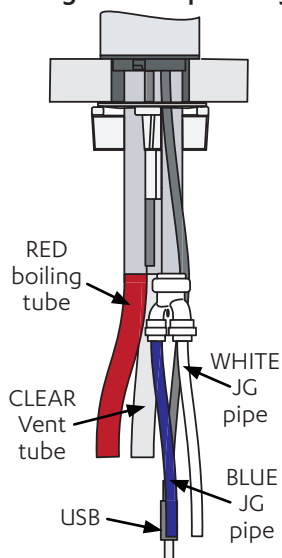 

SECTION 4: Installation - Wave, Elite, Classic Plus, Classic

4.6 Command Centre connections for the Wave, Elite, Classic Plus, Classic

USB	Connected to the faucet.
Boiling out	Red silicone tube from faucet. Cut to length.
Chilled out	(BC) Blue silicone tube from faucet, (BCS, CS) Blue JG pipe from faucet. Cut to length.
Vent	Clear silicone tube from faucet. Cut to length.
Sparkling out	White JG pipe from faucet. Cut to length.

SECTION 5: Cleaning and maintenance

5.1 Cleaning

- Wipe surfaces with a damp cloth and then wipe dry with a clean, dry cloth.



IMPORTANT!

- Do not use air-drying disinfectant sprays.
- Do not use abrasives to clean the sensor lenses at the sides, top and rear of the Touch-Free Wave.
- This could cause permanent malfunction and void warranty.



Manufactured by Zip Heaters (Australia) Pty Ltd

67 - 77 Allingham Street,
Condell Park NSW 2200
Australia

Distributed in US and Canada by: Culligan International Company

9399 West Higgins Road, Suite 1100
Rosemont, IL 60018
www.na.zipwater.com

Call US Toll Free 1-833-233-2358 for assistance, service, spare parts or enquiries.

As Zip policy is one of continuous product improvement, changes to specifications may be made without prior notice. Images in this booklet have been modified and may not be true representations of the finished goods.

The terms “Zip” and “HydroTap” are registered trade marks of Zip Heaters (Aust) Pty Ltd.

The Wave XX, Classic XX, Classic Plus XX, and Elite Plus XX faucets have been certified by IAPMO R&T against NSF/ANSI Standard 42, NSF/ANSI Standard 53, NSF/ANSI Standard 372, CSA B483.1, ASSE 1087, and ASSE 1023 when used as part of the BCS60, BCS20, BCS Home, BC40, and BC Home systems.

The Wave XX, Classic XX, Classic Plus XX, and Elite Plus XX faucets have been certified by IAPMO R&T against NSF/ANSI Standard 42, NSF/ANSI Standard 53, NSF/ANSI Standard 372, CSA B483.1, and ASSE 1087 when used as part of the CS100 and CS Home systems.

XX = Chrome, Brushed Chrome, Matte Black, Rose Gold, Nickel, Brushed Nickel, Gunmetal Gray, Brushed Gold faucet finish options.

© 2021 Zip Heaters (Aust) Pty Ltd

