

Installation instructions

Zip HydroTap G5



Faucets - Arc & Cube



Table of contents

SECTION 1: Using these instructions	2
1.1 Using these instructions.....	2
SECTION 2: Performance data & regulatory standards	3
SECTION 3: Generic installation requirements	4
3.1 Tools needed for faucet installation	4
SECTION 4: Installation - Arc & Cube	4
4.1 Positioning	4
4.2 Select height & spout position	5
4.3 Set up the height and spout position	5
4.4 Cut the hole	6
4.5 Mount the faucet.....	6
4.6 Fit the tube kit	6
4.7 Secure the tube kit & fit the label.....	7
4.8 Command Centre connections.....	7
SECTION 5: Cleaning and maintenance	7
5.1 Cleaning.....	7

SECTION 1: Using these instructions

1.1 Using these instructions

Please refer to all safety and installation requirements detailed in the Quick start guide provided with the HydroTap Command Centre, and HydroTap Command Centre installation instructions found online, prior to installation of, or any change to, the complete system.



WARNING




**Read the
instructions**

Before commencing the installation, download & read the HydroTap Command Centre installation instructions

SECTION 2: Performance data & regulatory standards

- The ARC XX and Cube XX faucets have been certified by IAPMO R&T against NSF/ANSI Standard 42, NSF/ANSI Standard 53, NSF/ANSI Standard 372, CSA B483.1, ASSE 1087, and ASSE 1023 when used as part of the BCS60, BCS20, BCS Home, BC40, and BC Home systems.
-
- The ARC XX and CUBE XX faucets have been certified by IAPMO R&T against NSF/ANSI Standard 42, NSF/ANSI Standard 53, NSF/ANSI Standard 372, CSA B483.1, and ASSE 1087 when used as part of the CS100 and CS Home systems.
-
- XX = Chrome, Brushed Chrome, Matte Black, Rose Gold, Nickel, Brushed Nickel, Gunmetal Gray, Brushed Gold faucet finish options.

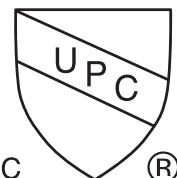

SECTION 3: Generic installation requirements

3.1 Tools needed for faucet installation

In addition to normal tools, the following (or equivalent equipment) will be required, (not supplied).

- 1 $\frac{3}{8}$ ", (35mm) diameter sheet metal hole punch for sinks.
- 1 $\frac{3}{8}$ ", (35mm) diameter hole saw for worktops.
- Tube spanner for fixing the tap assembly.



Be aware of the risks of hazards which could cause harm when using tools.

Assess the risks before starting the installation.

SECTION 4: Installation - Arc & Cube



4.1 Positioning

Position the faucet such that it dispenses into the sink bowl with clearance for a cup or tea pot.




Ensure that faucets are positioned to minimise the risks of scalding by dispensing boiling water while using the HydroTap.

Position Command Centre and faucet as close together as possible. See below.

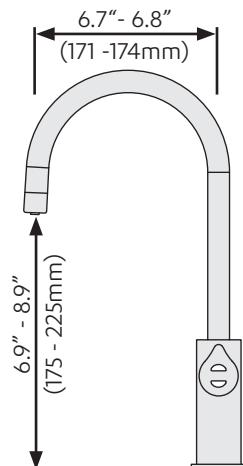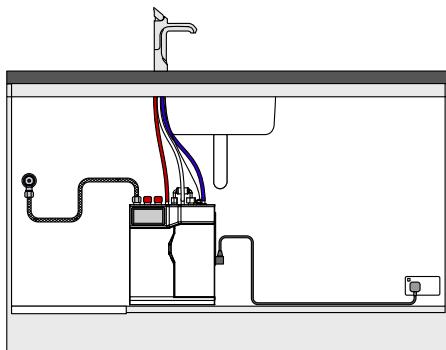


4.2 Select height & spout position

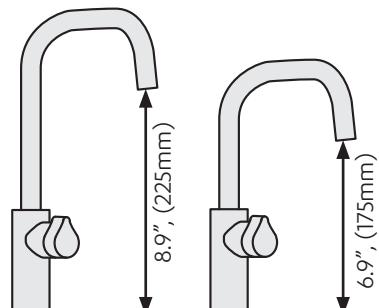

2 fixed height options


!* see 4.1

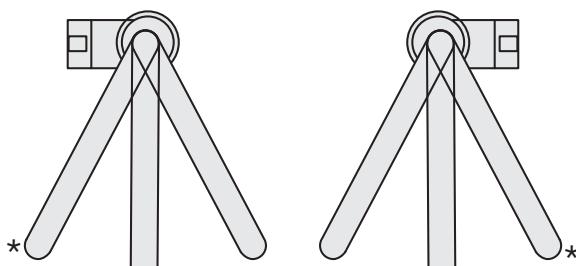

6 fixed position options

4.3 Set up the height and spout position

- Remove spout locating screws, lower spout to expose the spring clip.
- To reposition spout, prise open spring clip.
- Slide spring clip up/down to engage selected holes.
- Ensure dimples engage simultaneously with the two selected holes.
- Raise the spout (ensure USB lead fits in undercut and open ends of the clip).
- Align clip with locating holes, & refit the 2 x locating screws.

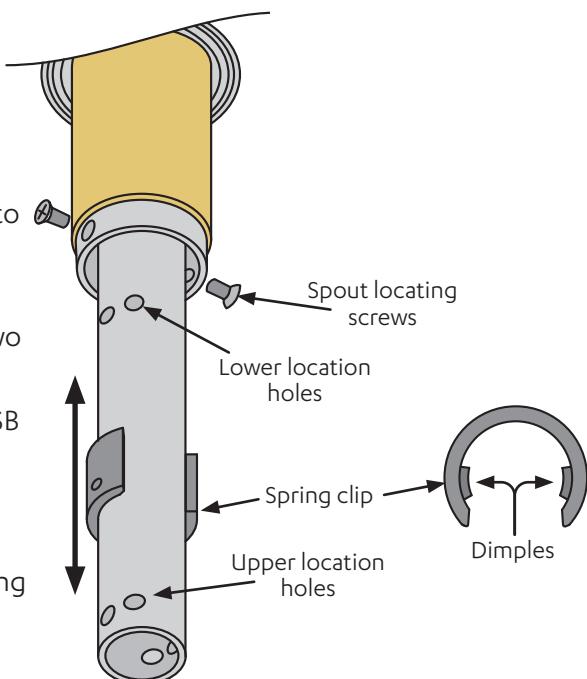


4.4 Cut the hole

- Cut a $1\frac{3}{8}$ ", (35mm) hole in the worktop / sink.
- Make sure the faucet location will allow the spout to drain into the sink.




4.5 Mount the faucet

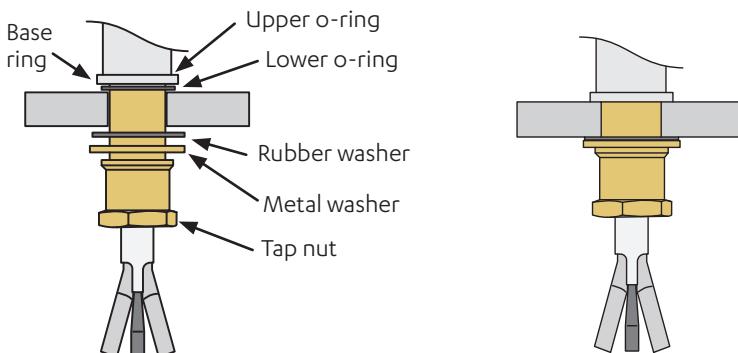


4.6 Fit the tube kit

vent connector must be fitted


Boiling, chilled sparkling

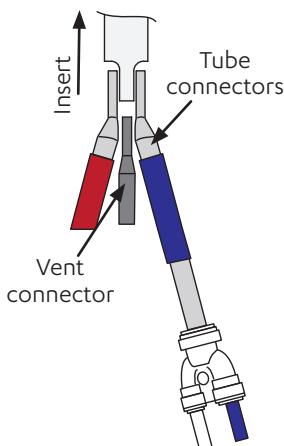

Boiling chilled

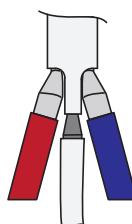


Chilled sparkling

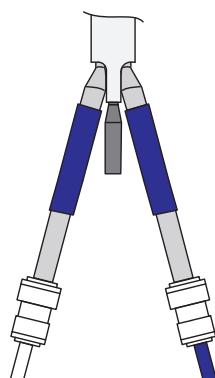

SECTION 4: Installation - Arc & Cube

4.7 Secure the tube kit & fit the label

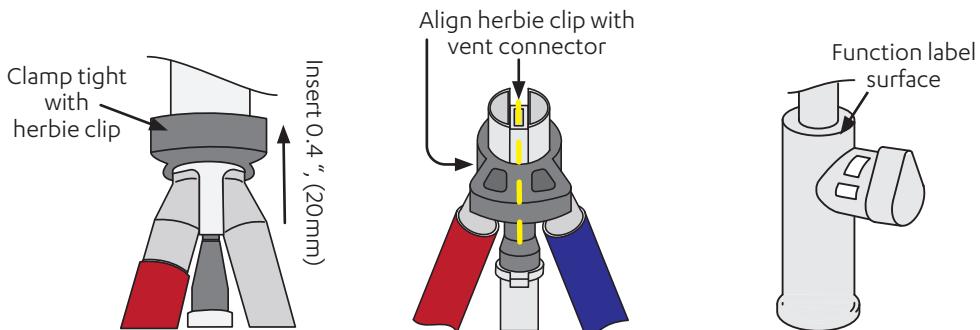

4.8 Command Centre connections

USB	Connected to the faucet.
Boiling out	Red silicone tube from faucet. Cut to length.
Chilled out	(BC) Blue silicone tube from faucet, (BCS, CS) Blue JG pipe from faucet. Cut to length.
Vent	Clear silicone tube from faucet. Cut to length.
Sparkling out	White JG pipe from faucet. Cut to length.

SECTION 5: Cleaning and maintenance

5. 1 Cleaning

- Wipe surfaces with a damp cloth and then wipe dry with a clean, dry cloth.



IMPORTANT!

- Do not use air-drying disinfectant sprays.
- This could cause permanent malfunction and void warranty.



Manufactured by Zip Water (Australia) Pty Ltd

67 - 77 Allingham Street,
Condell Park NSW 2200
Australia

Distributed in US and Canada by: Culligan International Company

9399 West Higgins Road, Suite 1100
Rosemont, IL 60018
www.us.zipwater.com

Call US Toll Free 1-833-233-2358 for assistance, service, spare parts or enquiries.

As Zip policy is one of continuous product improvement, changes to specifications may be made without prior notice. Images in this booklet have been modified and may not be true representations of the finished goods.

The terms "Zip" and "HydroTap" are registered trade marks of Zip Water (Aust) Pty Ltd.

The ARC XX and CUBE XX faucets have been certified by IAPMO R&T against NSF/ANSI Standard 42, NSF/ANSI Standard 53, NSF/ANSI Standard 372, CSA B483.1, ASSE 1087, and ASSE 1023 when used as part of the BCS60, BCS20, BCS Home, BC40, and BC Home systems. See Performance Data Sheets for specific performance claims.

The ARC XX and CUBE XX faucets have been certified by IAPMO R&T against NSF/ANSI Standard 42, NSF/ANSI Standard 53, NSF/ANSI Standard 372, CSA B483.1, and ASSE 1087 when used as part of the CS100 and CS Home systems. See Performance Data Sheets for specific performance claims.

XX = Chrome, Brushed Chrome, Matte Black, Rose Gold, Nickel, Brushed Nickel, Gunmetal Gray, Brushed Gold faucet finish options.

