Ice Machine Cleaning & Sanitizing


HOSHIZAKI

KMS-1122MLH(3)

The icemaker must be cleaned & sanitized at least once a year.

Cleaning Prep:

- 1 Remove the **Front Panel**, move the control switch to **OFF**. After <u>3 min.</u>, move the control switch to **ICE**, then replace the **Front Panel**.
- After 3 min., remove the Front Panel, move the control switch to OFF. This removes the cubes from the evaporator.
- 3 Remove all ice from the dispenser unit/ice storage bin.
- ATTENTION! IF ON DISPENSER, turn off the dispenser power supply after dispensing all the ice.

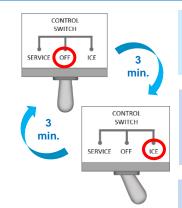

Front Panel



Do not leave icemaker unattended when panels are off







Sanitizing:

 Dilute 5.25% chlorine bleach* with warm water (see Table below)

KMS-1122MLH(3)	
Bleach	2.5 fl. oz (74 ml)
Warm Water	5 gal. (19 l)


* Use bleach without additives.

- Remove the front, apron, top, left, & left insulation panels
- Pour the sanitizing solution into the water tank
- Replace all the panels, except the front panel
- Move service switch to WASH and control switch to SERVICE, replace the front panel
- After 15 minutes, remove front panel
- Move service switch to DRAIN, replace the front panel

 
18

19

- After 2 minutes, remove front panel
- Move control switch to OFF

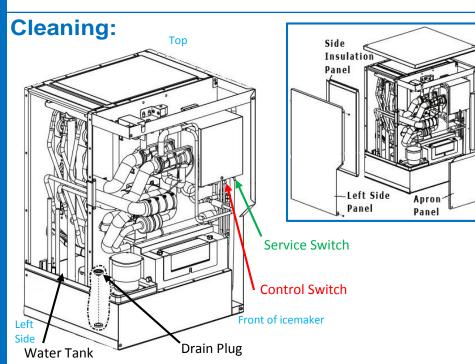





6 Dilute Hoshizaki **Scale Away** with warm water (see Table below). Remove the **Front, Apron, Top, Left, & Left Insulation Panels** and pour cleaning solution into the water tank.

KMS-1122MLH(3)	
Scale Away	27 fl. oz (800 ml)
Warm Water	5 gal. (19 l)




After 2 min.

G continued on the back...

- In bad water conditions, a more thorough cleaning may be required. Move control switch to OFF, then turn off the power supply. Dilute 5 oz. of Scale Away to 1 gallon of warm water. Remove and clean the float switch assembly*, water supply tubes, spray tubes, and spray guides. Rinse thoroughly, then replace in their correct positions. Turn the power supply back on. Otherwise, continue to Step 8.
 - Remove retainer rod (take care not to bend excessively) from bottom of the float switch housing & clean all float parts.
- 8 Replace all the Panels, except the Front Panel. Move the service switch to WASH, and the control switch to **SERVICE**. Replace the **Front Panel**.
- 9 After 30 minutes, remove the Front Panel, move the service switch to DRAIN. Replace the Front Panel.
- **ATTENTION!** To prevent damage to the water pump, do not leave the control switch on SERVICE for extended periods when water tank is empty.




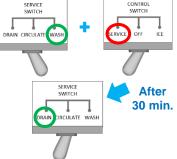



- 10 After 2 minutes, remove the Front Panel, move the control switch to ICE. Replace the Front Panel.
- After 3 minutes, move the service switch to WASH, and the control switch to SERVICE. Replace the Front Panel.
- 12 After 5 minutes, remove the Front Panel, move the service switch to **DRAIN**. Replace the **Front Panel**
- 43 After 2 minutes, remove the Front Panel, move the control switch to OFF.
- 14 Repeat 3x (Steps 10 thru 13) to rinse thoroughly. Continue to Sanitation - Step (5) on front...



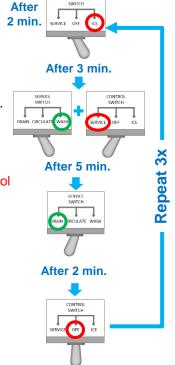

F sanitizing continued...

RINSE 1: (Steps 20-22)



- Move control switch to ICE. replace front panel
- · After 3 minutes, remove the front panel
- Move service switch to WASH and control switch to SERVICE, replace the front panel
- After 5 minutes, remove the 21 front panel
- Move service switch to DRAIN, replace the front panel
- After 2 minutes, remove the front panel
- Move control switch to OFF, replace the front panel

RINSE 2:



22

- Repeat RINSE 1 (Steps 20–22) for complete ice/food safety
- Clean the dispenser unit / ice storage bin liner with a neutral cleaner (dish soap)
- Rinse thoroughly
- Move control switch to ICE, 25 replace front panel



DOWNLOAD COMPLETE INSTRUCTION MANUAL:



hoshizakiamerica.com/manuals

Type in the model number of your icemaker (including dashes) to download manuals

CLEANING SCHEDULE

- Scoop
- Water Filters
- Exterior
- Bin Door/Top Kit
- Icemaker/Bin
- Water Supply Inlet
- Condenser
- Water Hoses
 - Inspect. Replace if reg'd
- DAILY | MONTHLY | YEARLY

Dish soap, rinse well

Check psi, change if req'd

Dish soap & damp cloth

Warm water & clean cloth

Follow these instructions

Inspect. Clean with brush

Clean inlet screen



ATTENTION!

DO NOT use ammonia type cleaners. Can cause damage to icemaker

WEAR liquid-proof gloves and goggles to protect skin & eyes from cleaning & sanitizing chemicals



ATTENTION!

IF ICEMAKER IS ON DISPENSER, remember to turn on the dispenser after cleaning