


KitchenAid®

**30" 4 Element Electric Downdraft
Slide-In**

MODELS:

KSEG950ESS0 (Stainless)


COOKTOP PARTS

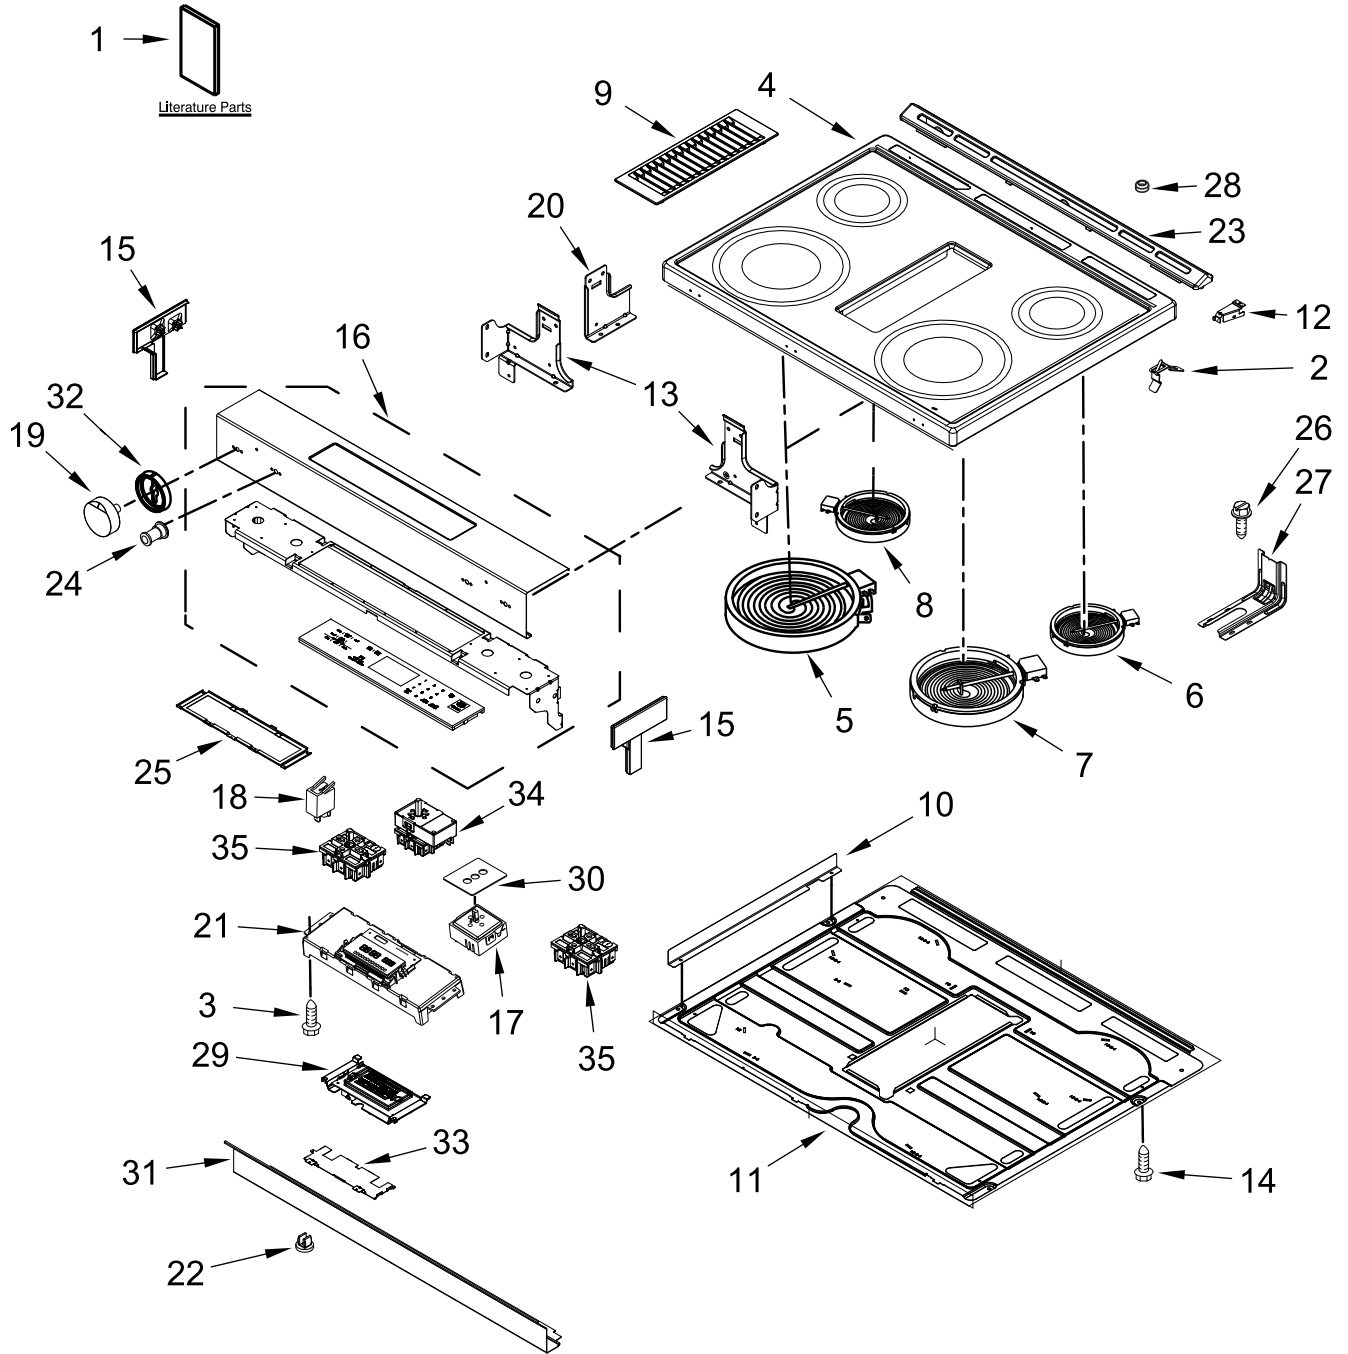

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	13	W10289169	Support, Cooktop (Right)	27	W10606241	Bracket, Anti-Tip
	W10787365	Installation Instructions		W10289170	Support, Cooktop (Left)	28	W10664705	Bumper
	W10750369	User Instructions	14	3196173	Screw	29	W10603096	Assembly, Display
	W10665227	Sheet, Tech	15		Endcap	30	7201P077-60	Gasket, Infinite Switch
	9762761	Tips, Safe Cooking (English)		W10555937	Stainless (Left)	31		Console, Lower Panel
	W10065852	Tips, Safe Cooking (French)		W10555940	Stainless (Right)		W10743276	Stainless
	W10400064	Guide, Quick Start (English)	16		Console, Panel	32		Bezel
	W10400065	Guide, Quick Start (French)		W10697331	Stainless		W10663809	Stainless
	W10750127	Wiring Diagram	17	W10578768	Switch, Infinite (Single) (Right Rear)	33	W10558372	Bracket, Control
	W10765779	Template, Downdraft Installation	18	8523265	Light, Indicator (125V)	34	W10437092	Switch, Infinite (Dual) (Left Front)
2	W10225448	Spring, Element	19		Knob	35	W10437094	Switch, Infinite (Hyper) (Right Front and Left Rear)
3	3196178	Screw		W10505762	Stainless (Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
4		Cooktop		W10505763	Stainless (Left Rear)		W10580254	Harness, Main
	W10669572	Stainless		W10579764	Stainless (Right Front)		W10575120	Harness, Keypad
5	W10275048	Element (3000/1400W) (Left Front)		W10696937	Stainless (Left Front)		W10598170	Harness, Display
6	8273994	Element (1200W) (Right Rear)	20	W10598048	Bracket, Console (Center)		W10580264	Harness, Console
7	W10251108	Element (3200W) (Right Front)	21	W10658111	Control MRC2		W10580253	Harness, Cooktop
8	W10342780	Element (1300W) (Left Rear)	22	W10645947	Grommet		W10664316	Clip, Harness
9	W10575593	Air Grill	23		Vent, Trim Top			
10	W10613286	Bracket, Radiant		W10636529	Stainless			
11	W10561812	Pan, Radiant	24	3196068	Lens, Indicator			
12	W10162253	Brace, Corner (Left)	25	W10555923	Bracket, User Interface			
	W10162252	Brace, Corner (Right)	26	7101P485-60	Screw, Anti-Tip Kit			


CHASSIS PARTS

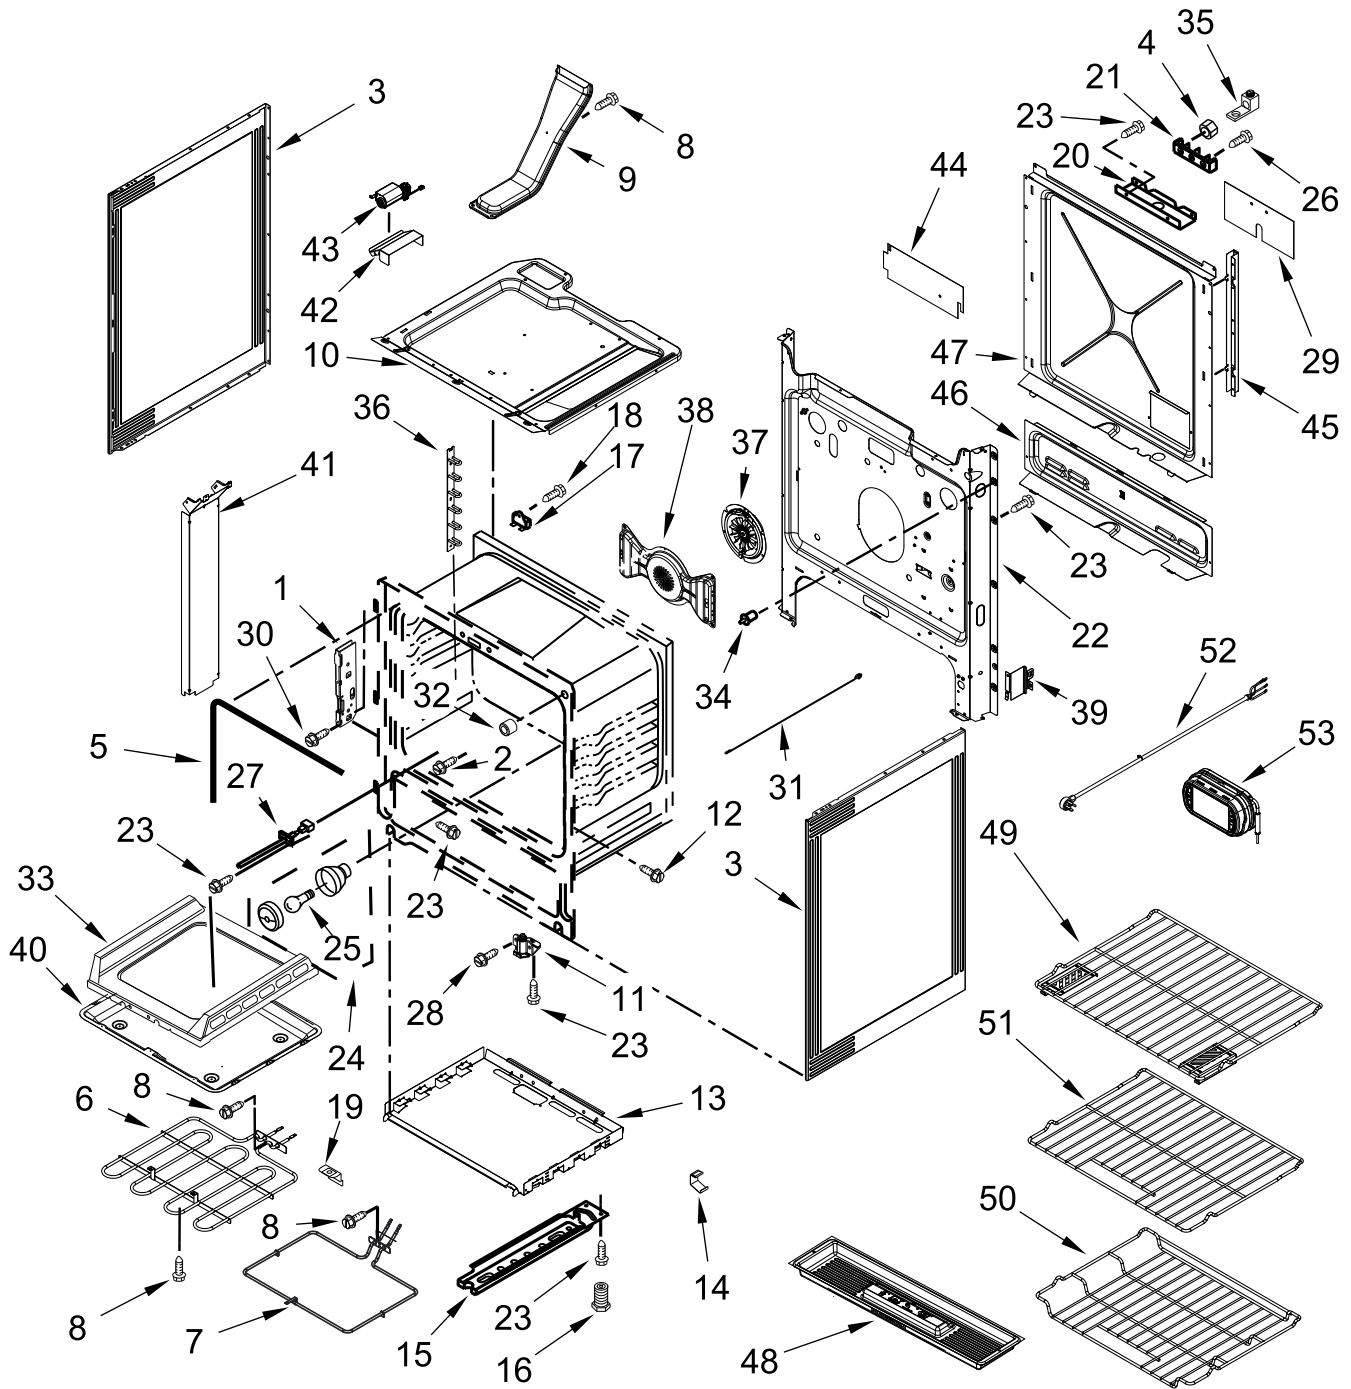

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	24	W10454648	Assembly, Light	49	W10554007	Rack, Steam
2	3196560	Screw	25	311255	Bulb, Oven Light	50	W10554006	Rack, Maximum Capacity
3		Panel, Side	26	3400016	Screw	51	W10554008	Rack, Sliding
	W10162245	Black	27	W10586204	Sensor	52	W10233363	Cord, Power
4	3400029	Nut	28	3196169	Screw	53		The wireless meat probe is a licensed product and covered by the manufacturer total replacement warranty. If the customer has any questions or concerns regarding the accessory please have them call KitchenAid Customer Satisfaction Center toll-free at 1-800-541-6390 or visit our web site at www.KitchenAid.com . No warranty claims will be paid for the wireless meat probe or will this be a service part.
5	W10162385	Gasket, Door	29	W10655441	Shield, Power Cord			INSULATION
6	W10544952	Element, Broil	30	W10031780	Screw	W10289173		Insulation, Wrap
7	W10774342	Element, Bake	31	W10273192	Rod, Door Switch	W10575374		Insulation, Bottom
8	W10362924	Screw	32	9758701	Spacer, Door	4820F015-59		Insulation, Strap
9	W10613792	Assembly, Flue	33	W10774446	Bottom, Oven	W10162240		Insulation, Back
10	W10289168	Box, Burner	34	W10627802	Switch, Door	7111P017-60		Clamp, Wire
11	W10341186	Assembly, Front Foot	35	W10281322	Kit, Bare Wire Adapter Block			
12	W10067840	Screw	36	W10603482	Rack, Ladder			
13	W10541959	Shield, Bake	37	W10563084	Assembly, Convection			
14	W10137382	Clip, Panel	38	W10346153	Baffle, Full Convection			
15	W10390008	Assembly, Base Rail (Left)	39	W10273002	Bracket, Oven Support			
	W10390007	Assembly, Base Rail (Right)	40	W10346147	Pan, Bake			
16	W10058460	Foot, Leveling	41	W10162255	Duct, Cover			
17	3196548	Fuse, Thermal	42	W10162254	Duct, Cooling			
18	3196172	Screw	43	W10162259	Assembly, Cooling Fan			
19	W10035900	Support, Oven Bottom	44	W10655485	Shield, Wire			
20	3186034	Bracket, Service	45	W10162241	Channel, Rear			
21	W10245259	Block, Terminal	46	W10162248	Cover, Wire			
22	W10162247	Main, Back Downdraft	47	W10289172	Cover, Back			
23	3196178	Screw	48	W10686408	Kit, Reservoir (Steam Rack)			

BLOWER PARTS

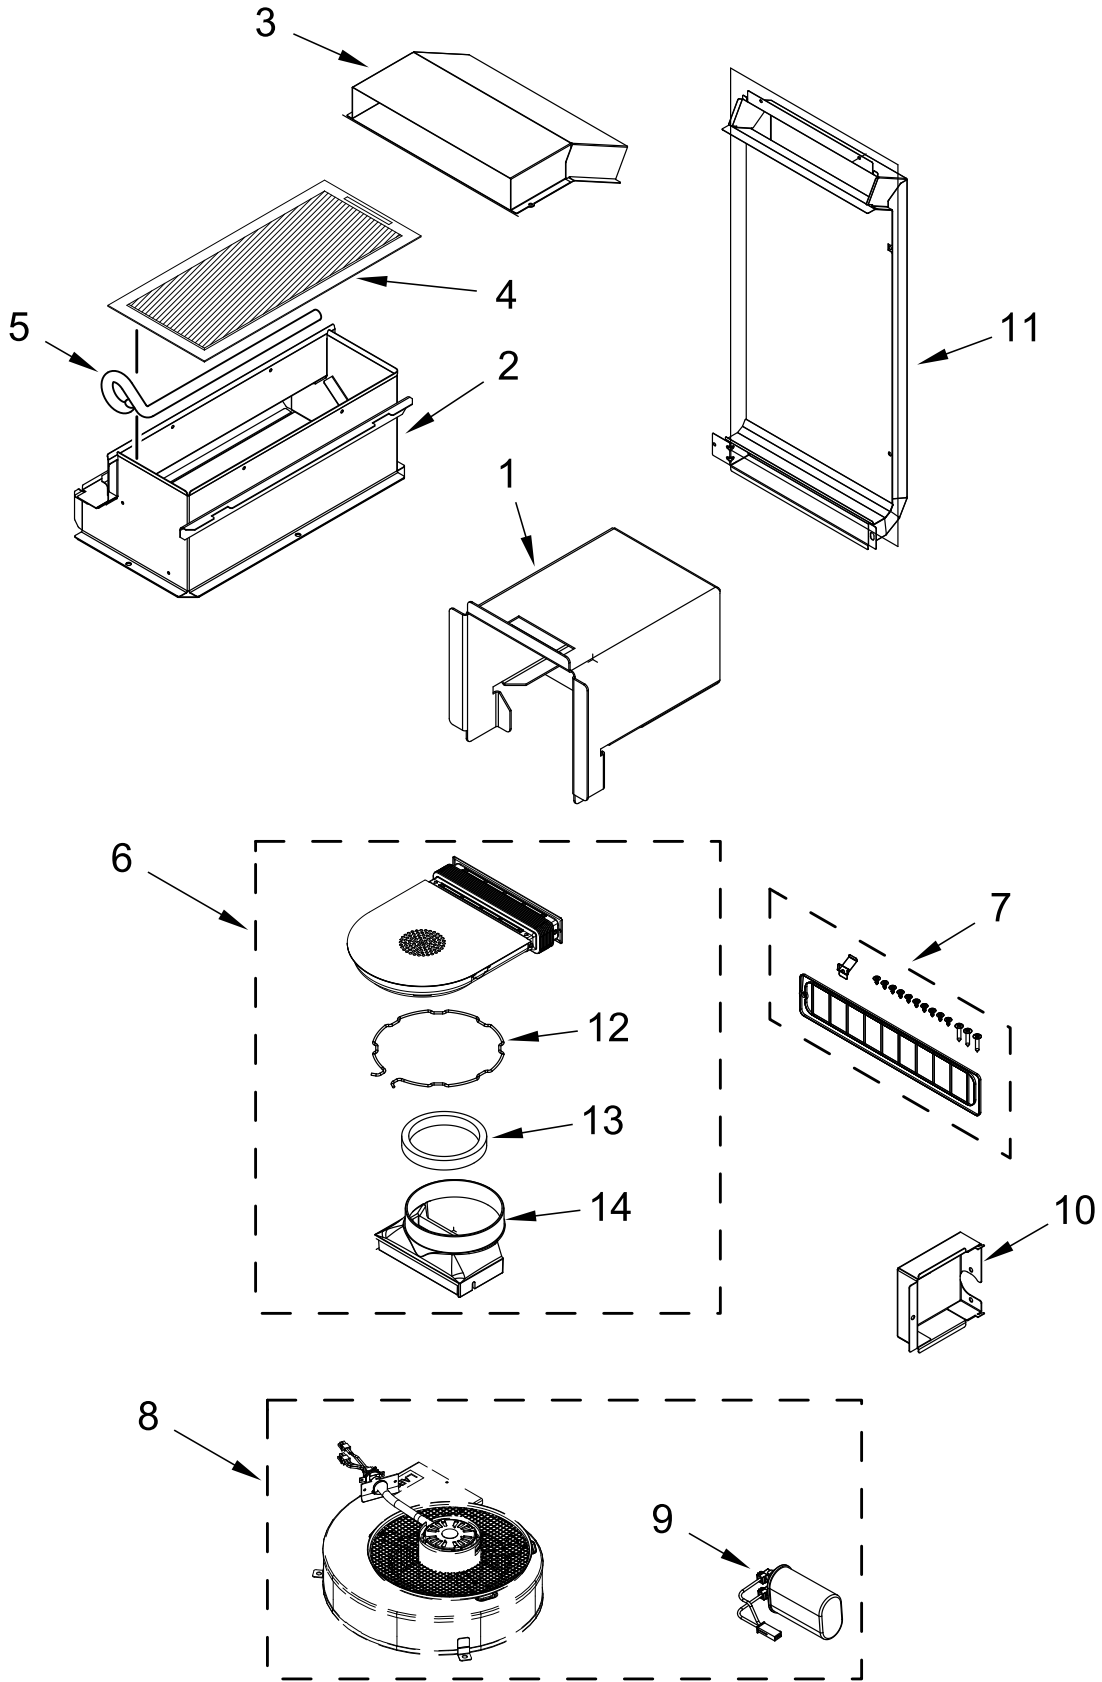


BLOWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10661156	Enclosure, Blower
2	W10572224	Plenum, Intake
3	W10572145	Plenum, Upper
4	W10575379	Grease, Filter
5	W10575393	Guard, Filter
6	W10789431	Kit, Plenum Transition

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10789391	Kit, Blower Installation
8	W10789388	Kit, Blower
9	W10788527	Capacitor, Assembly
10	W10787917	Cover, Capacitor
11	W10661835	Plenum, Side

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10702071	Retainer
13	W10759311	Gasket, Blower
14	W10642096	Adaptor, Exhaust

DOOR PARTS

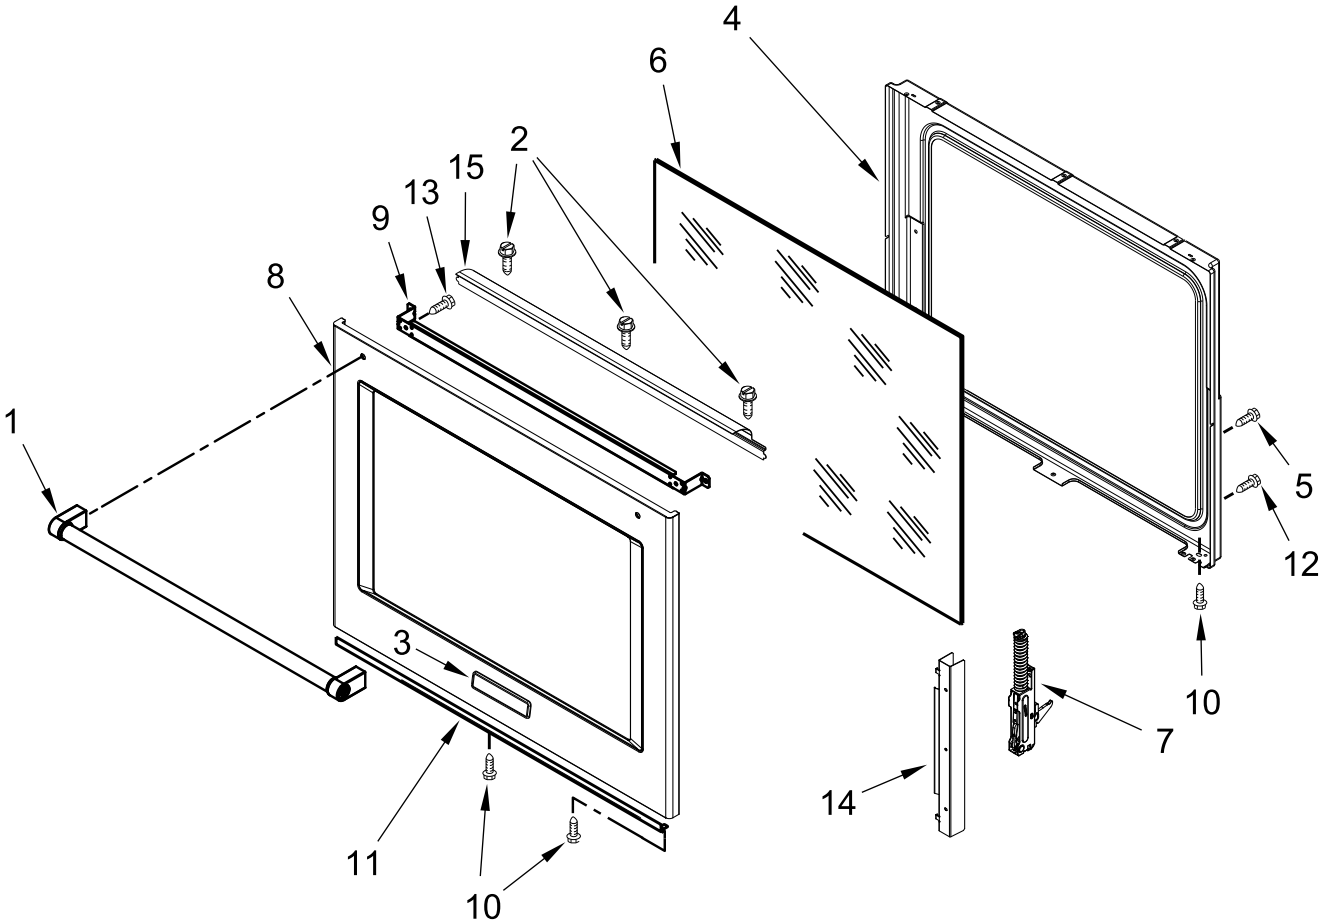


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Door
	W10551000	Stainless
2	9780274	Screw
3		Badge
	W10518672	Grey
4	W10541882	Liner, Door
5	W10031790	Screw
6	W10541888	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10388635	Hinge, Door (Active)
8		Panel, Door
	W10634271	Stainless
9	W10541911	Bracket, Glass Upper
		Handle
10	W10327235	Screw
11	W10541885	Support, Glass
12	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	8533988	Screw
14	W10541883	Hinge, Support Rail
15		Scoop, Door
	W10551024	Stainless

DRAWER PARTS

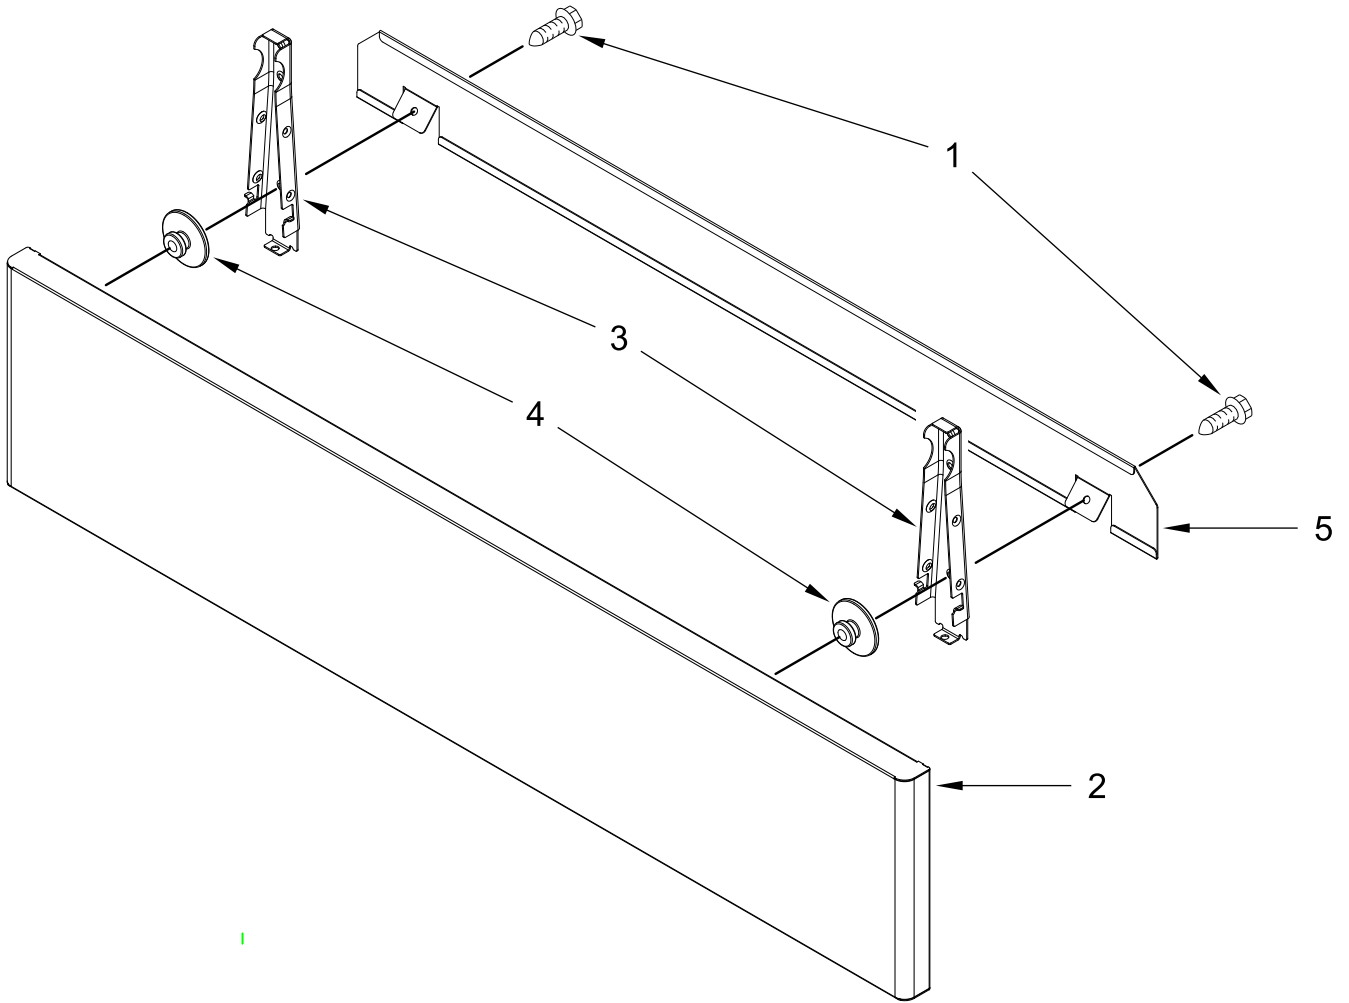

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196169	Screw
2		Panel, Drawer Front
	W10634248	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10318026	Bracket, Mounting
4	8004P024-60	Spacer, Side Panel
5	W10763800	Baffle, Downdraft Drawer Panel

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS / POLISHES
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355010	Cleaner, Kitchen & Appliance
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
	242905	Kit, Canning Unit
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless