SAMSUNG

Product Guide

6000 Series Laundry

WF45T6000AW - Washer DVE45T6000W - Electric Dryer DVG45T6000W - Gas Dryer

Available in White



6000 Washer and Dryer Product Guide

Table of Contents

WF45T6000AW - Front Load Washer

Product Overview				
Product Overview	4			
Carousel Image Order and Assets	5			
Product Messaging				
Core Messaging	7			
Features and Benefits	8			
Product Specs				
Related Products	12			
Spec Sheet	13			
Energy Guide and User Manual	14			
Feature Icons	16			

DVE45T6000W - Front Load Electric Dryer DVG45T6000W - Front Load Gas Dryer

Product Overview	
Product Overview	1
Carousel Image Order and Assets	1
Product Messaging	
Core Messaging	2
Features and Benefits	2
Product Specs	
Related Products	2
Spec Sheets	2
User Manual	2
Feature Icons	30

Product Overview

WF45T6000AW - 4.5 cu. ft. Front Load Washer with Vibration Reduction Technology+

Product Overview

Product Title

4.5 cu. ft. Front Load Washer with Vibration Reduction Technology+

Product Short Description

Samsung's Front Load washer offers Vibration Reduction Technology+ and Self Clean+ to eliminate 99% of bacteria from the drum.¹

Product Long Description

Samsung's Energy Star® Certified Front Load washer has 4.5 cu. ft. capacity to fit more in every load and cut down on laundry time. It is equipped with Vibration Reduction Technology+ to reduce noise for quiet washing and features Self Clean+ to eliminate 99% of bacteria that can form in the drum.¹

¹Based on testing by Intertek of the Self Clean+ cycle on the WF6000R.





White

WF45T6000AW



Carousel Image Order

Easy Ads links


http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658559408










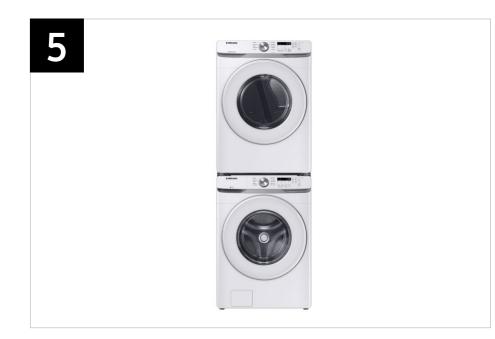

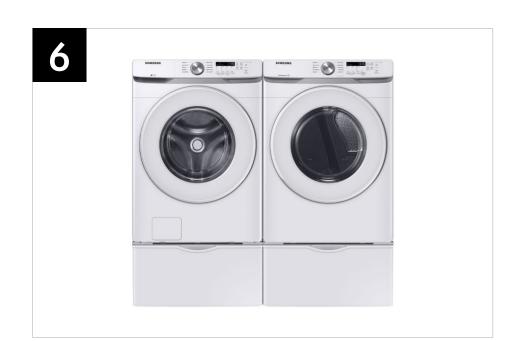













Product Messaging

WF45T6000AW - 4.5 cu. ft. Front Load Washer with Vibration Reduction Technology+

Core Messaging

Priority	Feature	Short Copy (< 65 Characters)	Long Copy (< 300 Characters)
1	Large 4.5 cu. ft. Capacity	Fewer loads, less time in the laundry room.	Fewer loads, less time in the laundry room, and more time doing the things you love.
Signature 2	Vibration Reduction Technology+	Reduces noise and vibration.	Do your laundry without disturbing anyone at any time and in any place. Innovative Vibration Reduction Technology+ reduces noise and vibration for quiet washing.
Sign	Self Clean+	Eliminates 99% of bacteria* in the drum. *Based on testing by Intertek of the Self Clean+ cycle on the WF6000R.	Keep your washer fresh and clean with Self Clean+ technology, which eliminates 99% of bacteria* that can form in any washer drum. Self Clean+ will notify you every 40 wash cycles when it is time for a cleaning. *Based on testing by Intertek of the Self Clean+ cycle on the WF6000R.
4	ENERGY STAR® Certified*	Eco-friendly and energy-efficient. *Visit www.energystar.gov for more information on ENERGY STAR® guidelines.	ENERGY STAR®* certified, so you can save money by using less energy without sacrificing performance or functionality. *Visit www.energystar.gov for more information on ENERGY STAR® guidelines.
5	Smart Care	Easy troubleshooting from the convenience of your smartphone.* *Requires Samsung Smart Washer/Dryer App. The Samsung Smart Washer/Dryer App supports Android OS 2.3.6 or later and iOS 3 or later for iPhone models. Smart Washer/Dryer App available in App Store and Play Store.	Easy troubleshooting from the convenience of your smartphone.* Smart Care interacts with your washer and dryer to perform an immediate diagnosis and offer quick solutions. *Requires Samsung Smart Washer/Dryer App. The Samsung Smart Washer/Dryer App supports Android OS 2.3.6 or later and iOS 3 or later for iPhone models. Smart Washer/Dryer App available in App Store and Play Store.
6	Swirl+ Drum Interior	Improved drum pattern extracts more water more quickly.	Improved drum pattern extracts more water more quickly during the rinsing cycle and prevents fabrics from snagging during washing.
Features 4	Closet-Depth Fit*	Space-saving design for flexible installation in any space. *Designed to fit a 40" installation depth.	Give your home a sleek, modern look with a seamless design. This washer has a shallow depth, so it fits within your existing laundry space without sacrificing any capacity, thanks to our new, wider drum. Also, a new control panel design provides better visibility, so it is easy to use when stacked. *Designed to fit a 40" installation depth.
	UL Certified	Wash and spin action tested independently to 3000 cycles.	N/A
Secondary	Accessibility (ADA Compliant,* AUI, Braille)	Designed for easy use for everyone.	With a Samsung Riser,* your washer or dryer is compliant with the Americans with Disabilities Act (ADA), making loading and unloading easier. Also aiding the visually and hearing impaired, audio assistance plays a different sound for each option and braille is next to key control panel buttons. *ADA Compliant when using 27" wide riser. (Riser model codes: WE272NV, WE272NV, WE272NV)
10	10 Preset Washing Cycles	More cycles to best suit your washing needs.	N/A
11	6 Additional Washing Options	Further options to provide optimal care for all fabric types.	N/A
12	5 Temperature Levels	Ideal temperatures to wash your clothes gently and thoroughly.	N/A
13	Matching Accessories	Matching Dryer: DVE45T6000W & DVG45T6000W Matching Pedestal: WE402NW Matching Riser: WE272NW	N/A


Features and Benefits



Fit More for Fewer Loads

Large 4.5 cu.ft. Capacity


Our large capacity, 4.5 cubic foot drum means you can wash more items in a single load and spend more time doing the things you love.

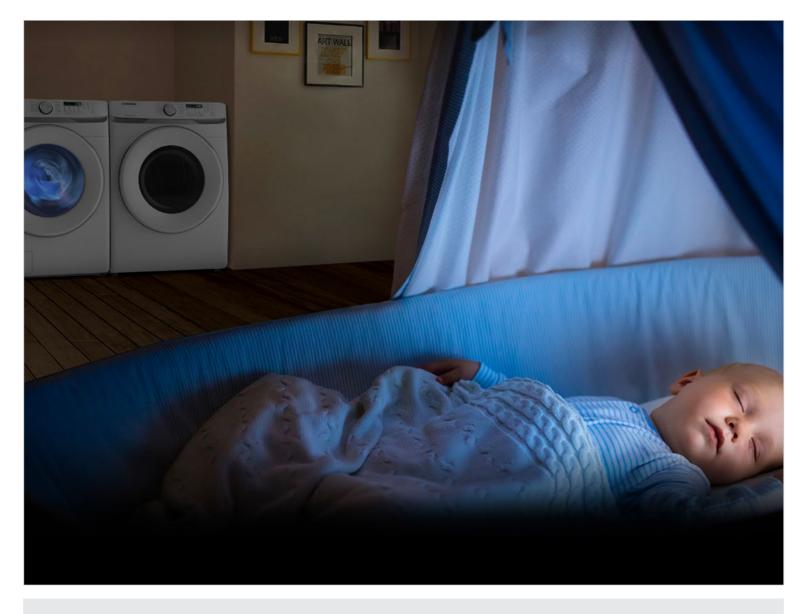

Quiet Washing Anytime, Any Place

Vibration Reduction Technology+

Do your laundry without disturbing anyone at any time and in any place. Innovative VRT Plus™ technology reduces noise and vibration for quiet washing.

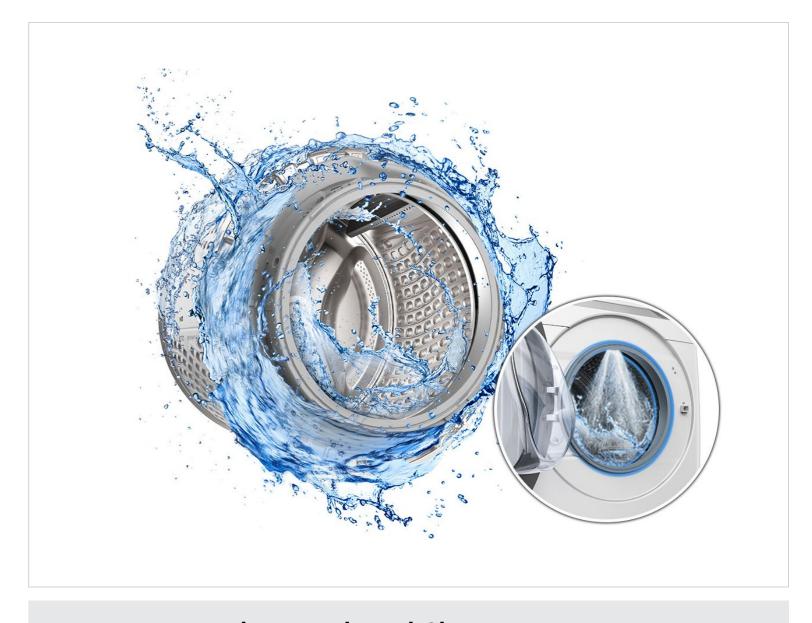

Keep Your Washer Fresh and Clean

Self Clean+

Keep your washer fresh and clean with Self Clean+ technology, which eliminates 99% of bacteria* that can form in any washer drum. Self Clean+ will notify you every 40 wash cycles when it is time for a cleaning.

*Based on testing by Intertek of the Self Clean+ cycle on the WF6000R.

Easy Ads links

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658559386


Features and Benefits (continued)



ENERGY STAR®* & UL Certified

Eco-friendly & energy-efficient. UL Certification wash and spin action tested independently to 3000 cycles.

*Visit www.energystar.gov for more information on ENERGY STAR® guidelines.

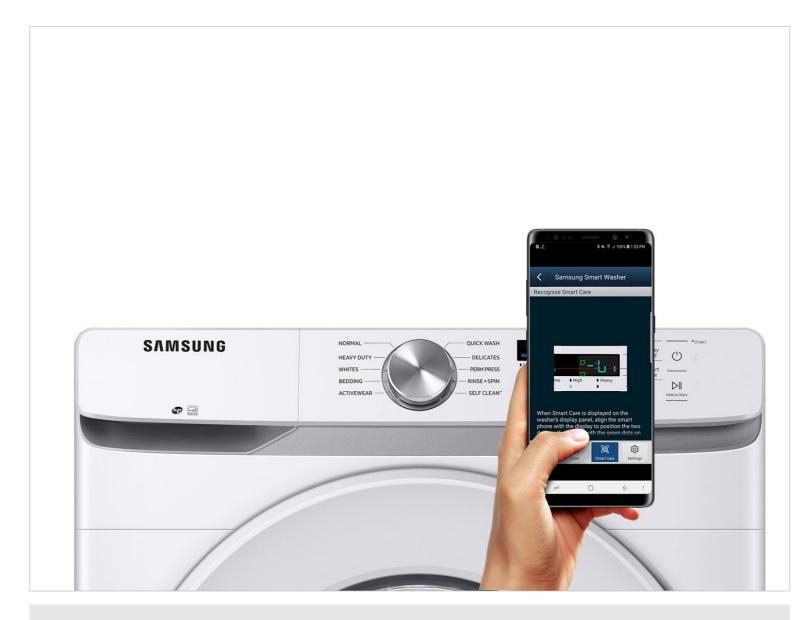

Easy to Troubleshoot

Smart Care

Easy troubleshooting from the convenience of your smartphone.* Smart Care interacts with your washer and dryer to perform an immediate diagnosis and offer quick solutions.

*Requires Samsung Smart Washer/Dryer App. The Samsung Smart Washer/Dryer App supports Android OS 2.3.6 or later and iOS 3 or later for iPhone models. Smart Washer/Dryer App available in App Store and Play Store.



Swirl+ Drum Interior

Improved drum pattern extracts more water more quickly during the rinsing cycle and prevents fabrics from snagging during washing.

Easy Ads links

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658559386

Features and Benefits (continued)




Space-Saving Design

Closet-Depth Fit*

Give your home a sleek, modern look with a seamless design. This washer has a shallow depth, so it fits within your existing laundry space without sacrificing any capacity, thanks to our new, wider drum. Also, a new control panel design provides better visibility, so it is easy to use even when stacked.


*Designed to fit a 40" installation depth.

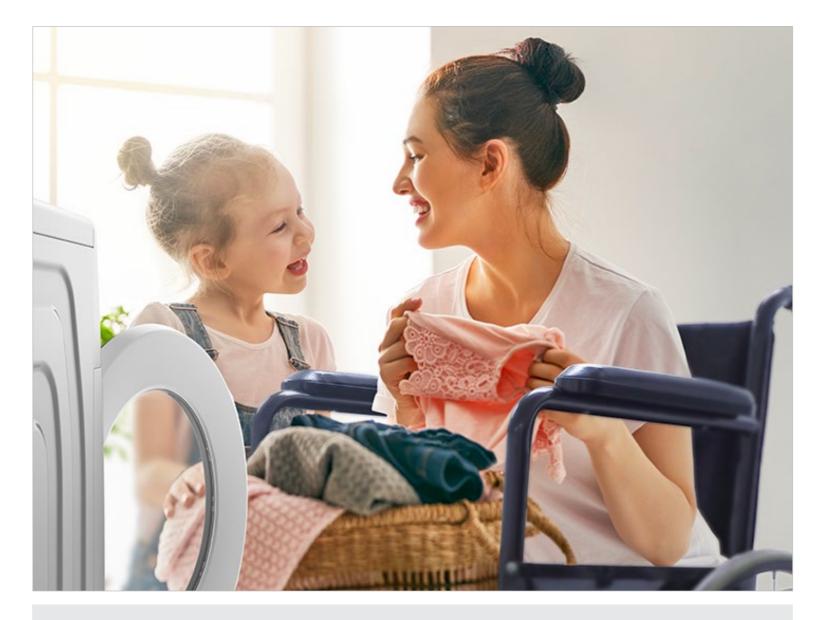

Easier Use, for Everyone

With a Samsung Riser,* your washer or dryer is compliant with the Americans with Disabilities Act (ADA), making loading and unloading much easier. Also aiding the visually and hearing impaired, audio assistance plays a different sound for each option and braille is next to key control panel buttons.

*ADA Compliant when using 27" wide riser. (Riser model codes: WE272NV, WE272NW, WE272NC)

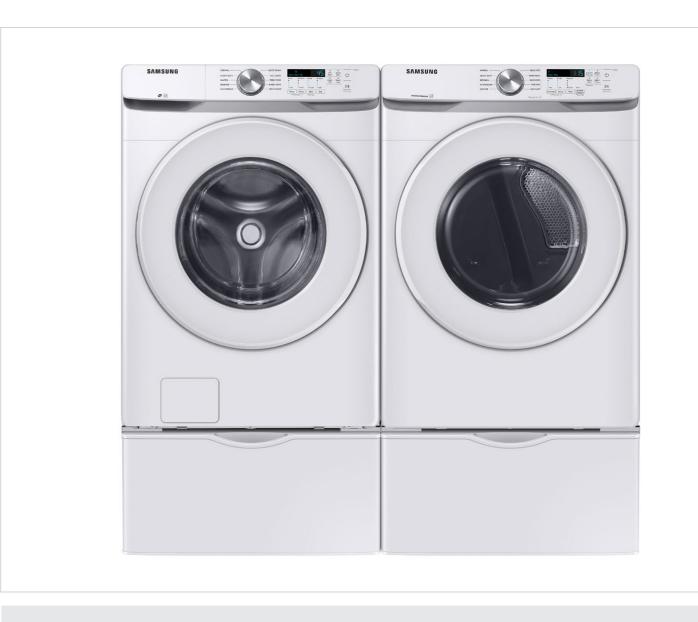

Perfect Pair

Samsung Washers and Dryers team up to make light work of laundry day, while looking great in your laundry room. Position them side by side or stack them for a perfect fit in tighter spaces.

Easy Ads links

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658559386

Product Specs

WF45T6000AW - 4.5 cu. ft. Front Load Washer with Vibration Reduction Technology+

12

Related Products

Pedestal	Stacking Kit	Dryer Series	Riser
WE402NW	SKK-8K	DVE45T6000W DVG45T6000W	WE272NW

13


Spec Sheet

Easy Ads link

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658559288



Washer Spec Sheet - front

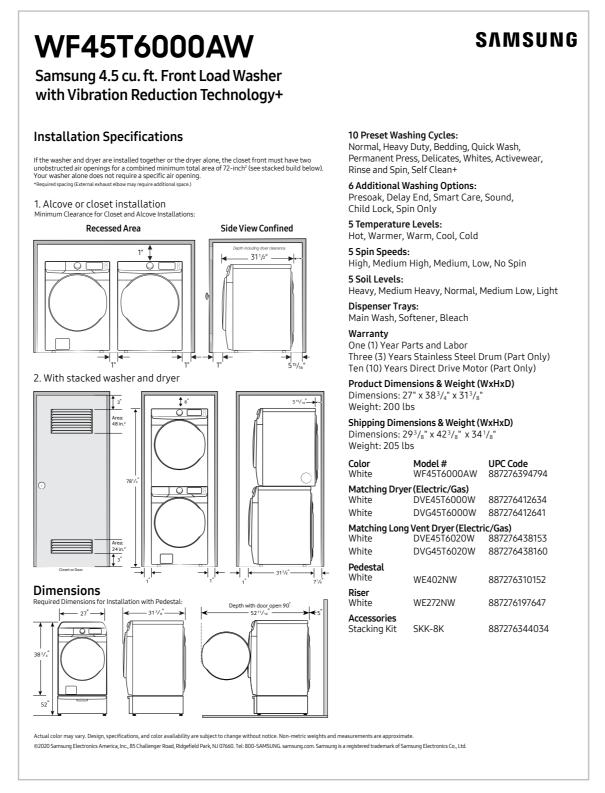


Washer Spec Sheet - back

14


Energy Guide and Manual

Easy Ads link

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658559288

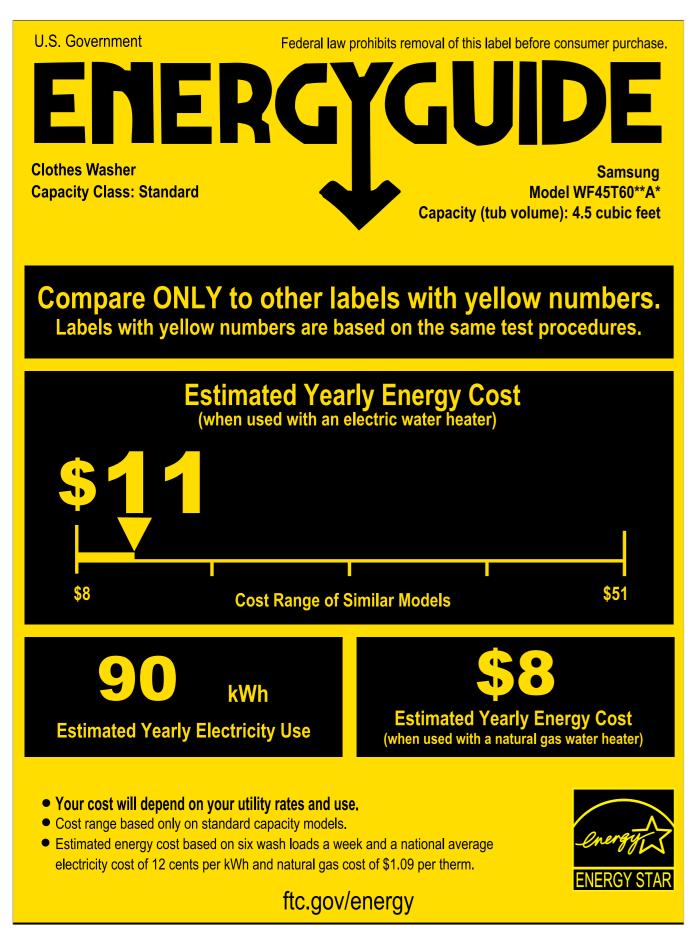

Energy Guide

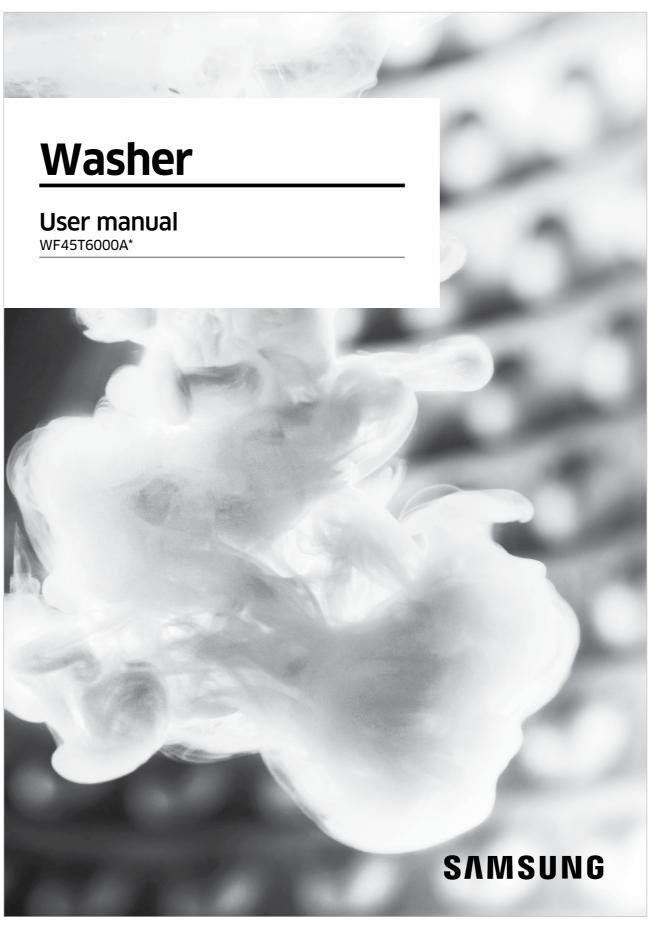


User Manual

Feature Icons

WF45T6000AW - 4.5 cu. ft. Front Load Washer with Vibration Reduction Technology+


Feature Icons

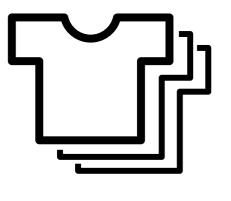

Large 4.5 cu. ft. Capacity



VRT Plus™ Technology

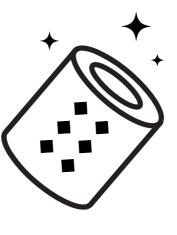

Self Clean+



ENERGY STAR® Certified



Smart Care

Product Overview

DVE45T6000W & DVG45T6000W - 7.5 cu. ft. Front Load Dryer with Sensor Dry

Product Overview

Product Title

7.5 cu. ft. Front Load Dryer with Sensor Dry

Product Short Description

Samsung's 7.5 cu. ft. capacity dryers feature Sensor Dry and 10 preset drying cycles, so you can do fewer loads in less time.

Product Long Description

Samsung's new dryers have advanced features like Sensor Dry, which optimizes cycle time and temperature to thoroughly dry without damaging your clothes. Also, with 7.5 cu. ft. capacity and 10 preset drying cycles, you can do fewer loads in less time and fulfill almost every drying need.

Available Color



White DVE45T6000W DVG45T6000W



Carousel Image Order

Easy Ads links


http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658559838










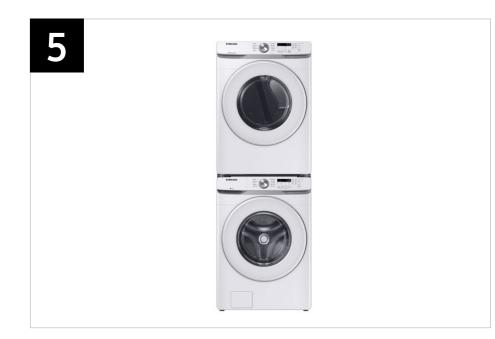

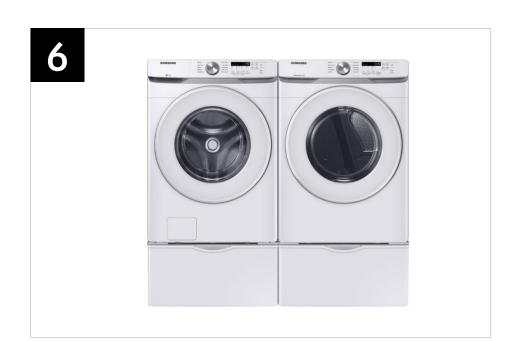













Product Messaging

DVE45T6000W & DVG45T6000W - 7.5 cu. ft. Front Load Dryer with Sensor Dry

Core Messaging

Priori	ty	Feature	Short Copy (< 65 Characters)	Long Copy (< 300 Characters)
ıre	1	Sensor Dry	Helps prevent overdrying for optimal fabric care.	Automatically optimizes the time and temperature of your drying cycle to protect your clothes from heat damage, while avoiding excess energy use.
Signature	2	Large 7.5 cu. ft. Capacity	Fewer loads, less time in the laundry room.	Fewer loads, less time in the laundry room, and more time doing the things you love.
Si	3	10 Preset Drying Cycles	More cycles to best suit your drying needs.	More cycles to cover almost every drying need for your active family.
	4	Smart Care	Easy troubleshooting from the convenience of your smartphone.	Easy troubleshooting from the convenience of your smartphone.* Smart Care interacts with your washer and dryer to perform an immediate diagnosis and offer quick solutions. *Requires Samsung Smart Washer/Dryer App. The Samsung Smart Washer/Dryer App supports Android OS 2.3.6 or later and iOS 3 or later for iPhone models. Smart Washer/Dryer App available in App Store and Play Store.
	5	Interior Drum Light	Put an end to stray socks or small items that are hard to spot.	Put an end to stray socks or smaller laundry items that are hard to spot! An internal drum light brightly illuminates your laundry and the rest of the interior so you can quickly and safely check your dryer's contents.
.es	6	Reversible Dryer Door	Choose the direction of the dryer door to suit your home's layout.	Choose the direction your dryer door opens to better suit your laundry room layout.
Feature	7	Lint Filter Indicator	Provides a helpful reminder when it's time to clean the filter.	Stop worrying about lint or fluff building up and blocking your dryer's air intake. The Filter Check Indicator light on the control panel will provide you with a helpful reminder when it is time to clean the filter, so your dryer maintains optimal performance.
Secondary	8	Accessibility (ADA Compliant, AUI, Braille)	Designed for easy use for everyone. *ADA Compliant when using Samsung 27" wide riser (Riser model code: WE272NW).	With a Samsung Riser,* your washer or dryer is compliant with the Americans with Disabilities Act (ADA), making loading and unloading much easier. Also aiding the visually and hearing impaired, audio assistance plays a different sound for each option and braille is next to key control panel buttons. *ADA Compliant when using Samsung 27" wide riser. (Riser model code: WE272NW)
	9	9 Additional Drying Options	Further options to provide optimal care for all fabric types.	N/A
	10	5 Temperature Levels	Ideal temperatures to treat your clothes gently and thoroughly.	N/A
	11	Matching Accessories	Matching Washer: WF45T6000AW Matching Pedestal: WE402NW Matching Riser: WE272NW	N/A

Features and Benefits



Worry-Free Drying

Sensor Dry

Ensure your clothes are properly dried without constantly checking. Sensor Dry automatically optimizes the time and temperature of your drying cycle to protect your clothes from heat damage, while avoiding excess energy use.


GIF Available



Fit More for Fewer Loads

Large 7.5 cu. ft. Capacity

Our large capacity, 7.5 cubic foot drum means you can dry more items in a single load and spend more time doing the things you love.

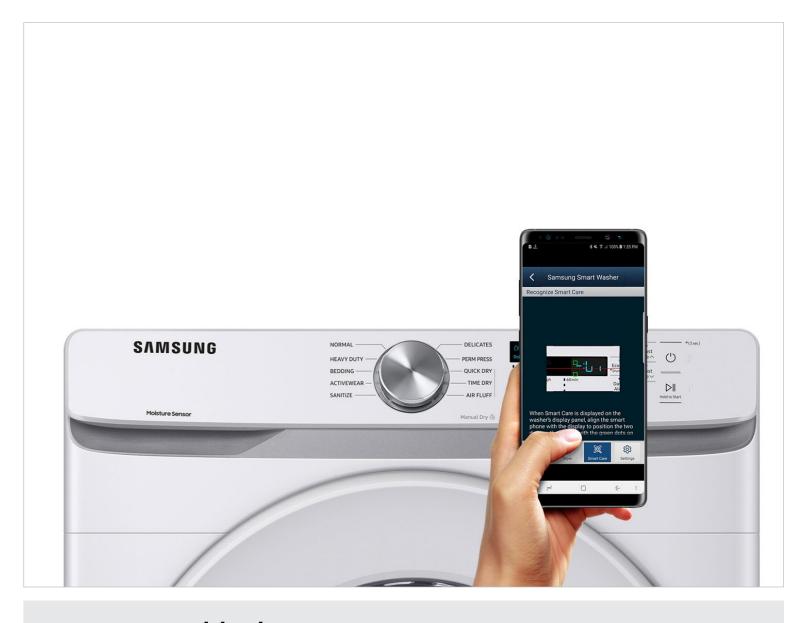

Easy to Troubleshoot

Smart Care

Easy troubleshooting from the convenience of your smartphone.* Smart Care interacts with your washer and dryer to perform an immediate diagnosis and offer quick solutions.

*Requires Samsung Smart Washer/Dryer App. The Samsung Smart Washer/Dryer App supports Android OS 2.3.6 or later and iOS 3 or later for iPhone models. Smart Washer/Dryer App available in App Store and Play Store.

Easy Ads links

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658559809

Features and Benefits (continued)



Interior Drum Light

Put an end to stray socks or smaller laundry items that are hard to spot! An internal drum light brightly illuminates your laundry and the rest of the interior so you can quickly and safely check your dryer's contents.



Flexible Opening

Reversible Door

Choose the direction your dryer door opens to better suit your laundry room layout.



Stop the Fluff

Lint Filter Indicator


Stop worrying about lint or fluff building up and blocking your dryer's air intake. The Filter Check Indicator light on the control panel will provide you with a helpful reminder when it is time to clean the filter, so your dryer maintains optimal performance.

GIF Available

Easy Ads links

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658559809

Features and Benefits (continued)

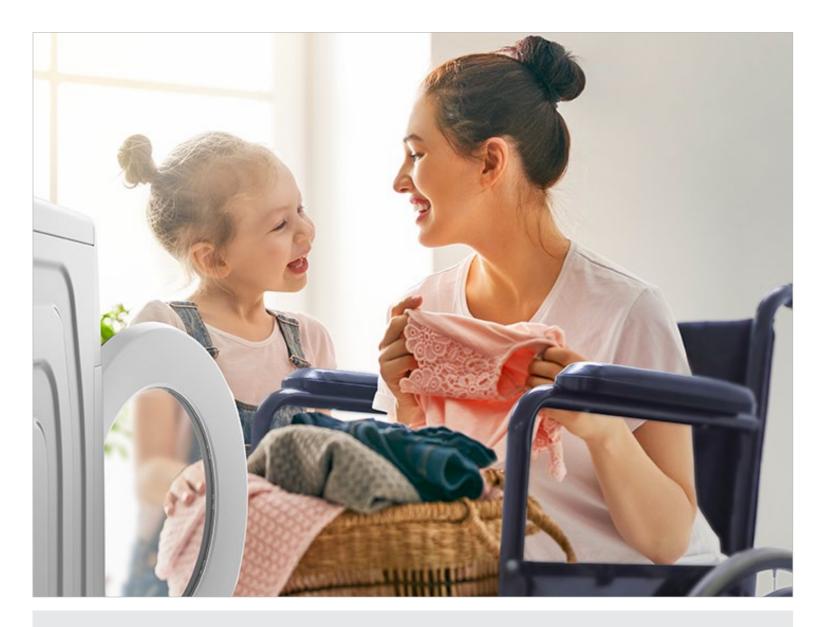

Easier Use, for Everyone

With a Samsung Riser,* your washer or dryer is compliant with the Americans with Disabilities Act (ADA), making loading and unloading much easier. Also aiding the visually and hearing impaired, audio assistance plays a different sound for each option and braille is next to key control panel buttons.

*ADA Compliant when using Samsung 27" wide riser. (Riser model code: WE272NW)



Perfect Pair

Samsung Washers and Dryers team up to make light work of laundry day, while looking great in your laundry room. Position them side by side or stack them for a perfect fit in tighter spaces.

Easy Ads links

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658559809

Product Specs

DVE45T6000W & DVG45T6000W - 7.5 cu. ft. Front Load Dryer with Sensor Dry

26


Related Products

Pedestal	Stacking Kit	Washer Series	Riser
WE402NW	SKK-8K	WF45T6000AW	WE272NW


Spec Sheets

Easy Ads link

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658558406

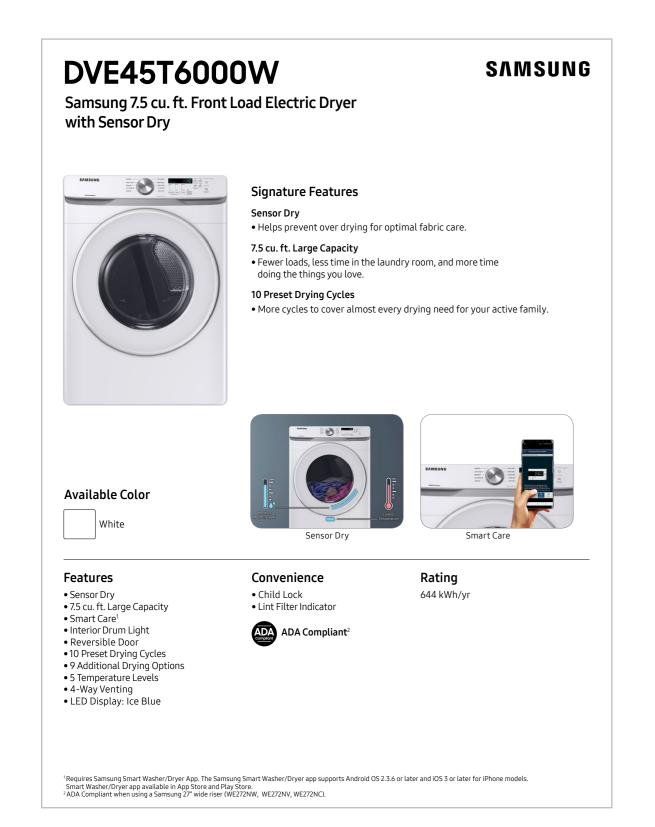


Electric Dryer Spec Sheet - front

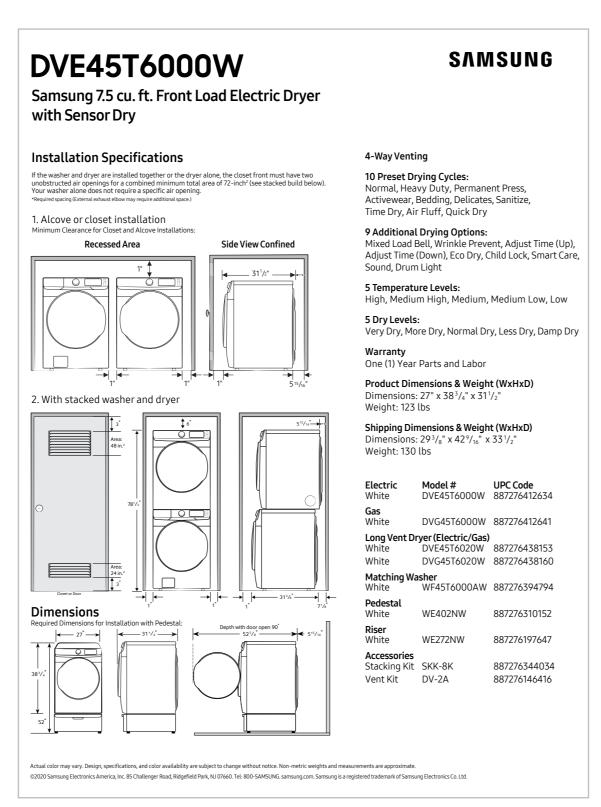


Electric Dryer Spec Sheet - back

Easy Ads link

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658558475

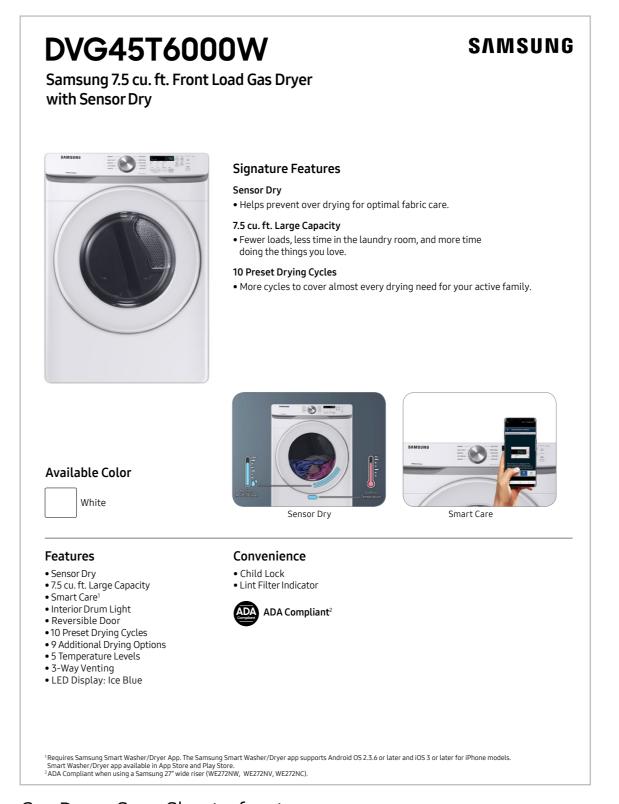

Gas Dryer Spec Sheet - front

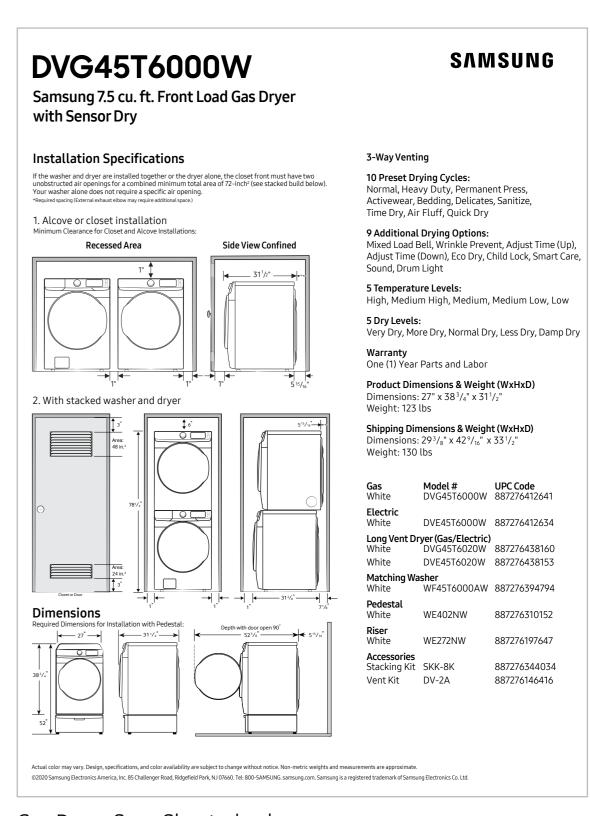


Gas Dryer Spec Sheet - back

User Manual

Easy Ads link

http://www.samsungeasyads.com/mm/nicePath/easyads?nav=pr658558406

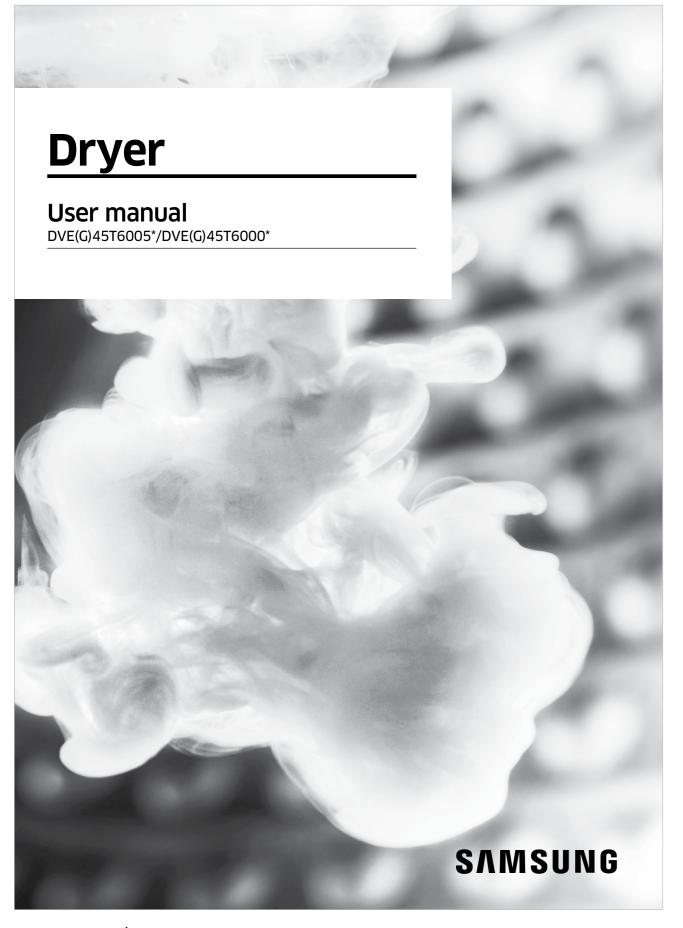



User Manual


Feature Icons

DVE45T6000W & DVG45T6000W - 7.5 cu. ft. Front Load Dryer with Sensor Dry

 Feature Icons

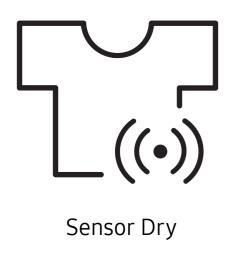

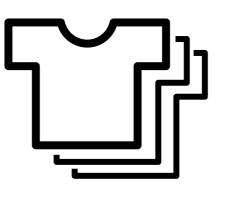







10 Preset Drying Cycles



Smart Care

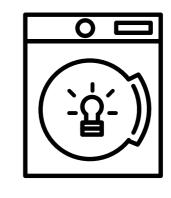


Interior Drum Light

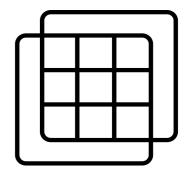

Lint Filter Indicator

SMMSUNG

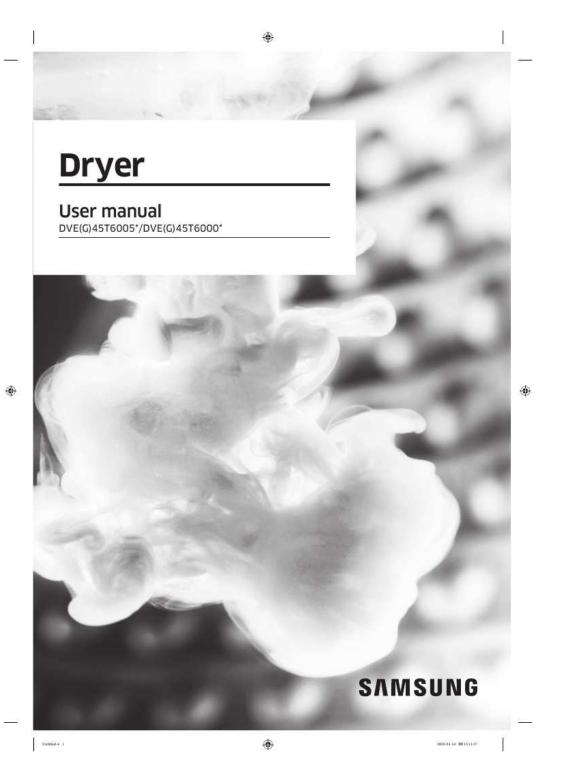

(


Contents

Safety information	4
What you need to know about the safety instructions	Z
Important safety symbols	2
CALIFORNIA PROPOSITION 65 WARNING	5
Important safety precautions	5
Warnings	3
Cautions	3
Installation requirements	10
Key installation requirements	10
Location considerations	10
Ducting requirements	15
Exhausting requirements	16
Gas requirements	17
Electrical requirements	18
Installation	21
What's included	21
Step-by-step installation	23
Vent blockage test	29
Exhaust ducting guide	30
Door reversal	31
Before you start	34
Sort and load	34
Functional prerequisite	34
Operations	35
Control panel	35
Simple steps to start	38
Cycle overview	39
Cycle chart	4(
Drying guide	42
Special features	43
and the second s	W.

2 English —





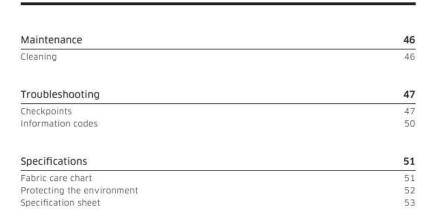

6



English 3



Safety information

Congratulations on your new Samsung dryer. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your dryer's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your dryer.

Because the following operating instructions cover various models, the characteristics of your dryer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

↑ WARNING

Hazards or unsafe practices that may result in severe personal injury, death and/or property damage.

↑ CAUTION

Hazards or unsafe practices that may result in personal injury and/or property damage.

NOTE

Indicates that a risk of personal injury or material damage exists.

SAVE THESE INSTRUCTIONS

4 English -









These warning signs are here to prevent injury to yourself and others. Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

↑ WARNING - Risk of Fire

- · Clothes dryer installation must be performed by a qualified installer.
- Install the clothes dryer according to the manufacturer's instructions and local codes.
- Do not install a clothes dryer with flexible plastic venting materials. If flexible metal
 (foil type) duct is installed, it must be of a specific type identified by the appliance
 manufacturer as suitable for use with clothes dryers. Flexible venting materials are
 known to collapse, be easily crushed, and trap lint. These conditions will obstruct
 clothes dryer airflow and increase the risk of fire.
- To reduce the risk of severe injury or death, follow all installation instructions.
- · Save these instructions.

CALIFORNIA PROPOSITION 65 WARNING

↑ WARNING

Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

Important safety precautions

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- 1. Read all instructions before using this appliance.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.

SAVE THESE INSTRUCTIONS

English 5









Safety information

- 3. Do not use the dryer to dry clothes which have traces of any flammable substance, such as vegetable oil, cooking oil, machine oil, flammable chemicals, paint thinner, etc., or anything containing wax or chemicals, such as mops and cleaning cloths. Flammable substances may cause the fabric to catch fire by itself.
- Do not store or use gasoline or other flammable vapors and liquids near this or any other appliance.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- 7. Do not reach into the appliance if the drum is moving.
- 8. Do not install or store this appliance where it will be exposed to the weather.
- 9. Do not tamper with internal controls.
- 10.Do not repair or replace any part of the appliance or attempt any service unless specifically recommended in the user-maintenance instructions or in published userrepair instructions that you understand and have the skills to carry out.
- 11.Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
- 12.Clean the lint screen before or after each load.
- 13.Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- 14.Keep area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- 15.The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.
- 16.Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire. To reduce the risk of fire due to contaminated loads, the final part of a tumble dryer cycle occurs without heat (cool down period). Avoid stopping a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- 17.This appliance must be grounded. See "Electrical requirements" and "Grounding" in "Installation" section.
- 18.Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.

SAVE THESE INSTRUCTIONS

6 English -





2020-01-14 IIII (2111/8)





19.Do not insert your hand under the dryer.

- This may result in injury.

20. Take care that children's fingers are not caught in the door when closing it.

- This may result in injury.
- 21. The control board and inlet valve are intentionally not grounded and may present a risk of electric shock only during servicing.
 - Do not contact these parts while the appliance is energized.

- Do not dry items that have been previously cleaned, washed, soaked, or spotted with gasoline, dry cleaning solvents, or other flammable or explosive substances. They emit vapors that could ignite or explode. Any material that has been in contact with a cleaning solvent or flammable liquids or solids should not be placed in the dryer until all traces of these flammable liquids or solids and their fumes have been removed. There are many highly flammable items used in homes, such as acetone, denatured alcohol, gasoline, kerosene, some liquid household cleaners, some spot removers, turpentine, waxes, and wax removers.
- Items containing foam rubber (which may be labeled latex foam) or similarly textured rubberlike materials must not be dried on a heat setting. Heated foam rubber materials can, under certain circumstances, ignite spontaneously.

⚠ WARNING - What to do if you smell gas:

- · Do not try to light any appliance.
- · Do not turn on the appliance.
- Do not touch any electrical switch.
- Do not use any phone in your building.
- · Clear the room, building or area of all occupants.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

SAVE THESE INSTRUCTIONS

English 7

throled-4 7



2020-01-14 IIII (2) (1/4)





Safety information

Warnings

↑ WARNING

- Ensure pockets are free of small, irregularly shaped hard objects and foreign material, i.e. coins, knives, pins, etc. These objects could damage your dryer.
- · Gas leaks may occur in your system, resulting in a dangerous situation.

Cautions

⚠ CAUTION

- Do not allow children or pets to play on, in, or in front of the appliance. Close supervision is necessary when the appliance is used near children and pets.
- Before discarding or removing your dryer from service, remove the door to the drying compartment to prevent children or animals from becoming trapped inside.
- · Do not reach into the appliance when the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- · Do not tamper with the controls.
- Do not repair, replace, or attempt to service any part of the appliance unless specifically instructed to in the user-repair instructions and you have the understanding and skills to carry out the procedure.
- Do not use fabric softeners or products to eliminate static unless the softener or product is recommended for dryer use by the manufacturer of the fabric softener or product.
- · Clean the lint screen before or after each load.
- Keep the area around the exhaust opening and surrounding areas free from lint, dust, and dirt.
- The interior of the dryer and exhaust duct should be cleaned periodically by qualified service personnel.
- This appliance must be properly grounded. Never plug the power cord into a receptacle
 that is not grounded adequately or not in accordance with local and national codes. See
 the installation instructions for information about grounding this appliance.
- · Do not sit on top of the dryer.
- Do not dry clothing with large buckles, buttons, or other heavy metal or solid objects.
- · Gas leaks may not be detected by smell alone.
- Gas suppliers recommend you purchase and install a UL-approved gas detector.
- · Install and use in accordance with the manufacturer's instructions.

SAVE THESE INSTRUCTIONS

8 English -



04-03-14 TEX (2.1134)







- Do not place items in your dryer that have been spotted or soaked with vegetable oil or cooking oil. Even after being washed, these items may contain significant amounts of these oils.
- Residual oil on clothing can ignite spontaneoulsy. The potential for spontaneous
 combustion increases when items containing vegetable oil or cooking oil are exposed
 to heat. Heat sources such as your dryer can warm these items, allowing an oxidation
 reaction in the oil to occur. Oxidation creates heat. If this heat cannot escape, the items
 can become hot enough to catch fire. Piling, stacking, or storing these kinds of items
 may prevent heat from escaping and can create a fire hazard.
- All washed and unwashed fabrics that contain vegetable oil or cooking oil can be dangerous.
 - Washing these items in hot water with extra detergent will reduce, but not eliminate, the hazard. Always use the Cool Down cycle for these items to reduce their temperature. Never remove these items from the dryer hot or interrupt the drying cycle until the items have run through the Cool Down cycle. Never pile or stack these items when they are hot.





SAVE THESE INSTRUCTIONS

English 9

Untiled-4 #





Installation requirements

Read through the following instructions before installing the dryer and keep this manual for future reference.

↑ WARNING

Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing.

Service Personnel - Do not contact the following parts while the appliance is energized: Control board and inlet valve.

Key installation requirements

- · A grounded electrical outlet.
- · A power cord for electric dryers (except in Canada).
- · Gas lines (for gas models) that must meet national and local regulations.
- · An exhaust system made of rigid metal or flexible stiff-walled metal exhaust ducting.

↑ WARNING

Remove the door from all discarded appliances to prevent a child from suffocating.

Location considerations


The dryer should be located where there is enough space at the front for loading the dryer, and enough space behind for the exhaust system. This dryer is factory-ready for the rear exhaust option. To exhaust out the bottom, right or the left, use the accessory exhaust kit. Instructions are included with the kit. Make sure the room in which the dryer is located has enough fresh air. The dryer must be located where there are no air-flow obstructions. For gas dryers, adequate clearance must be maintained as noted on the data plate to ensure adequate air for combustion and the proper dryer operation.

The dryer must not be installed or stored in an area where it will be exposed to water and/or weather. The dryer area must be kept clear of combustible materials, gasoline, and other flammable vapors and liquids. A dryer produces combustible lint. The area around the dryer should be kept lint-free.





Dimensions

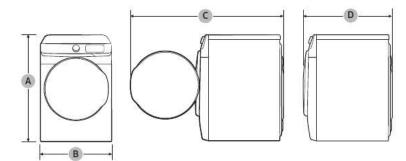

	Type	Front loading dryer
	A. Overall height	38.7 (984)
Dimensions (in. (mm))	B. Width	27.0 (686)
	C. Depth with door open	52.6 (1335)
	D. Depth	31.5 (800)

Installation requirements



Installation requirements

Clearance requirement

This clearance requirement is applicable for dryers only.

NOTE

- · For washer's clearance requirement, see the washer's user manual.
- If the washer and dryer have different clearance requirements, use the one with the larger value.

Alcove or closet installations

↑ WARNING

- The dryer must be exhausted to the outside to reduce the risk of fire when installed in an alcove or closet.
- No other fuel-burning appliance should be installed in the same closet as the dryer.
- Place the dryer at least 18 in. (460 mm) above the floor for garage installation.

Minimum clearance for stable operation:

Sides	Тор	Rear	Front
1 in. (25 mm)	1 in. (25 mm)	5.9 in. (150 mm)	1 in. (25 mm)

 
If both the washer and a dryer are installed in the same location, the front of the alcove or closet must have two unobstructed air openings for a combined minimum total area of 72 in.² (465 cm²).








Undercounter installation



A	39.6 in. (1006 mm) 1 in. (25 mm)	
В		
С	1 in. (25 mm)	

Pedestal installation

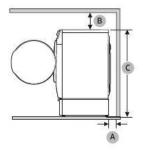

A	5.9 in. (150 mm)	
В	6 in. (152 mm)	
С	52.0 in. (1320 mm)	

(




Installation requirements

This clearance requirement is applicable for washer and dryer pair installation.

Side by side installation

Stacked installation (Model: SKK-8K)

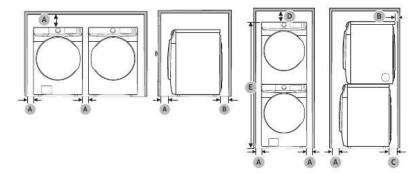

А	1 in. (25 mm)
В	5.9 in. (150 mm)
C	7.1 in. (180 mm)
D	6 in. (152 mm)
E	78.5 in. (1994 mm)

⑥ NOTE

Stacking (MODEL NO: SKK-8K)

Many of Samsung's washers and dryers can be stacked to maximize usable space. You can purchase an optional stacking kit from your Samsung retailer. For details about stacking and compatible models, refer to the user manual included in the stacking kit you purchase.

14 English

Untried-4 14



2020-01-14 IIII (2) (140)



Ducting requirements

	Recommended	Use only for short-run installation
Weather hood type		
No. of 90° elbows	4" (10.2 cm) Rigid	2.5" (6.4 cm) Rigid
0	80 ft. (24.4 m)	74 ft. (22.6 m)
0		
1	68 ft. (20.7 m)	62 ft. (18.9 m)
	57 ft. (17,4 m)	51 ft. (15.5 m)
2	37 H. (17,4 HI)	31 H. (13.3 H)



* Use a 4-inch (10.2 cm) diameter rigid aluminum or galvanized steel duct.

If you integrate the dryer's vent system with an existing exhaust system:

- · Make sure the exhaust system meets all applicable local, state, and national regulations.
- · Verify you are not using flexible plastic duct.
- · Make sure to check for and remove all lint buildup from inside the existing ducts.
- · Confirm the duct is not kinked or crushed.
- · Make sure the exhaust hood damper opens and closes freely.

Manometer measurements

The static pressure in any exhaust system must not exceed 0.83 inches of water column or be less than 0. Note that these values are measured with the dryer running with a manometer presented to the exhaust duct that connects to the dryer. The dryer tumbler must be empty and lint filter clean.









Installation requirements

Exhausting requirements

The dryer must not be exhausted into a chimney, a wall, a ceiling, an attic, a crawl space, or a concealed space of a building. Exhausting the dryer to the outside will prevent large amounts of lint and moisture from being blown into the room.

In the United States and Canada

- All dryers must be exhausted to the outside.
- . The required exhaust duct is 4 inches (10.2 cm) in diameter.
- See "Ducting requirements" in the "Installation" section for the maximum duct length and number of bends that can be used.
- The total length of flexible metal duct must not exceed 7' 10 1/2" (2.4 m).
- Do not assemble the duct with screws or other fasteners that extend into the duct and catch lint
- For the United States only: Use only those foil-type flexible ducts, if any, specifically
 identified for use with the appliance by the manufacturer and that comply with the
 Outline for Clothes Dryer Transition Duct. Use Subject 2158A.

Outside the United States and Canada

· Refer to the local codes.

↑ WARNING

- You must exhaust the dryer to the outside to reduce the risk of fire when you install the dryer in an alcove or closet.
- · Do not use a plastic or non-metal flexible duct.
- · If your existing ductwork is plastic, non-metal, or combustible, replace it with metal.
- Use only a metal exhaust duct that is non-flammable to ensure containment of exhaust air, heat, and lint.







Gas requirements

↑ WARNING

- · Use only natural or LP (liquid propane) gases.
- The installation must be conformed with local codes, or in the absence of local codes, with the national fuel gas code, ANSI Z223.1/NFPA 54, latest revision(for the UNITED STATES), or with the natural gas and propane installation code, CSA B149.1(for Canada).
- Gas dryers are equipped with a burner vent for use with natural gas. If you plan to
 use your dryer with LP (liquid propane) gas, it must be converted for safe and proper
 performance by a qualified service technician. (LNG models only)
 You must check the burner of your model and use the proper LP Kit accordingly. To
 check the detail information of the burner, open the door and check the rating label
 location on the door frame.
 - 20,000 BTU: LPKIT-4/XAA (DC98-04114A)
 - 22,000 BTU: LPKIT-3/XAA (DC99-00792A)
- A 1/2" (1.27 cm) gas supply line is recommended and must be reduced to connect to the 3/8" (1 cm) gas line on your dryer. The National Fuel Gas Code requires that an accessible, approved manual gas shut-off valve be installed within 6" of your dryer.
- Gas dryers installed in residential garages must be raised 18 inches (46 cm) above the floor.
- Additionally, a 1/8" (0.3 cm) N.P.T. (National Pipe Thread) plugged tapping, accessible for test gauge connection, must be installed immediately upstream of your dryer's gas supply connection.
- Your dryer must be disconnected from the gas supply pipe system during any pressure testing of the system.
- Do not reuse old flexible metal gas lines. Flexible gas lines must be designed and certified by the standard for connectors for Gas Appliances, ANSI Z21.24 • CSA 6.10.

(E) NOTE

- Your dryer uses an automatic ignition system to ignite the burner. There is no constant burning pilot.
- Any pipe joint compound used must be resistant to the action of any liquefied petroleum gas.
- · As a courtesy, most local gas utilities will inspect a gas appliance installation.



Unfield 17



2009-01-14 III (2) (74)



Installation requirements

Commonwealth of Massachusetts installation instructions

Your dryer must be installed by a licensed plumber or gas fitter. A "T" handle manual gas valve must be installed in the gas supply line to your dryer. If a flexible gas connector is used to install your dryer, the connector can be no longer than 3' (36").

↑ WARNING

- · Gas leaks may occur in your system, creating a dangerous situation.
- Gas leaks may not be detected by smell alone.
- · Gas suppliers recommend you purchase and install a UL-approved gas detector.
- · Install and use in accordance with the manufacturer's instructions.

Electrical requirements

The wiring diagram is located on the plate under the control panel or rear frame.

↑ WARNING

- Improperly connecting the equipment grounding conductor can result in a risk of
 electric shock. Check with a qualified electrician or serviceman if you are in doubt as
 to whether your dryer is properly grounded. Do not modify the plug provided with
 your dryer if it doesn't fit the outlet, have a proper outlet installed by a qualified
 electrician.
- To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring
 and grounding must be done in accordance with local codes, or in the absence of
 local codes, in accordance with the National Electrical Code, ANSI/NFPA No. 70-Latest
 Revision (for the U.S.) or the Canadian Electrical Code CSA C22.1 Latest Revisions
 and local codes and ordinances. It is your responsibility to provide adequate electrical
 service for your dryer.
- All gas installations must be done in accordance with the national Fuel Code ANSI/ Z2231 - Latest Revision (for the U.S.) or CAN/CGA - B149 Installation Codes - Latest Revision (for Canada) and local codes and ordinances.





Grounding

This dryer must be grounded. In the event of a malfunction or breakdown, the ground will reduce the risk of electrical shock by providing a path of least resistance for the electrical current.

Gas models

⚠ WARNING

- Your dryer has a cord with an equipment-grounding conductor and a grounding plug.
 The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- Do not modify the plug provided with your dryer if it doesn't fit the outlet, have a
 proper outlet installed by a qualified electrician.
- . Do not connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Electric models

⚠ WARNING

- Your dryer has an optional cord with an equipment-grounding conductor and a grounding plug. This cord is sold separately.
- The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- Do not modify the plug provided with your dryer if it doesn't fit the outlet, have a
 proper outlet installed by a qualified electrician.
- If a power cord is not used and the electric dryer is to be permanently wired, the dryer
 must be connected to a permanently grounded metal wiring system, or an equipment
 grounding conductor must be run with the circuit conductors and connected to the
 equipment grounding terminal or lead on the dryer.





223



Installation requirements

Electrical connections

Before operating or testing, follow all grounding instructions in the "Grounding" section. An individual branch (or separate) circuit serving only your dryer is recommended. Do not use an extension cord.

Gas models - U.S. and Canada

A 120 volt, 60 Hz AC approved electrical service with a 15-ampere fuse or circuit breaker is required.

Electric models - U.S. only

Most U.S. dryers require a 120 / 240 volt, 60 Hz AC approved electrical service. Some require 120 / 208 volt, 60 Hz approved electrical service. The electric service requirements can be found on the data label located behind the door. A 30-ampere fuse or circuit breaker on both sides of the line is required.

- If a power cord is used, the cord should be plugged into a 30-ampere receptacle.
- The power cord is not provided with U.S. electric model dryers. This cord is sold separately.

Risk of Electric Shock

⚠ WARNING

When local codes allow, you can connect the dryer's electrical supply with a new power supply cord kit, marked for use with a dryer, that is U.L. listed and rated at a minimum of 120 / 240 volts, 30-amperes with three No. 10 copper wire conductors terminated with closed loop terminals, open-end spade lugs with turned up ends, or with tinned leads.

- Do not reuse a power supply cord from an old dryer. The power cord electric supply wiring must be supported at the dryer cabinet by a suitable UL-listed strain relief.
- Grounding through the neutral conductor is prohibited for (1) new branch-circuit
 installations, (2) mobile homes, (3) recreational vehicles, and (4) areas where local
 codes prohibit grounding through the neutral conductor. (Use a 4-prong plug for a
 4 wire receptacle, NEMA type 14-30R.)

Electric models - Canada Only

A 120 / 240 volt, 60 Hz AC approved electrical service fused through a 30-ampere fuse or circuit breaker on both sides of the line is required.

(E) NOTE

All Canadian models are shipped with the power cord attached. The power cord should be plugged into a 30-ampere receptacle. In Canada, you may convert a dryer to 120 / 208 volts.

20 English

Untried 4 30



0000-01-14 III (2)(14)




Installation

This dryer must be installed by a qualified technician. The installer is responsible for connecting the dryer to the main power while observing the relevant safety regulations of your area.

What's included

Make sure all the parts are included in the product package. If you have a problem with the dryer or the parts, contact a local Samsung customer center or the retailer.

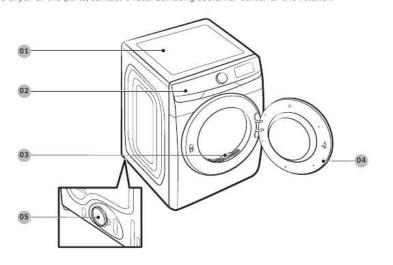

01 Worktop

02 Control panel

03 Lint filter

04 Door

05 Exhaust duct

English 21

Unfried-4 2i


6

2009-01-14 IIII (2) (14)



Installation

Tools needed for installation

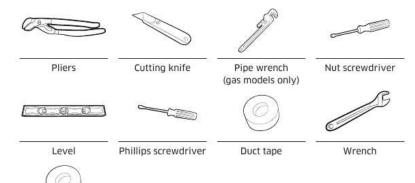

LPG-safe compound or Teflon Tape (for gas installation)

⚠ WARNING

Packing materials can be dangerous to children. Keep all packing materials (plastic bags, polystyrene, etc.) out of children's reach.

t





Make sure you have a qualified technician install the dryer. Step by step installation instructions start below.

- Do not remove the protective film on the door before completing the product installation. If you remove the protective film before the installation is complete, the door may get scratched or damaged during installation.
- Make sure the installation location allows enough space for the dryer door to be fully open.

STEP 1 Install the exhaust system

- Select a location and move the dryer to the site. For easy access, we recommend you
 install the dryer in the same location as your washer.
- 2. To change the door direction, see "Door reversal" on page 31.
- 3. Install the exhaust system as instructed in the "Exhaust ducting guide" section.

⚠ CAUTION

Before installing your dryer, remove the packing in the duct.

(E) NOTE

- To move the dryer easily, lay two of the carton cushions from the packaging on the floor. Tip the dryer on its side so it lies across both cushion-tops. Push the dryer so that it is near its final location, and then set the dryer upright.
- · Secure room around the dryer to facilitate ducting and wiring.

STEP 2 Connect the gas line (for gas models)

Before connecting the gas line, make sure you have read the "Gas requirements" section on page 17.

- 1. Remove the protective cap from the gas pipe.
- Apply an LPG (Liquefied Petroleum Gas)-safe compound or 1.5 wraps of Teflon tape to all threaded connections.
- 3. Connect the gas supply to the dryer. An additional fitting is required to connect the 3/4" (1.9 cm) female thread end of a flexible connector to the 3/8" (1 cm) male threaded end on the dryer. Tighten up the fitting over all threads.
- 4. Turn on the gas supply, and check for any leaks using a soap solution. If a leak is found, tighten the connections and try again. Do not use an open flame to check for gas leaks:

English 23

nid+ 11




Installation

STEP 3 Connect the electrical wiring (for electric models)

Before connecting the electrical wiring, make sure you have read the "Electrical requirements" section on page 18.

3-wire system

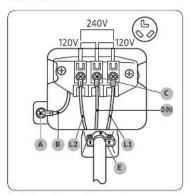

- A. External ground connector
- B. Neutral grounding wire (white)
- C. Center silver-colored terminal block screw
- D. Neutral wire (white or center wire)
- E. 3/4" (1.9 cm) UL-listed strain relief


- Loosen or remove the center terminal block.
- Connect the neutral wire (white or center wire) of the power cable to the center, silver-colored terminal screw of the terminal block. Tighten the screws.
- Connect the other wires to outer terminal block screws. Tighten the screws.
- 4. Tighten the strain relief screws.
- Insert the terminal block cover into the rear panel of the dryer. Then, secure the cover with a hold-down screw.

⚠ CAUTION

- To convert from the 4-wire system to 3-wire system, connect the ground strap to the terminal block support to ground the dryer frame to the neutral conductor.
- Ring-type terminals are recommended.
 If using strap terminals, make sure they are tightened.
- Connect the power cord and check L1/ L2/N voltage. If the voltage is low, It may not dry properly.





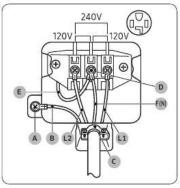

- A. External ground connector
- B. Green or bare copper wire of power cord
- C. 3/4" (1.9 cm) UL-listed strain relief
- D. Center silver-colored terminal block screw
- E. Neutral grounding wire (white)
- F. Neutral wire (white or center wire)

1. Remove the external ground connector's screw and connect the ground wire (green or unwrapped) of the power cable to the screw.

⚠ CAUTION

- To connect the ground wire to the neutral position without through contact A (cabinet ground), contact a technician. This is not user serviceable.
- Ring-type terminals are recommended. If using strap terminals, make sure they are tightened.
- 2. Loosen or remove the screws from the center terminal block.
- 3. Connect the neutral wire (white or center wire) and ground wire (white) to the center screw of the terminal block. Tighten the screw.
- 4. Connect the other wires to the outer terminal block screws. Tighten the
- 5. Tighten the strain relief screws.
- 6. Insert the tab of the terminal block cover into the rear slot of the dryer. Secure the cover with a hold-down screw.

⚠ CAUTION

Unfield 4 25

Connect the power cord and check L1/L2/N voltage. If the voltage is low, It may not dry properly.





Installation

△ WARNING

 
- All U.S. models are designed for a 3-wire system connection. The dryer frame is
 grounded to the neutral conductor at the terminal block. A 4-wire system connection
 is required for new or remodeled construction, mobile homes, or if local codes do not
 permit grounding through neutral. If you use the 4-wire system, you cannot ground the
 dryer frame to the neutral conductor at the terminal block.
- Remove the terminal block cover plate. Insert the power cord with a UL-listed strain relief through the hole provided in the cabinet near the terminal block.
- A strain relief must be used. Do not loosen the nuts already installed on the terminal block. Be sure they are tight. Use a 3/8" (1 cm) deep well socket.



26 English

Untried 4 34






STEP 4 Level the dryer

To ensure optimal performance, the dryer must be level.



 Using a level (A), check if the dryer is level side to side and then front to back. If the dryer is not level, turn the leveling feet (B) clockwise to lower the dryer or counterclockwise to raise the dryer.



(A) NOTE

- To set the dryer to the same height as your washer, fully retract (A) the leveling feet by turning them counterclockwise, then loosen (B) the feet by turning them clockwise. Once the dryer is the same height as the washer, follow the directions above to level the dryer.
- Adjust the leveling feet only as much as necessary to level the dryer. Extending the leveling feet more than necessary can cause the dryer to vibrate.

English 27

United 4 27



2020-01-14 IIII (2) (244



Installation

STEP 5 Power on (for gas models)

Make sure all gas connections, the exhaust line, and all wiring is connected correctly. Then, plug the power cord into a power source and check the dryer's installation and operation using the final checklist in Step 6 below.

STEP 6 Final Check

When installation is complete, confirm that:

- · The dryer is plugged into an electrical outlet and grounded properly.
- · The exhaust ductwork is connected, and the joints are taped.
- · You have used rigid or stiff-walled flexible metal duct material, not plastic flexible duct.
- · The dryer is level and is sitting firmly on the floor.
- · The dryer starts, runs, heats, and shuts off properly.
- · The gas is supplied properly with no leaks (For gas models only).

⚠ CAUTION

The burner may not ignite initially due to air in the gas line. Allowing your dryer to operate on a heat setting will purge the line. If the gas does not ignite within 5 minutes, turn your dryer off and wait 5 minutes. Be sure the gas supply to your dryer has been turned on. To confirm gas ignition, check the exhaust for heat.





After the dryer is installed, start the Vent Blockage Test to check if the duct system is properly installed. The Vent Blockage Test automatically detects the status of the ducts and reports any blockage or problems. Proper ducting can reduce drying time and save energy.

(E) NOTE

The Vent Blockage Test must run when the dryer is cool. If the dryer warms up after the installation check, run the AIR FLUFF cycle for several minutes to reduce its internal temperature.

Running the vent blockage test

- Make sure the drum is empty, and then close the door. (If there are any clothes or other items in the drum, the test will not give accurate results.)
- Press the Power button to turn the dryer on, then simultaneously press and hold the Adjust Time ^ and Dryness buttons for 3 seconds. "InS" appears in the dryer's display. (If you have started other procedures before the Vent Blockage Test, the dryer will not enter the Vent Blockage Test mode.)
- Press the Start/Pause (Hold to Start) button. The Vent Blockage Test starts immediately.
 During the test, the number indicator makes a circle in 6 clockwise steps. The test takes about 2 minutes. Do not open the door during the test.
- 4. After 2 minutes, when the test is complete, the results are displayed and the dryer sounds a tone. If status of the duct system is normal, "0" appears and the dryer sounds a completion tone. If the duct system can not exhaust properly, "CLg" appears and the dryer sounds an alarm tone. If there are any other problems, an information code appears in the display. For information about the code, see the "Information codes" section on page 50.
 - To stop or cancel the Vent Blockage Test, press the Power button to turn off your drver.
 - During the test, if "dc" appears in the display, make sure the door is closed. If "C1" is displayed, see if there is laundry inside drum. If there is, stop the test and remove it. Then, start the test again.
 - The results remain on the display for about 5 minutes and then automatically turn
 off. You can turn the results off immediately by pressing the Power button.

English 29

United 4 30



020-01-14 IIII (2112-0



Installation

(A) NOTE

- During or after the test, the internal drum is hot. Use caution to prevent burns. The
 Vent Blockage Test is used to check for problems in the current duct system when the
 dryer is installed for the first time.
- If the test result displays "CLg" (the duct system is blocked), refer to the "Ducting requirements" section on page 15 and the "Exhaust ducting guide" section below, and then take proper measures to correct any problems. If the test is suspended, it could result in incorrect results. Follow the proper procedures when testing the dryer.
- Even if the test result is normal ("0"), the duct system could be blocked slightly.
 Properly install all duct work according to the installation instructions in this manual.

Exhaust ducting guide

Ducting

- 1. Make sure the dryer is installed properly so the air exhausts freely.
- Use 4-inch rigid metal ducts. Tape all joints including the dryer connection. Never use lint-trapping screws.
- 3. To facilitate the exhaust, keep the ducts as straight as possible.

Cleaning

Clean all old ducts before installing the dryer, and make sure the vent flap opens and closes freely. We recommend that you clean the exhaust system annually or on a regular basis.

⚠ WARNING


- · To prevent fire, do not use plastic, thin-foil, or non-metal flexible ducts of any kind.
- · Do not use a poor exhaust system because it slows down the dryer's performance.
- · Do not use excessively long ducts that have multiple elbows.
- · Do not use crushed or clogged venting or ducts.



1

Door reversal

 Type 1



- Put a soft rug on the floor to rest the door on after you have removed it. This will prevent the door from being scratched.
- 2. Unplug the power cord.
- 3. Remove two door hinge screws.
- 4. Lift the door and remove it.



 
There is a screw on the back side of the hinge that will support the door as you unscrew the hinge screws.

Remove the two screws that are above and below the cut-out in the frame front.





side of the door opening.



English 31

2020-01-14 (0012) [140



 
Installation



Remove the two screws that hold the lever holder in place, and then remove the lever holder.




Re-insert the two screws that held the lever holder into the same screw holes, and then tighten.



Remove the single screw from the back of the door hinge.



 This is the screw that supports the door against the frame so you can unscrew or screw in the hinge without needing to support the door yourself.








32 English -



 

11. Place the door on the other side, and then reattach it to the dryer.



Insert the head of the screw on the back of the hinge into the hole above the cut out in the frame, and then slide the door hinge down until it stops. Make sure the protrusion on the back of the hinge is pressed into the cut out before you tighten the hinge screws.

12. Push the lever holder into the cut out on the other side of the door opening. Insert screws, and then tighten as



shown.



13.Re-attach the remaining screws to the remaining holes above and below the lever holder, and then tighten.



Before you start


Here are a few things you should know before starting your dryer.

Sort and load

- · Put one wash load in the dryer at a time.
- · Do not mix heavy and lightweight items together.
- · To improve drying efficiency for one or two items, add a dry towel to the load.
- For best results, untangle items before inserting them into the dryer. Tangled items may degrade the drying efficiency or cause the door to open.
- · Overloading reduces the tumbling action, resulting in uneven drying and wrinkling.
- · Unless recommended on the care label, do not dry woolens or fiberglass items.
- · Avoid drying unwashed items.
- · Do not dry items soiled with oil, alcohol, gasoline, etc.

Functional prerequisite

Lint filter

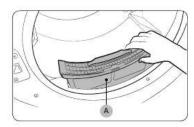

To prevent a risk of fire, make sure to clean the lint filter before or after every load.

- 1. Turn off the dryer.
- Open the door and pull out the lint filter (A) from inside the drum.
- Open the lint filter by separating it at the top. Remove the lint, and then clean the lint filter.
- Close the lint filter, reinsert the lint filter into the dryer, and then close the dryer door.

⚠ CAUTION

- Do not operate the dryer without the lint filter in place.
- Do not use a damaged or broken lint filter. This may reduce performance and/or cause fire.






Operations

⚠ WARNING

To reduce the risk of fire, electric shock, or injury, read the "Safety information" before operating this appliance.

Control panel

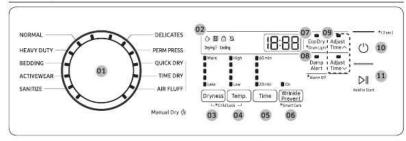

01 Cycle Selector	Turn the Cycle Selector to select the desired cycle. The indicator by the cycle name lights up. • Manual Dry: The drying time is fixed.
02 Digital Graphic Display	Displays all cycle information, including the cycle time, information code, and operating status.
03 Dryness	Press to select a dry level. You can select from 5 different options (Less to More). Please refer to following recommendations to select the appropriate dryness. • For larger or bulkier loads, select More for complete dryness. • For items that needs to lay flat or hang to dry, use Less to partially dry items.
	This option is not available with ACTIVE WEAR, SANITIZE, TIME DRY, QUICK DRY, and AIR FLUFF.

English 35

Unfiled 4 15



2020-01-14 (0012) [16]



Operations

04 Temp.	Temperature can only be adjusted in TIME DRY cycle. Press to change the temperature of the current cycle. You can select from 5 different options (Low to High). Please select the appropriate temperature depending on the items in the load. High: For sturdy cottons or those labeled Tumble Dry. Medium: For permanent press, synthetics, lightweight cottons, or items labeled Tumble Dry Medium. Low: For heat sensitive items labeled Tumble Dry Low or Tumble Dry Warm. Provides the lowest heated drying temperature possible.
05 Time	Press Time to select a drying time for the selected cycle. This is available only with TIME DRY, QUICK DRY, and AIR FLUFF. This button is not available for Sensor Dry cycles because exact drying times are determined by fluctuating humidity levels.
06 Wrinkle Prevent	Wrinkle Prevent provides approximately 180 minutes of intermittent tumbling in unheated air at the end of the cycle to reduce wrinkling. Press Wrinkle Prevent to activate this feature. The load is dry and can be removed at any time during the Wrinkle Prevent cycle.
07 Eco Dry	The Eco Dry function is available with NORMAL and TIME DRY cycles. On NORMAL cycle, the Eco Dry function can increase the drying time up to 3 times depending on the temperature and load while reducing the power consumption. The Eco Dry function can be set to on or off, and it will be stored in memory for the next cycle. If the power cord is unplugged or loses power, the Eco Dry function will be enabled by default.
08 Damp Alert	This alert is available for all sensor dry cycles except for ACTIVE WEAR and SANITIZE. Available dry levels are Less, Normal, More, and Extra. If a load contains mixed fabrics, the Damp Alert indicator blinks when average dryness of the items in the load is 80 % dry. This lets you take items that you don't want fully dried or that dry quickly out of the dryer early while letting others continue to dry.
09 Adjust Time	You can change the set time for the selected cycle. This is available only with TIME DRY, QUICK DRY, and AIR FLUFF. To change the cycle time, press Adjust Time or Adjust Time until the desired time is displayed.

36 English -





10 Power	Press to turn on/turn off the dryer.
11 Start/Pause (Hold to Start)	Press and hold to start operation or press to stop operation.

(a) NOTE

Do not take extremely tangled items from your washer and put them into the dryer. They can degrade the drying efficiency of the dryer or cause the door to open. We recommend that you untangle the items before putting them into the dryer. Also, do not put objects on the dryer, especially on the control panel.

⚠ CAUTION

Do not spray water directly onto the control panel. This may cause a system failure.





Operations

Icon description

<u>C((</u>	Sensor Dry	This icon appears when the dryer operates the cycle which senses the internal humidity to determine the drying time.
=	Filter Check	This icon displays after every load as a reminder to clean the lint filter. Clean the lint filter before every cycle and make sure the filter is properly inserted before starting a cycle.
Ð	Child Lock	This icon indicates that Child Lock is on. For more information on Child Lock, see page 43.
Ø	Alarm Off	This icon indicates that the alarm is off. For more information on Alarm Off, see page 45.

Simple steps to start

- 1. Press Power to turn the dryer on.
- 2. Turn the Cycle Selector to select a cycle.
- 3. Change the cycle settings (Dryness, Temp., and Time) as necessary.
- 4. Select desired options as necessary.
- 5. Press and hold Start/Pause (Hold to Start).

To change the cycle during operation

- 1. Press Start/Pause (Hold to Start) to stop operation.
- 2. Select a different cycle, and repeat steps 2-4 above if necessary.
- 3. Press and hold Start/Pause (Hold to Start) again to start the new cycle.



38 English

Unfried-t M





Cycle overview

Standard Cycles

Cycle	Description
	For most fabrics including cottons and linens.
NORMAL	If Normal is selected, the Eco Dry function is enabled by default. For more information, see Eco Dry in the "Control panel" section.
HEAVY DUTY	For drying items made out of heavy fabrics, such as jeans, corduroys, or work clothes, with high temperature heat.
BEDDING	For bulky items such as blankets, sheets, and comforters.
ACTIVEWEAR	For exercise wear and outdoor wear such as sports jerseys, training pants, water-repellent jackets, and other performance clothing. Thick fabrics like a zipper or velcro closure of a jacket, or training socks may not be completely dried.
SANITIZE	Lets you sanitize garments by infusing high temperature heat deep into the fabric during the drying cycle. Use this cycle to keep your bedding and curtains clean through sanitization.
DELICATES	For heat-sensitive items at a low drying temperature.
PERM PRESS	For drying wrinkle-free cottons, synthetic fabrics, knits, and permanent press fabrics automatically.

Manual Dry

You can change the drying settings manually to your preference.

Cycle	Description		
QUICK DRY	A quick drying cycle that runs for 30 minutes.		
TIME DRY	You can specify a cycle time in minutes. If TIME DRY is selected, the Eco Dry function is enabled by default. For more information, see Eco Dry in the "Control panel" section.		
AIR FLUFF	Tumbles the load in room temperature air.		

- English 39









Operations

Cycle chart



For best results, follow the load size recommendations for each dry cycle.

- Large load: Fill the drum to about 3/4 full. Do not add items over this level as they
 need to tumble freely.
- → Medium load : Fill the drum to about 1/2 full.
- © Small load : Fill the drum with 3-5 items, not more than 1/4 full.

Cycle	Recommended items	Load size	Dry level Normal dry (Adjustable)	
NORMAL	Cottons, work clothes, linens, mixed loads	•		
HEAVY DUTY	Heavy fabrics such as jeans, corduroys, heavy work clothes	•	Normal dry (Adjustable)	
BEDDING	Bulky items such as blankets, sheets, comforters, pillows		Normal dry (Adjustable)	
ACTIVEWEAR	Water-repellent wear, performance clothes, sports wear (Maximum : 4 lbs)			
SANITIZE	Bedding, curtains, children's clothing	٠	Very dry (No adjustable)	
DELICATES	Underwear, blouses, lingerie	Underwear, blouses, lingerie		
PERM PRESS	Shirts, synthetic fabrics, knits, wrinkle-free cottons, permanent press.	•	Normal dry (Adjustable)	
QUICK DRY	Small loads	0	1	
TIME DRY	Any load	•	- 55	
AIR FLUFF	Foam,rubber, plastic	0	88	







⑥ NOTE

• : factory setting, O : can be selected

Cycle	Functions (Temp. Control)					Time
	High	Ħ	#	Ħ	Low	Time
NORMAL		•				
HEAVY DUTY	•					
BEDDING	•					
ACTIVEWEAR		•		j		Ü
SANITIZE	•					
DELICATES					•	j
PERM PRESS			•			
QUICK DRY	•					0
TIME DRY	•	0	0	0	0	0
AIR FLUFF						0

	Options						
Cycle	Adjust Time	Damp Alert	Eco Dry	Anti-Static	Wrinkle Prevent		
NORMAL		0	(DVE(G)45T6005*) O (DVE(G)45T6000*)	0	0		
HEAVY DUTY		0	į.	0	0		
BEDDING		0			0		
ACTIVEWEAR			į į		0		
SANITIZE					0		
DELICATES		0	l l	0	0		
PERM PRESS		0		0	0		
QUICK DRY	0				0		
TIME DRY	0		•	0	0		
AIR FLUFF	0		Î		0		

1



Operations

Drying guide

The best way to dry items is to follow the instructions on the care label. If no drying instructions are provided, see the following table for reference.

Items	Description	
Bedspreads & Comforters	Follow the care label instructions or dry using Bedding. Make sure the item is thoroughly dry before using or storing. May require repositioning in the drum to ensure even drying.	
Blankets	Use Normal and dry only one blanket at a time for best tumbling action. • Make sure blankets are thoroughly dry before using or storing.	
Curtains & Draperies	Use PERM PRESS and the Medium temperature setting to help minimize wrinkling. Dry curtains and draperies in small loads for best results and remove as soon as possible after the cycle is complete.	
Cloth Diapers Use Normal and the Medium temperature setting fluffy diapers.		
Down-filled Items (jackets, sleeping bags, comforters, etc.) Use Normal and the Medium temperature setting. • Add a couple of dry towels to absorb moisture an shorten drying time.		
Foam Rubber (rug backs, stuffed toys, shoulder pads, etc.)	Do not dry on a heat setting. MARNING Drying a rubber item with heat may damage it or cause a fire.	
Pillows	Use Normal. Add a couple of dry towels and a pair of clean sneakers to help the tumbling action and to fluff the pillows. Do not dry kapok or foam pillows using a heated drying cycle.	
Plastics (shower curtains, outdoor furniture covers, etc.)	Use TIME DRY and the Low temperature settings depending on the care label instructions.	

42 English -

unried-4 - G









Do not dry:

- · Fiberglass items (curtains, draperies, etc.)
- · Woolens, unless recommended on the label
- · Items spotted or soaked with vegetable or cooking oils

Special features

Child Lock

Child Lock prevents children from playing with the dryer. When Child Lock is activated, all buttons except for the Power button are disabled.

To activate/deactivate Child Lock, simultaneously press and hold Dryness and Temp. for 3 seconds.

NOTE

Once Child Lock is activated, it will remain active even after you restart the dryer. If other buttons, except for the Power button, do not respond, check the Child Lock indicator. If the indicator is on, follow the instructions above to turn Child Lock off.





Operations

Smart Care

To enable this function, you must first download the SmartThings app at the Play Store or the App Store and install it on a mobile device featuring a camera function. The Smart Care function has been optimized for Galaxy & iPhone series (applicable models only).

- When the dryer detects an issue to check, an information code appears on the display.
 To enter Smart Care mode, press and hold Wrinkle Prevent for 3 seconds.
- The dryer starts the self-diagnosis procedure and displays an information code if a problem is detected.
- 3. Run the SmartThings app on your mobile device, and then tap Smart Care.
- **4.** Put the mobile device close to the dryer's display so that the smartphone camera and the dryer face each other. The app automatically recognizes the information code.
- When the information code is recognized correctly, the app provides detailed information about the problem with applicable solutions.

(A) NOTE

- · The function name, Smart Care, may differ depending on the language.
- If light is reflected off the dryer's display, the app may fail to recognize the information code.
- If the app fails to recognize the information code, you can enter the code manually in the app.





Alarm off

You can turn the alarm on or off. When the alarm is off, the melody of cycle completion and the power-off beep will not sound. However, the other sounds stay active.

- · Press and hold Damp Alert for 3 seconds.
- Your setting will be retained even after you turn off the dryer. You can turn the alarm back on by pressing and holding the same button for 3 seconds.

Drum Light

Press and hold Eco Dry for 3 seconds to turn the drum light on or off.



The lamp stays lit for 2 minutes after it has turned on, regardless of whether the power is on or off or the door is open or closed, and then turns off automatically.

Operatio

English 45

United a sil

2020-01-14 IIII (2) (149



Maintenance

Keep the dryer clean for best performance and to lengthen its life cycle.

↑ WARNING

Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing.

Service Personnel - Do not contact the following parts while the appliance is energized: Control board and inlet valve.

Cleaning

Control panel

- Clean with a soft, damp cloth. Do not use abrasive substances.
- Do not spray liquid cleaning agents directly onto the dryer display.
- Some laundry pre-treatment soil and stain removers may damage the control panel.
- When using liquid cleaning agents, apply them to the cleaning cloth. Do not apply them directly to the dryer. Wipe up any spills or overspray immediately.

Drum

- Remove any stains from the drum with an all-purpose cleaner.
- Tumble old towels or rags to remove any remaining stains or cleaning substances. Stains may still be visible, but will not affect subsequent loads.

Powder coated drum

To clean the powder coated drum, use a damp cloth with a mild, non-abrasive cleaner suitable for easily marred surfaces. Remove cleaner residue and dry with a clean cloth.

Dryer exterior

- Clean with a soft, damp cloth. Do not use abrasive substances.
- · Protect the surface from sharp objects.
- Do not place any heavy or sharp objects or a detergent container on the dryer. They can scratch or damage the top cover of the dryer.
- The dryer has a high-gloss finish on the entire surface. Be careful not to scratch or damage the surface.

Exhaust system

- Check and clean the exhaust system on a regular basis to maintain optimum performance.
- The external exhaust hood must be cleaned frequently to ensure proper air flow.







Troubleshooting

Checkpoints

If the dryer operates abnormally, first check the list of problems in the table below and try the suggested actions.

Problem	Action	
Does not run.	Make sure the door is latched shut. Make sure the power cord is plugged into a live electrical outlet. Check your home's circuit breakers or fuses. Press or tap Start/Pause (Hold to Start) again if the door was opened during a cycle. Clean the lint filter.	
Does not heat.	Check your home's circuit breakers or fuses. Some cycles do not require heat. Check the selected cycle again. For a gas dryer, make sure the gas supply is on. Clean the lint filter and exhaust duct. The dryer may have moved into the cool-down phase of the cycle. Turn off the Eco Dry option for the NORMAL or TIME DRY cycles. When the Eco Dry option is on, the dryer performs an air dry process in the beginning of the cycle to reduce energy consumption. The air dry process does not use heated air, so you may feel that the dryer is not being heated, but this is normal.	

.

English 47

Untiled-4 67



2020-01-14 IIII (2.11.50



Troubleshooting

Problem	Action	
Does not dry.	Check all of the above, plus Make sure the exhaust hood outside your home can open and close freely. Check the exhaust system for lint buildup. Ducting should be inspected and cleaned annually. Use a 4" rigid metal exhaust duct. Do not overload. 1 wash load = 1 dryer load. Dry heavy items and light weight items separately. Large, bulky items, such as blankets or comforters, may require repositioning to ensure even drying. Make sure that your washer is draining properly and extracting adequate water from the load. The load may be too small to tumble properly. Add a few towels and restart the dryer. The load may be too large to tumble properly. Remove some items and restart the dryer.	
Check the load for objects such as coins, loose be nails, etc. Remove promptly. It is normal to hear the dryer gas valve or heatic cycle on and off during the drying cycle. Make sure the dryer is leveled properly as outlinstallation instructions. It is normal for the dryer to hum due to the high air moving through the dryer drum, fan, or exhibitions.		
Dries unevenly.	Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. You can choose a higher dryness level or a cycle that involves a higher dryness level. If one heavy item is dried with a light weight load, such as one towel with sheets, it is possible that the heavy item will not be completely dry when the rest of the load has reached the selected dryness level. For the best drying results, dry heavy items and light weight items separately.	

48 English -

timber 48 Annual Miles









Problem	Action	
Has odors.	Household odors from paint, varnish, strong cleaners, etc. may enter the dryer with the surrounding room air. This is normal as the dryer draws the air from the room, heats it, pulls it through the tumbler, and exhausts it outside. When these odors linger in the air, completely ventilate the room before using the dryer. Use the REFRESH cycle. If odors persist, wash and dry the items again.	
Lint on clothes.	Make sure the lint filter is cleaned before every load. For clothes that naturally build up lint, clean the filter during the cycle. Some fabrics are lint producers (for example, a fuzzy white cotton towel) and they must be dried separately from clothes that are lint trappers (for example, a pair of black linen pants). Divide larger loads into smaller loads for drying. Check pockets thoroughly before drying, then dry clothes. Remove lint inside the drum before drying a load.	
Items still wrinkled after Wrinkle Prevent (Wrinkle Away, Wrinkle Release).	Small loads of 1 to 4 items work best. Load fewer items, Load similar-type items. Take out the items immediately after drying is complete.	
Water drips from the nozzle when the Steam cycles starts.	This is steam condensation. The dripping water will stop after a short time.	
Sprayed water is not visible during Steam cycles.	Sprayed water is difficult to see when the door is closed.	
Extended time.	 Sensor Dry automatically senses the moisture in the load and shuts the dryer off when the selected dryness level is reached. The drying time can change according to the type and amount of laundry. See the cycle chart for reference. 	

If a problem persists, contact a local Samsung service center.

- English 49









Troubleshooting

Information codes

If the dryer fails to operate, you may see an information code on the display panel. To determine what you should do, check the list of codes in the table below, and then try the suggested actions.

Code	Action
dC	Operating the dryer with the door open. Make sure the door is properly closed. Make sure laundry is not caught in the door.
FC	Invalid power source frequency. Try restarting the cycle. If this information code remains, contact a Samsung service center.
AC	Electronic control problem (Invalid Communication). Contact a Samsung service center.
нс	High temperature heating check. Clean the lint filter. If this information code remains, contact a Samsung service center.
9C1	The electronic control needs to be checked. Check if power is supplied properly. If the information code remains, contact a Samsung service center.
tC	The Thermistor1 resistance is very low or high. Check for a clogged lint screen. Check if the vent system is restricted. If this information code remains, contact a Samsung service center.
tC5	The Thermistor2 resistance is very low or high. Check for a clogged lint screen. Check if the vent system is restricted. If this information code remains, contact a Samsung service center.
dF	Incorrect door switch. • Contact a Samsung service center.
3C	The PBA needs to be checked. Unplug the power plug and contact a Samsung service center.

If any information code keeps appearing on the display, contact a Samsung service center.

50 English -







Specifications

Fabric care chart

The following symbols provide garment care direction. The clothing care labels include symbols for drying, bleaching, ironing, and dry cleaning. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to optimize garment life and reduce laundering problems.

Wash cycle

	Normal
	Permanent press/Wrinkle resistant/Wrinkle control
\Box	Gentle/Delicates
₫	Hand wash

Water temperature

 Hot
 Warm
Cold

NOTE

The Water Temperature table lists appropriate wash water temperatures for various items. The temperature range is $106\text{-}126\,^{\circ}\text{F}$ ($41\text{-}52\,^{\circ}\text{C}$) for Hot, $84\text{-}106\,^{\circ}\text{F}$ ($29\text{-}41\,^{\circ}\text{C}$) for Warm, and $61\text{-}84\,^{\circ}\text{F}$ ($16\text{-}29\,^{\circ}\text{C}$) for Cold. (Wash water temperature must be a minimum of $61\,^{\circ}\text{F}$ ($16\,^{\circ}\text{C}$) for detergent activation and effective cleaning.)

Bleach

	Any bleach (when needed)
Ø	Only non-chlorine (color-safe) bleach (when needed)
III	Tumble dry

Normal

Ø	Permanent press/Wrinkle resistant/Wrinkle control
0	Gentle/Delicates

Special instructions

	Line dry/Hang to dry
III	Drip dry
- E	Dry flat

Heat setting

0	High	
0	Medium	
0	Low	
0	Any heat	
•	No heat / Air	

Iron dry or steam temperatures

=	High
a	Medium
<u>a</u>	Low

English 51

3028FB1









Specifications

Warning symbols for laundering

容	Do not wash	
⊋ 8€	Do not wring	
*	Do not bleach	
緻	Do not tumble dry	
₽	No steam (added to iron)	
2	Do not iron	

Dry-clean

0	Dry-clean	
*	Do not dry-clean	
	Line dry / Hang to dry	
III	Drip dry	
Ξ	Dry flat	

Protecting the environment

This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.







Specification sheet

Туре		Front loading dryer
Capacity (Cu.ft)		7.5
Water pre	ssure (psi (kPa))	20-116 (137-800)
Weight	lb (kg)	123.5 (56.0)
tantas antina	Electric (W)	5300
Heater rating	Gas (BTU/hr)	20000
Power consumption (W)		5400





ecifications

English 53

Usekd-t 13



2020-01-14 IIII (2) (1/5)

LIMITED WARRANTY (U.S.A.)

SAMSUNG DRYER

LIMITED WARRANTY TO ORIGINAL CONSUMER PURCHASER WITH PROOF OF PURCHASE

This SAMSUNG brand product, as supplied and distributed by SAMSUNG ELECTRONICS AMERICA, INC. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials or workmanship for the limited warranty period, starting from the date of original purchase, of:

One (1) Year All Parts and Labor

This limited warranty is valid only on products purchased and used in the United States that have been installed, operated, and maintained according to the instructions attached to or furnished with the product. To receive warranty service, the purchaser must contact SAMSUNG at the address or phone number provided below for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center to receive warranty service.

SAMSUNG will provide in-home service within the contiguous United States during the warranty period at no charge, subject to availability of SAMSUNG authorized servicers within the customer's geographic area. If in-home service is not available, SAMSUNG may elect, at its option, to provide transportation of the product to and from an authorized service center. If the product is located in an area where service by a SAMSUNG authorized servicer is not available, you may be responsible for a trip charge or required to bring the product to a SAMSUNG authorized service center for service.

To receive in-home service, product must be unobstructed and accessible to the service agent.

During the applicable warranty period, a product will be repaired, replaced, or the purchase price refunded, at the sole option of SAMSUNG. SAMSUNG may use new or reconditioned parts in repairing a product, or replace the product with a new or reconditioned product. Replacement parts and products are warranted for the remaining portion of the original product's warranty or ninety (90) days, whichever is longer. All replaced parts and products are the property of SAMSUNG and you must return them to SAMSUNG.

54 English

Untried 4 14



(0+0+14 III (3)11/55



(

This limited warranty covers manufacturing defects in materials or workmanship encountered in normal household, noncommercial use of this product and shall not cover the following: damage that occurs in shipment, delivery, installation, and uses for which this product was not intended; damage caused by unauthorized modification or alteration of the product; product where the original factory serial numbers have been removed, defaced, changed in any way, or cannot be readily determined; cosmetic damage including scratches, dents, chips, and other damage to the product's finishes; damage caused by abuse, misuse, pest infestations, accident, fire, floods, or other acts of nature or God; damage caused by use of equipment, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by SAMSUNG; damage caused by incorrect electrical line current, voltage, fluctuations and surges; damage caused by failure to operate and maintain the product according to instructions; in-home instruction on how to use your product; and service to correct installation not in accordance with electrical or plumbing codes or correction of household electrical or plumbing (i.e., house wiring, fuses, or water inlet hoses). The cost of repair or replacement under these excluded circumstances shall be the customer's responsibility.

Visits by an authorized servicer to explain product functions, maintenance or installation are not covered by this limited warranty. Please contact SAMSUNG at the number below for assistance with any of these issues.

13

English 55

LIMITED WARRANTY (U.S.A.)

EXCLUSION OF IMPLIED WARRANTIES

IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

LIMITATION OF REMEDIES

YOUR SOLE AND EXCLUSIVE REMEDY IS PRODUCT REPAIR, PRODUCT REPLACEMENT, OR REFUND OF THE PURCHASE PRICE AT SAMSUNG'S OPTION, AS PROVIDED IN THIS LIMITED WARRANTY. SAMSUNG SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO TIME AWAY FROM WORK, HOTELS AND/OR RESTAURANT MEALS, REMODELING EXPENSES, LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

SAMSUNG does not warrant uninterrupted or error-free operation of the product. No warranty or guarantee given by any other person, firm, or corporation with respect to this product shall be binding on SAMSUNG.

To obtain warranty service, please contact SAMSUNG at: Samsung Electronics America, Inc. 85 Challenger Road Ridgefield Park, NJ 07660 1-800-SAMSUNG (726-7864) www.samsung.com/us/support





1

Warranty (CANADA)

SAMSUNG DRYER

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by SAMSUNG ELECTRONICS CANADA, INC. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

· One (1) year part and labor

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the Canada.

To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures.

Warranty service can only be performed by a SAMSUNG authorized service center.

The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center.

SAMSUNG will provide in-home service during the warranty period at no charge, subject to availability within the Canada.

In-home service is not available in all areas.

To receive in-home service, product must be unobstructed and accessible to the service agent.

If service is not available, SAMSUNG may elect to provide transportation of the product to and from an authorized service center.

SAMSUNG will repair, replace, or refund this product at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above.

All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG.

Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.





Warranty (CANADA)

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following: damage that occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning, or other acts of nature or God; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by SAMSUNG that damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, maintenance and environmental instructions that are covered and prescribed in the instruction book; product removal and reinstallation; problems caused by pest infestations.

This limited warranty does not cover problems resulting from incorrect electric current, voltage or supply, light bulbs, house fuses, house wiring, cost of a service call for instructions, or fixing installation errors.

SAMSUNG does not warrant uninterrupted or error-free operation of the product.

EXCEPT AS SET FORTH HEREIN, THERE ARE NO WARRANTIES ON THIS PRODUCT EITHER EXPRESS OR IMPLIED, AND SAMSUNG DISCLAIMS ALL WARRANTIES INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE.

NO WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM, OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG.

SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE.

WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE, OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT.

THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

58 English

United 4 18

9











Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific rights, and you may also have other rights, which vary from province to province.

To obtain warranty service, please contact SAMSUNG at:

Samsung Electronics Canada Inc.

2050 Derry Road West,

Mississauga, Ontario L5N 0B9 Canada

1-800-SAMSUNG (726-7864)

www.samsung.com/ca/support (English)

www.samsung.com/ca_fr/support (French)

Visits by a Service Engineer to explain functions, maintenance, or installation is not covered by warranty.

Please contact the Samsung call center at the number above for help with any of these issues.







SAMSUNG



Scan the QR code* or visit www.samsung.com/spsn to view our helpful How-to Videos and Live Shows



QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com/us/support
CANADA	1-800-SAMSUNG(726-7864)	www.samsung.com/ca/support (English) www.samsung.com/ca_fr/support (French)

Energy Star only applies to DVE(G)45T6005* model.



