

DF3033ST & DFG3033

Enclosure Design: Install firebox on a solid flat surface. Clearance for air circulation beneath the fireplace insert is provided by three (3) rubber feet. Ensure that there is at least 1/2" of clearance from any set of louvers on the back at the sides. Keep combustibles away from the unit using the framing dimensions.

Vented Air: The enclosure **MUST NOT** block the front/bottom edge or the upper front of the firebox (see diagrams below). Air is taken in from the lower vents and returned from the upper vents. The firebox may overheat if any of these vents are obstructed.

⚠ WARNING: The heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. The trim around the heater outlet becomes hot during heater operation. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the unit.

Power cord: The power exits the rear/right side of the firebox. Sufficient clearance must be provided, as well as an exit hole to access an outlet.

⚠ WARNING: Ensure the power cord is not installed so that it is pinched or against a sharp edge. Also ensure the power cord is stored or secured to avoid tripping or snagging to reduce the risk of fire, electric shock or injury to persons.

Recommended Electrical Specifications

Volts	Wire Gauge	Fuse Rating	Rated Power	Full Power
120 V	14 Ga.	15 A	1000 W	12 A

