

Tools Required (not included): Flathead screwdriver, Phillips screwdriver, Electrical tape, Safety goggles, Ladder.

Bulb Recommended:(3) Candelabra Base, Type T, 60W Maximum, Alternate (3) LED bulbs.

Estimated Assembly Time: 20 - 30 minutes

Preparation:

- · Identify and inspect all parts before beginning installation
- · Check package contents list and diagrams below to be sure all parts are included.
- If any parts are missing or damaged, do not attempt to assemble, install or operate the fixture.
- Contact Quoizel Customer Service for replacement parts.




Warnings And Cautions


- Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.
- These instructions are provided for your safety. It is very important you read them completely before installing fixture. We strongly recommend that a licensed, professional electrician perform the installation.
- Disconnect fixture from power source before replacing bulbs.
 - Make sure bulbs are given sufficient time to cool before removal.
 - Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

PART	DESCRIPTION	QUANTITY	Stock Part#
Α	Crossbar Assembly	1 pc	
В	Green Ground Screw (Pre-assembled to Crossbar)	1 pc	0420441/17
С	Wire Connector	3 pcs	913044KIT
D	Outlet Box Screw	2 pcs	
E	Fixture	1 pc	N/A
F	Candle cover (Pre-assembled to Socket Assembly)	3 pcs	M13045CCS29

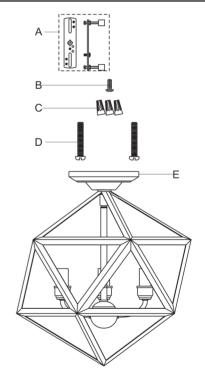



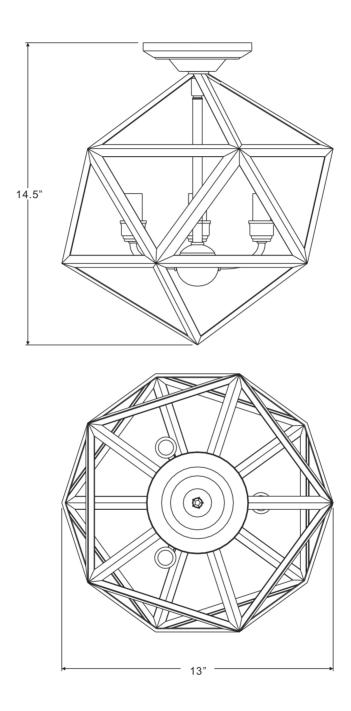


STEP 1:

- a. Secure the crossbar to the outlet box (not included) with outlet box screws.
- b. Tighten until snug.

Note:

The preassembled mounting screws on the crossbar should protrude outward.

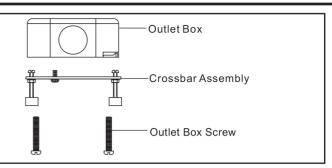


STEP 2:

- a. Remove mounting balls from the crossbar assembly.
- b. Fit the ceiling canopy to the crossbar assembly and secure with mounting balls.


Note: The ceiling canopy should be snug against the ceiling and the mounting balls.

- If not, adjust the length of the mounting screws on the crossbar assembly by unscrewing the preassembled hex nuts.
- Then, screw the mounting screws in or out of the crossbar until the desired length is achieved.
- Once the ceiling canopy is secure, remove the mounting balls and ceiling canopy and proceed to Step 3.

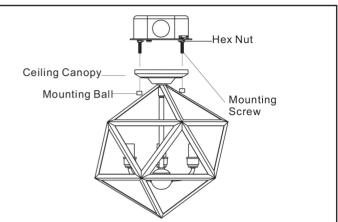

STEP 3:

- * Use Wire Connectors (supplied) to connect the wires.
- a) Ground Wire:
- 1. Wrap supply **ground wire** around **green ground screw** on mounting bracket, no less than 2 in. from the end of the wire. Tighten **ground screw**.
- 2. Connect fixture green **ground wire** to **supply ground** wire with wire connector.
- b) Supply Wire:
- 1. Connect the **supply white wire** to the **white fixture supply wire** with wire connector.
- 2. Connect the supply black (or red) wire to the black fixture supply wire with wire connector.
- 3. Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the outlet box.

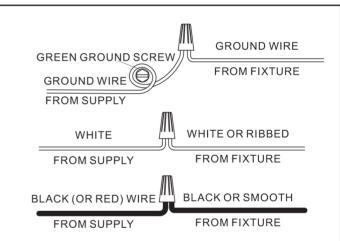


STEP 4:

- a. Re-attach the ceiling canopy of the fixture body to the crossbar assembly.
- b. Secure with the previously removed mounting balls.

STEP 5:

a. Install correct bulbs referring to fixture markings and/or labels for maximum wattage.

Your installation is completed now. Restore electricity. Retain this sheet for future reference.

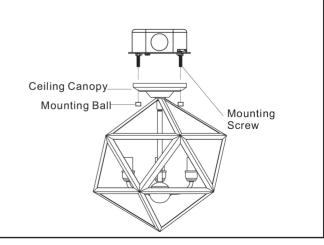

CARE AND MAINTENANCE

Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION	
Bulbs will not light.	 Bulb is burned out. Power is off. Faulty wire connection. Faulty switch. 	 Replace light bulb. Make sure power supply is on. Check wiring. Test or replace the switch. 	
Fuse blows or the circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connection.	