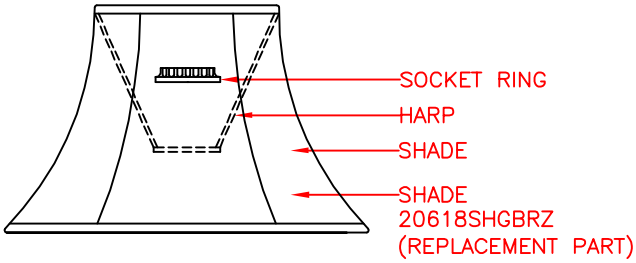

AVAILABLE PART IS:
20618SHGBRZ (SHADE)

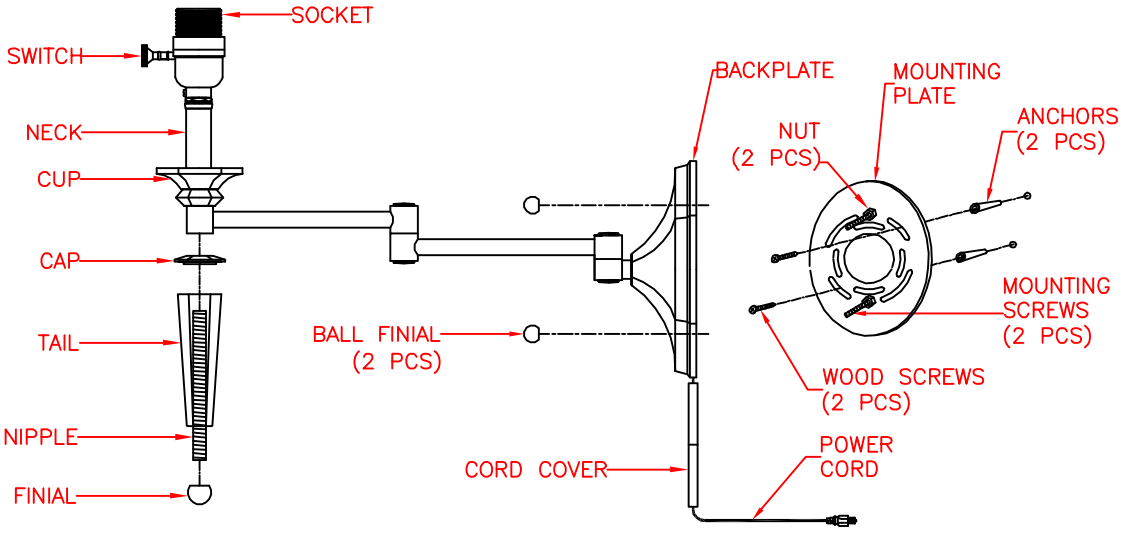

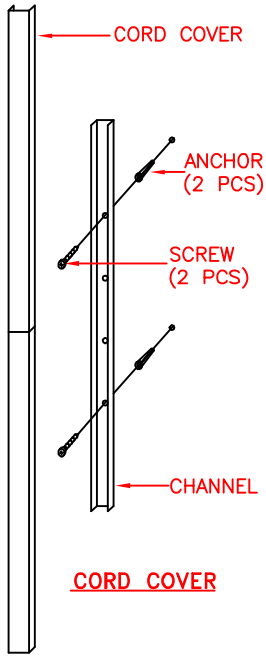

CORD COVER

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: SCREWDRIVER AND DRILL.

UNPACK THE LAMP: YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: SOCKET RING, SHADE WITH HARP, LAMP ASSEMBLY, CAP, TAIL, NIPPLE, FINIAL, (2) CORD COVERS AND CHANNEL. TO PROTECT THE FINISHES, PLACE ALL PARTS ON A SOFT SURFACE.

MOUNTING HARDWARE PACKAGE: MOUNTING PLATE, GREEN GROUND SCREW, (2) 8–32 x 1–1/4" SCREWS, (2) NUTS, (4) PLASTIC ANCHORS, (4) WOOD SCREWS AND (2) BALL FINIALS.

IF FASTENING WITH ANCHOR TO DRYWALL

1. REMOVE MONTING PLATE FROM LAMP ASSEMBLY BY UNSCREWING (2) BALL FINIALS.

2. POSITION THE MOUNTING PLATE ON THE WALL AT DESIRED LOCATION AND MARK THE PLACE FOR THE ANCHORS TO BE INSTALLED.

3. DRILL PILOT HOLES ON THE MARKED SPOTS AND INSERT PLASTIC ANCHORS. **(IF FASTENING WITH WOOD SCREWS TO STUD, IGNORE THIS STEP)**

4. ATTACH THE MOUNTING PLATE TO THE ANCHORS OR THE SPOTS THAT YOU MARKED ON STUD AND SECURE WITH (2) WOOD SCREWS.

5. RAISE LAMP TO WALL, LINE UP MOUNTING SCREWS WITH HOLES IN BACKPLATE AND SECURE WITH (2) BALL FINIALS.

LAMP ASSEMBLY

1. SCREW NIPPLE ONTO BOTTOM OF CUP, SLIDE CAP AND TAIL OVER THE NIPPLE, THEN SECURE WITH FINIAL.

2. PLACE THE HARP OF SHADE OVER SOCKET AND SECURE WITH SOCKET RING.

3. INSTALL A 75 WATT MEDIUM BASE TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.

4. TO INSTALL CORD COVER, MOUNT CHANNEL ON THE WALL WITH SCREWS AND ANCHORS. (SEE ABOVE) WITH CORD BEHIND COVERS, PRESS CORD COVERS ONTO CHANNEL.

5. PLUG THE POWER CORD INTO AN OUTLET AND TURN ON AT SWITCH.