

INSTALLATION INSTRUCTIONS 10198BK/WH

NOTE: This dimmer cannot be used with 10192BK60 or BK96 power supplies.

NOTE: The load on the dimmer cannot exceed 48W. Exceeding 48W may result in damage to the dimmer and tape system.

WARNING:


- The dimmer should always be installed on the 24V, low output side of the power supply.
- Do not connect to 120V, or damage to the dimmer and tape system may occur.
- For use in dry locations only.

CONNECTING:

- 1) The 10198 in-line dimmer must be connected directly to the 24V output DC2.1 jack from the power supply. Connect the male DC2.1 jack from power supply to the female connector on the dimmer.
- 2) Connect the male DC2.1 jack of dimmer to the female DC2.1 jack on the tape light power supply lead.

OPERATING:

- 1) To turn lights on, twist the dial on the dimmer clockwise until the light reaches the desired light level.
- 2) To turn lights off or dim down, turn the dial on the dimmer counter clockwise until the light reaches the desired light level or you reach the full off position which is indicated by a "click".

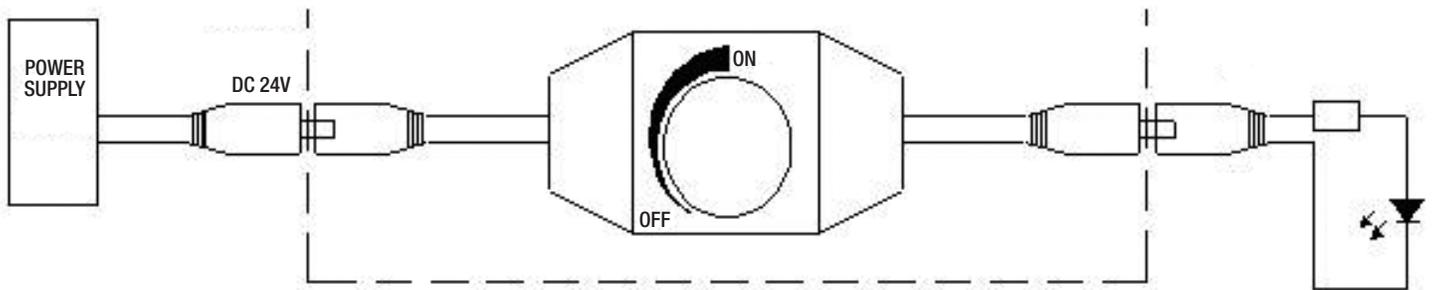

INSTRUCCIONES PARA INSTALACIÓN DE 10198BK/WH

NOTA: No podrá usarse este atenuador con los suministros de alimentación eléctrica 10192BK60 o BK96.

NOTA: La carga en el atenuador no puede exceder los 48W. Si se exceden los 48W se puede dañar el atenuador y el sistema de cinta.

ADVERTENCIA:


- Se debe instalar el atenuador siempre en el lado de salida bajo de 24V del suministro de alimentación eléctrica.
- No conectar a 120V, o se puede dañar el atenuador o el sistema de cinta.
- Para uso en lugares secos únicamente.

CONEXIÓN:

- 1) Se debe conectar el atenuador en línea 10198 directamente al enchufe CD2.1 de salida de 24V del suministro de alimentación eléctrica. Conectar el enchufe macho CD2.1 del suministro de alimentación eléctrica al conector hembra del atenuador.
- 2) Conectar el enchufe macho CD2.1 del atenuador al enchufe hembra CD2.1 del conductor del suministro de alimentación eléctrica de la cinta de luz.

OPERACIÓN:

- 1) Para encender las luces, girar el interruptor del atenuador en sentido de las agujas del reloj hasta que se alcance el nivel de iluminación deseado.
- 2) Para apagar la luz o para atenuarlas, girar el interruptor del atenuador en sentido contrario al de las agujas del reloj hasta que se alcance el nivel de iluminación deseado o hasta que se alcance la posición de apagado que se indica con un sonido de "clic".

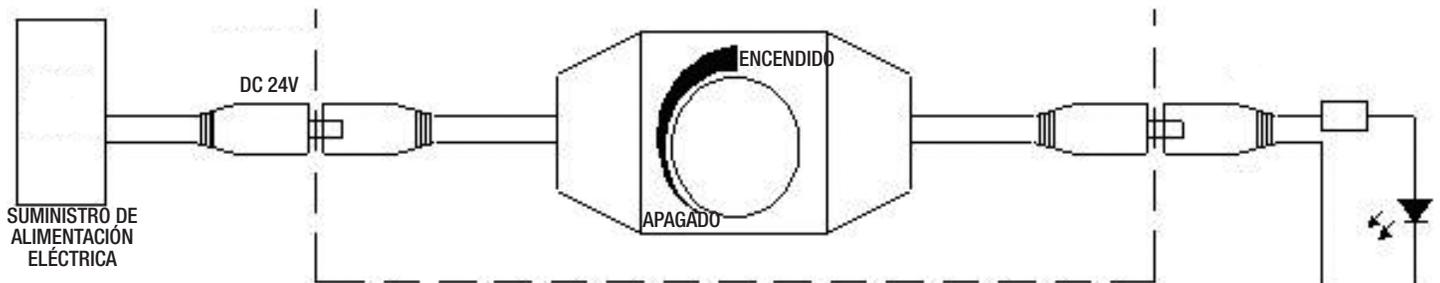

KICHLER®

www.kichler.com