American Standard

HERITAGE
AMARILIS

HERITAGE SERIES
SINGLE BUILT-IN
WALL SUPPLY VALVES

Installation Instructions

## 7000 SERIES
7001 SERIES
7006 SERIES
7007 SERIES
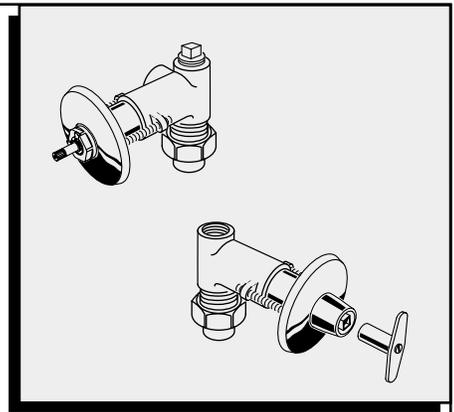
Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly–please read these instructions carefully before you begin.
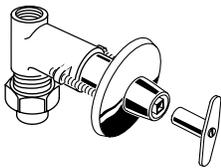
7000 SERIES	7001 SERIES	7006 SERIES	7007 SERIES
STRAIGHT VALVE W/LOOSE KEY	STRAIGHT VALVE	BYPASS VALVE, "HOT"	BYPASS VALVE, "COLD"
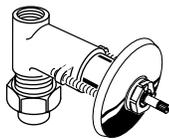
ESCUTCHEON
MOUNTING SCREWS
FIXATION PLATE
O-RING
VALVE COVER
VALVE SCREW
VALVE BODY
UNION SWIVEL
COUPLING NUT
PLASTER GUARD

ROUGHING-IN DIMENSIONS

2-3/8 ±1/2

BY-PASS OUTLET THREADED 1/2" N.P.T. INSIDE

CROSS BRACE

2

1-1/8

1-1/8

2.1 DIA.

UNION INLET 1/2"-14 N.P.T.

BY-PASS OUTLET THREADED 1/2" N.P.T. INSIDE

FINISHED WALL
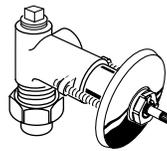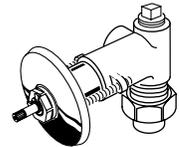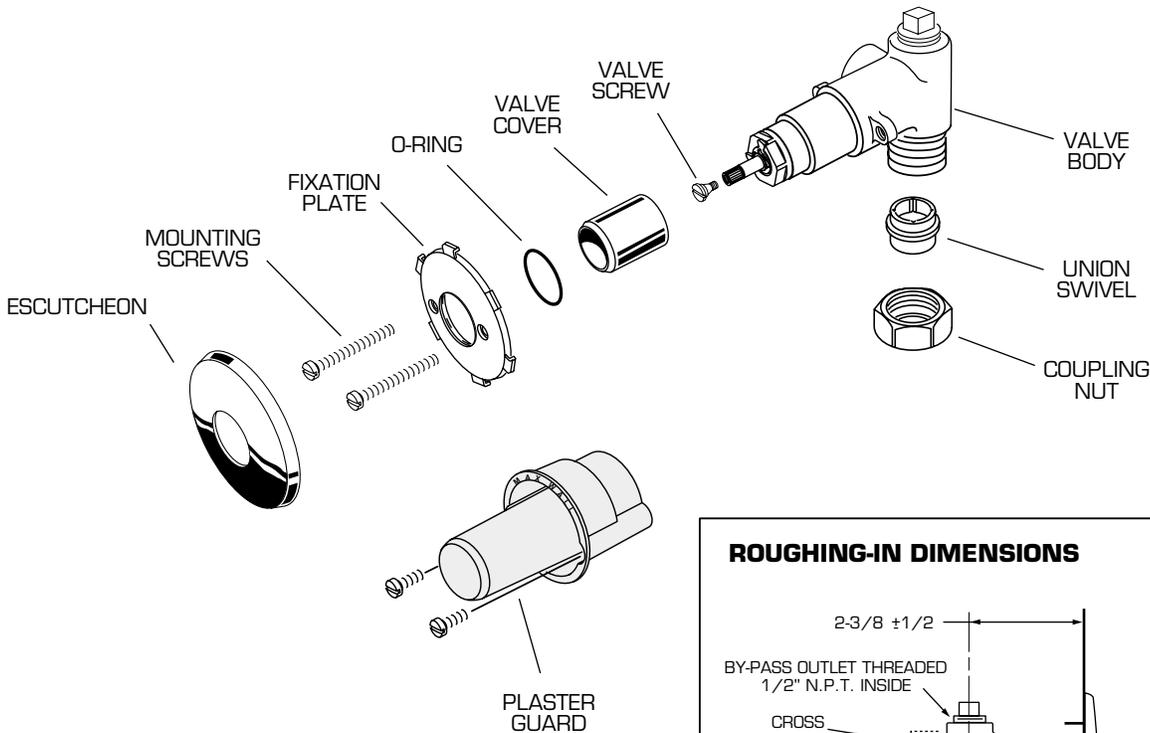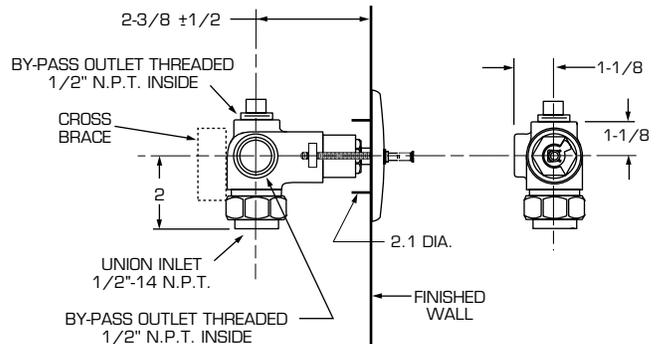
1

CAUTION **Turn off hot and cold water supplies before beginning.**

ROUGHING-IN FITTING

- Prepare water supplies per "Roughing-in Dimensions."

- Slip COUPLING NUT over supply pipe and screw UNION SWIVEL to pipe.

- For Sweat Connection: Slip COUPLING NUT over 5/8" O.D.supply tube and solder tube into UNION SWIVEL or female inlet of stop.

- Install VALVE at indicated height and depth. Note MAX WALL marking on PLASTER GUARD for the finished wall.

- Connect HOT water supply to left VALVE inlet and COLD water supply to right VALVE inlet. Tighten both COUPLING NUTS firmly.

- Add cross braces to wall structure and secure piping.

- Secure VALVE BODY to cross brass of wall structure.

- Cap roughing-in nipples, open supply lines and check for leaks.

- Remove PLASTER GUARD. (Do not discard.) Open valves, and check for leaks.

- Close both valves, turn off water supplies, and replace PLASTER GUARDS.

- Finish wall construction. NOTE: Apply wall finish as close as possible to the PLASTER GUARD.
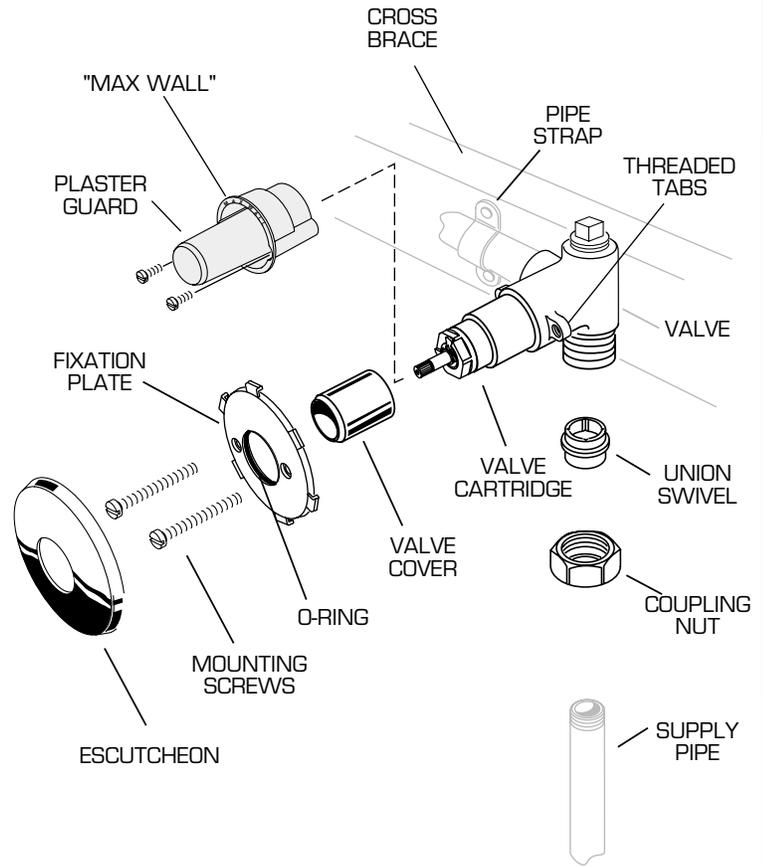
2

FINISHING INSTALLATION

- Remove roughing-in nipples.

- Remove SCREWS holding PLASTER GUARDS and remove PLASTER GUARD.

- Slip VALVE COVER over VALVE CARTRIDGE. Push VALVE COVER to complete stop.

- Place O-RING in FIXATION PLATE as shown.

- Place FIXATION PLATE over VALVE ASSEMBLY. Line up holes in FIXATION PLATE with THREADED TABS on VALVE.

- Pass MOUNTING SCREWS (2) through FIXATION PLATE and engage THREADED TABS. Tighten SCREWS securely.

- Place ESCUTCHEON over FIXATION PLATE and push evenly for a snap fit.

- Assemble handle per separate "Handle Installation Instructions."

Diagram labels: CROSS BRACE, "MAX WALL", PIPE STRAP, PLASTER GUARD, THREADED TABS, FIXATION PLATE, VALVE, VALVE CARTRIDGE, UNION SWIVEL, VALVE COVER, O-RING, COUPLING NUT, MOUNTING SCREWS, ESCUTCHEON, SUPPLY PIPE

3

TEST INSTALLED FAUCET

- Turn HANDLES into OFF position.

- Turn on water supplies, open stops and check all connections for leaks.

- Operate HANDLE to flush water lines thoroughly.

- Turn handles OFF.

4

SERVICE

Diagram labels: SPRING CLIP, STOP WASHER

- To change direction of handle rotation, proceed as follows:
  - Turn valve to OFF position.
  - Remove INSERT and HANDLE SCREW.
  - Slip HANDLE with ADAPTER off.
  - Remove SPRING CLIP.
  - Lift STOP WASHER, turn 90° and replace.
  - Replace SPRING CLIP.
  - Replace ADAPTER, HANDLE, SCREW, and INSERT.

- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.
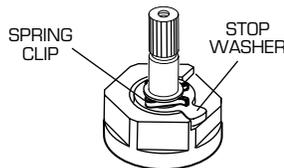
- To access CARTRIDGE:
  - Remove HANDLE and adapter.
  - Use thin blade screwdriver to remove ESCUTCHEON from FIXATION PLATE.
  - Unscrew MOUNTING SCREWS and pull FIXATION PLATE from wall.
  - Pull off VALVE COVER.

- Plastic SCREEN in CARTRIDGE may accumulate dirt causing reduced water flow. To clean, first turn off hot and cold water supplies, then:
  - Remove INSERT and HANDLE SCREW.
  - Slip HANDLE with ADAPTER off.
  - Unscrew CARTRIDGE with wrench.
  - Thoroughly rinse plastic SCREEN at base of CARTRIDGE.
  - Replace CARTRIDGE until flange is tight against valve body.
  - Turn valves OFF.
  - Replace ADAPTER, HANDLE, SCREW, and INSERT.
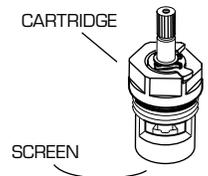
Diagram labels: CARTRIDGE, SCREEN

34803N

American Standard

HERITAGE
AMARILIS

Installation Instructions

7011.000 SERIES
7011.490 SERIES

HERITAGE SERIES ON/OFF & VOLUME CONTROL VALVE - 3/4" INLET/OUTLET

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly–please read these instructions carefully before you begin.

60442A

VALVE BODY

VALVE COVER

O-RING

FIXATION PLATE

MOUNTING SCREWS

ESCUTCHEON

HANDLE ADAPTER

HANDLE

DECORATOR RING

VALVE SCREW

CAP

PLASTER GUARD

ROUGHING-IN DIMENSIONS

1-5/8 - 2-1/4

OUTLET THREADED 3/4" N.P.T.M.

CROSS BRACE

2-1/2

2-5/8 DIA.

1-1/8 DIA.

INLET THREADED 3/4" N.P.T.F.

FINISHED WALL