CRYST✦RAMA

LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL #BEL-A8061-GE

Front view
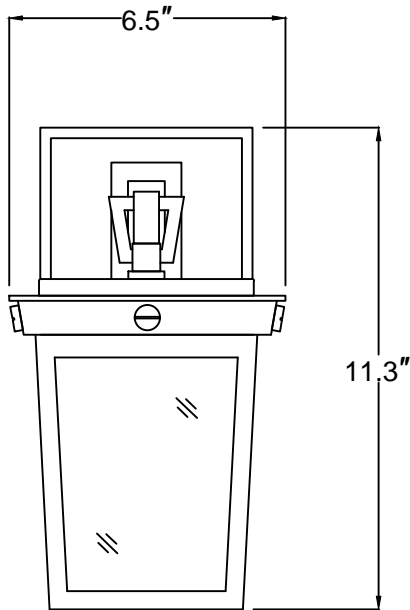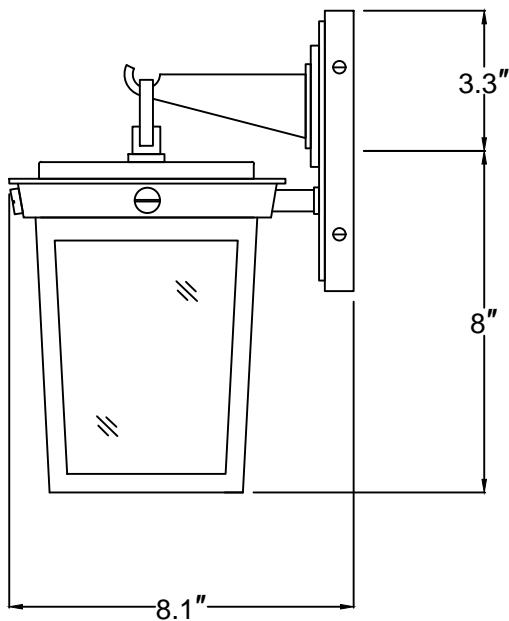
6.5″

11.3″

You will need 1-Medium
60 watts Max Bulb not included
USE LED BULBS FOR EXTENDED USE

How to Install
1. Attach the fixture to the outlet box.
2. Install the bulb onto the socket.

How to change glass
1. Take the bottom cage down by removing the screws on the top of it.
2. Remove the L-shaped metal strap by unscrewing the screws.
3. If necessary, smooth out the silicone glue along the glass channel, prior to placing in the new glass panel.
4. Put the new glass panel on and secure it with the L-shaped metal strap and screws.

Sketch Map
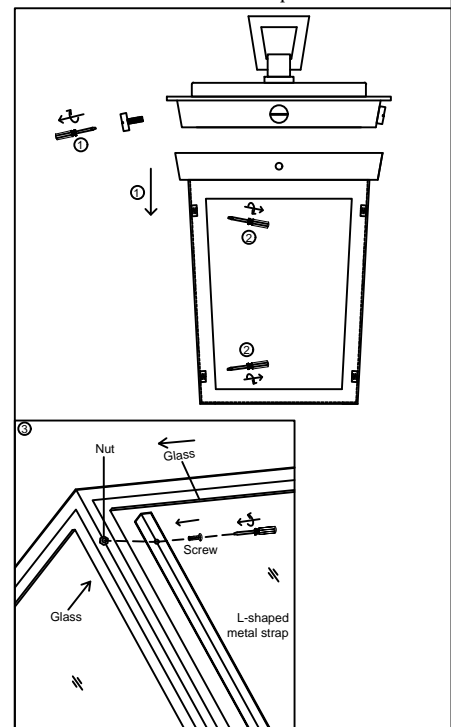
①
②
①
②
②

③
Nut
Glass
Screw
Glass
L-shaped metal strap

Side view

3.3″

8″

8.1″

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS

PART NUMBER MODEL #BEL-A8061-GE

Part Number

Part Numbers

A. Mounting Hardware
  (3) Wire Nut
  (1) Mounting Plate
  (4) Anchor Screw
  (2) Mounting Screw
  (1) Green GroundScrew
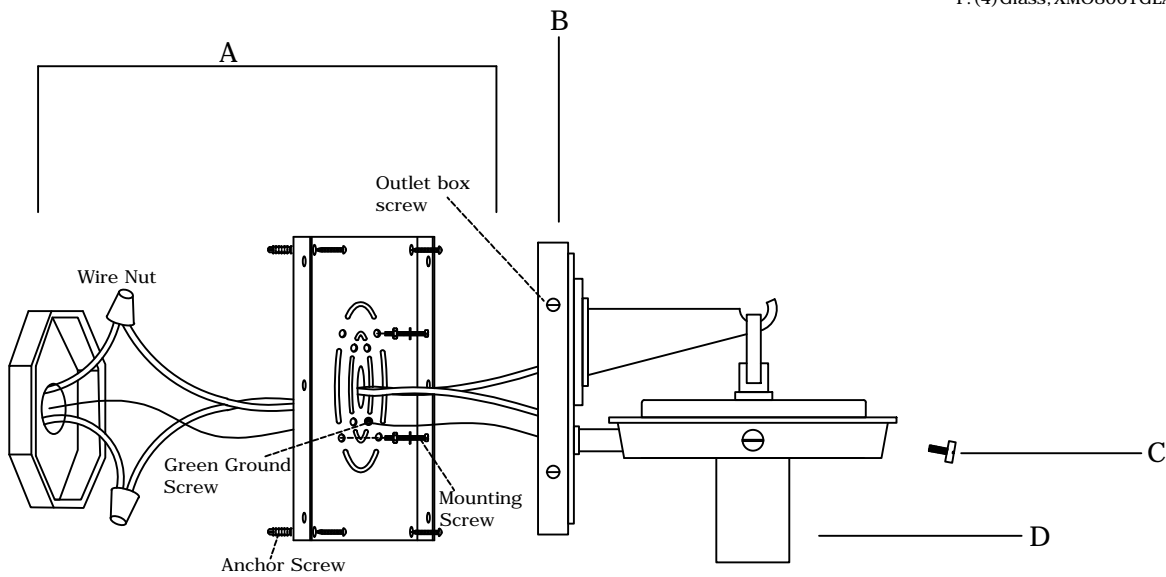 (4) Outlet box screw
B. (1) Backplate; 5"x6.6"x0.8"h;
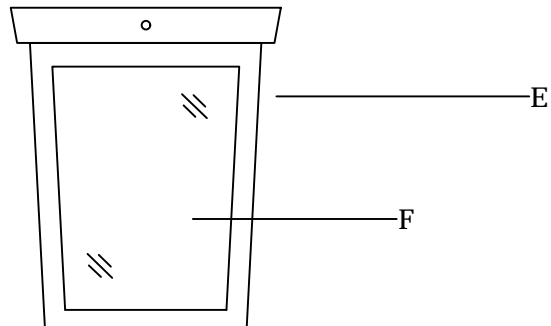 XMO8061GEBKP6.6IN
C. (3) Cap nut
D. (1) Socket
E. (1) Glass frame; XMO8061GEGLAFRAME
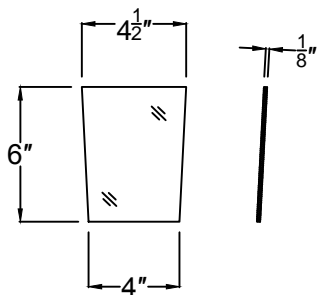F. (4) Glass; XMO8061GLA6.1IN

A

B

Outlet box
screw

Wire Nut

Green Ground
Screw

Mounting
Screw

Anchor Screw

C

D

E

F

For installation of mounting plate:
1. Put the mounting plate over the outlet box and mark the 4 points on the wall surface at the center of 4 holes on the mounting plate.
2. Drill 4 holes at the marked points and insert the wall anchors.
3. Place the mounting plate over the outlet box and secure it with outlet screws. Insert the wall anchor screws inside the wall anchors and tighten it.

F-Size

$4\frac{1}{2}$"

$\frac{1}{8}$"

6"

4"

x4	x2	x3
Anchor Screw	Mounting Screw	Wire Nut