

INSTALL TRIM

- When finished tiling the wall, remove PLASTER GUARD (3). Push on CAP (1).
- Mount ESCUTCHEON (2) and with SCREWS (7).
- Install HANDLE (8) by pushing it onto CARTRIDGE STEM (9) and tightening SET SCREW (10) from below with 2.5mm Hex Wrench supplied. Insert INDEX BUTTON (11).
- Remove cap from tub supply and plug from shower pipe.
- Install SHOWER ARM (4) and FLANGE (13). Install SHOWER HEAD (5). See Step 2.
- Tighten SET SCREW (12) onto FLANGE (13) using 5/64" hex wrench.

INSTALL SHOWER HEAD ASSEMBLY


REMOVE SHOWER HEAD FROM HOUSING

Hold SHOWERHEAD (1) with one hand and HOUSING (2)

Rotate SHOWERHEAD (1) clockwise while holding HOUSING (2) stationary. *NOTE: The thread connection is a left hand thread.* Keep turning SHOWERHEAD (1) until it can be removed from the HOUSING (2).

Install DIVERTER SPOUT (6).


with the other as illustrated.

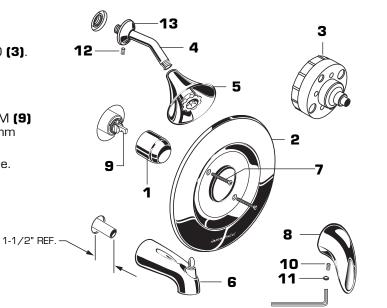




2b **INSTALL HOUSING INSTALL SHOWER HEAD** Rap SHOWER ARM (3) threads with Teflon tape. Slide HOUSING (2) onto SHOWER ARM (3). Tighten SHOWERHEAD (1) 3 with an adjustable wrench. Do not over tighten. 3 **TEFLON TAPE** 2 **INSTALL HOUSING TO SHOWER HEAD**


Install HOUSING (2) onto SHOWER HEAD (1). Thread HOUSING (2) counter-clockwise to install onto SHOWER HEAD (1). Hand tighten only.

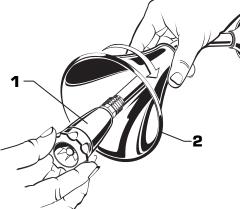

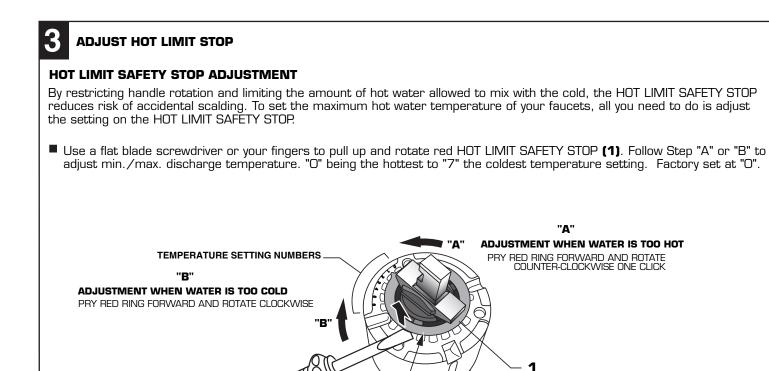



- If faucet drips, operate handle several times from "off" to "on". Do not apply excessive force.
- Clogged CARTRIDGE (4) inlets may cause reduced flow in "full on" hot or cold. To clean inlets, first turn off water supply, then:
- Remove HANDLE (1), CAP (2) and CARTRIDGE (4). Clean inlets and MANIFOLD (5).
- Reassemble CARTRIDGE (4), alternately tightening SCREWS (3).
- Replace CAP (2) and HANDLE (1). Check flow.

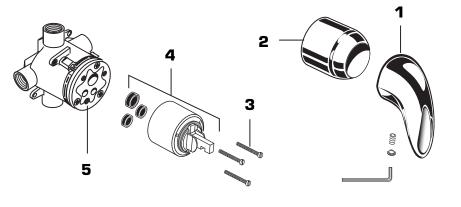

"RED RING"- HOT LIMIT SAFETY STOP

CARE:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

