



DOOR DETAIL

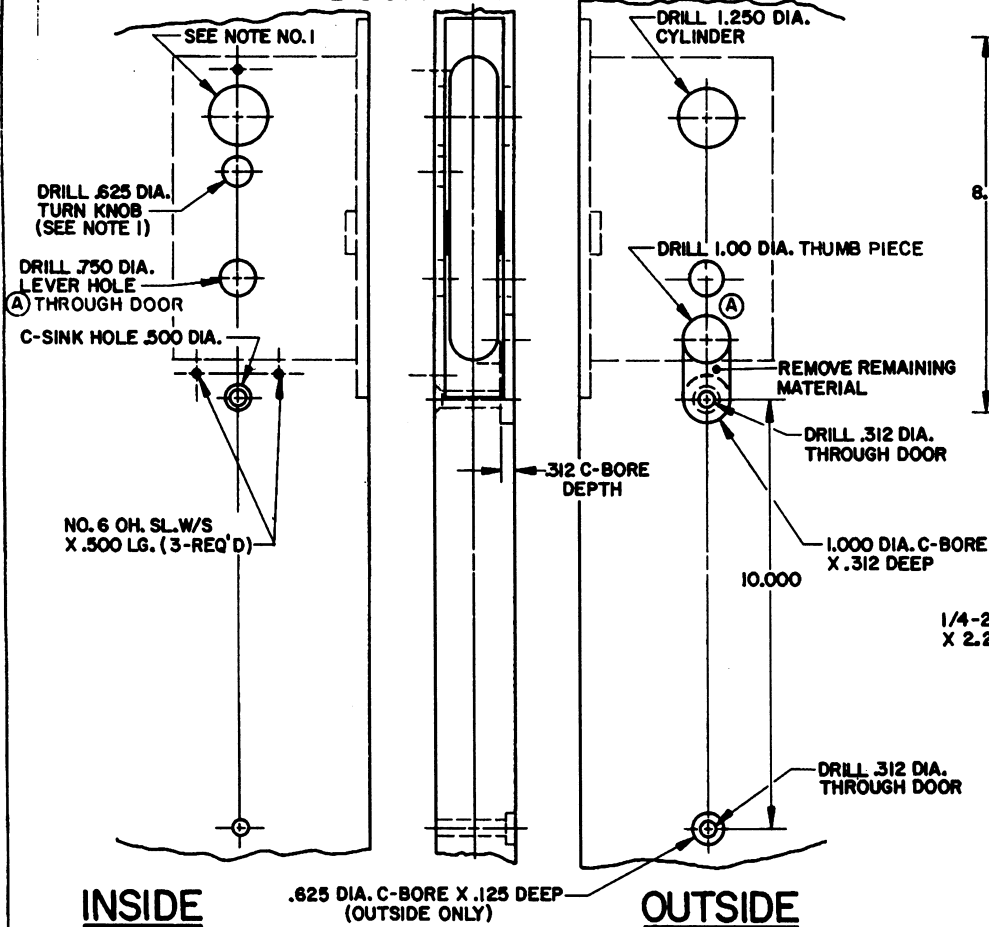

TRIM DETAIL (ENTR FUNCTION ILLUSTRATED)

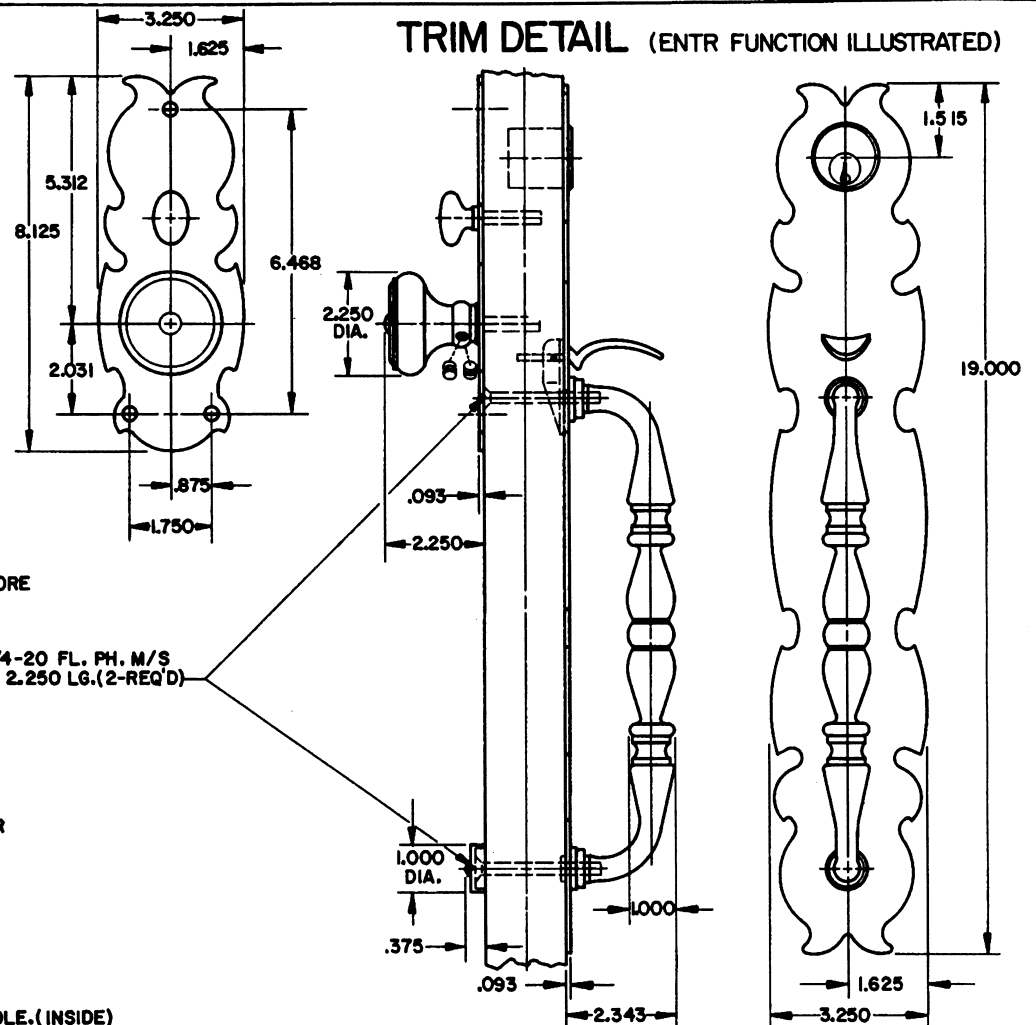

NOTE:

- 1.) WHEN PREPARING DOOR FOR DBL FUNCTION, OMIT DRILLING OF .625 DIA. TURN KNOB HOLE. (INSIDE) DRILL A 1.250 DIA. CYLINDER HOLE INSTEAD, USING SAME CENTER LINE AS OUTSIDE CYLINDER HOLE.
- 2.) DRILL ALL HOLES HALFWAY THROUGH DOOR UNLESS OTHERWISE SPECIFIED.
- 3.) FOR ADDITIONAL LOCK AND DOOR CUTOUT DIMENSIONS, SEE APPROPRIATE LOCK TEMPLATE.
- 4.) INSTALLATION PLATES ARE NOT REQUIRED FOR THIS TRIM.



BALDWIN

6568 RENSSALEAR TRIM

TEMPLATE NO. VARIATIONS

TEMPLATE NO.

I568-A

DO NOT SCALE DRAWING

©1990 by Baldwin Hardware Corporation