



48776 / 01 Door Bumper

9BR7006-XXX

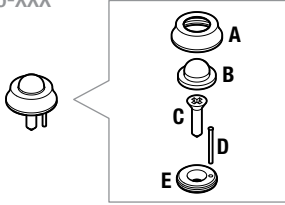


Tools Needed

Herramientas necesarias
Outils nécessaires

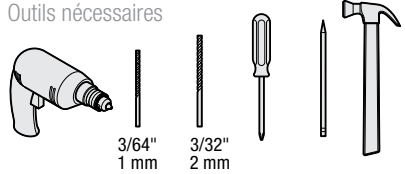


1

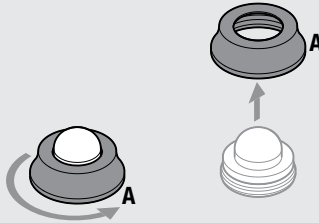

2

Position on wall and mark holes.
Posicione sobre la pared y marque los orificios.
Positionnez sur le mur et marquez les trous.

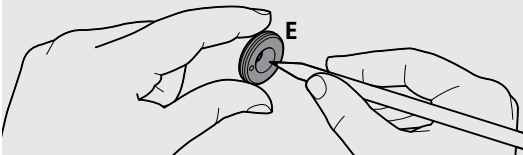


$\frac{3/32''}{2 \text{ mm}}$

1-1/16"
27 mm
deep
profundidad
profondeur

3

Hard wood applications only:


Sólo para aplicaciones en madera noble:
Pour application sur parquet seulement:

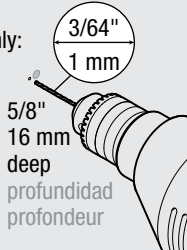

Use anchor (not supplied) for dry wall applications.

Utilice anclajes (no suministrados) para aplicaciones en muros de yeso.

Utilisez des ancrages (non fournis) pour application sur cloison murale.



4

