

SPECIFICATION:


FOR ANGLED RUNS, MOUNTING AND TIGHTENING OF HIGH-LINE CABLES.

INSTALLATION PROCEDURES

1. Mark the location for the holes to mount tighteners (distance between cables 4").
2. Drill a 3/16" hole and insert anchor diagram "A".
3. Screw the threaded sleeve firmly onto the wall and thread wallbearing onto sleeve.
4. Place tightener into ball and position horizontally, diagram "B".

MOUNTING OF THE CABLE

5. Leave the cable 12" longer than needed when you cut them.
6. Provide 3" of cable through the threaded sleeve and knot them, diagram "C".
7. Screw the middle part turnbuckle onto the threaded sleeve by turning 3-rotations.

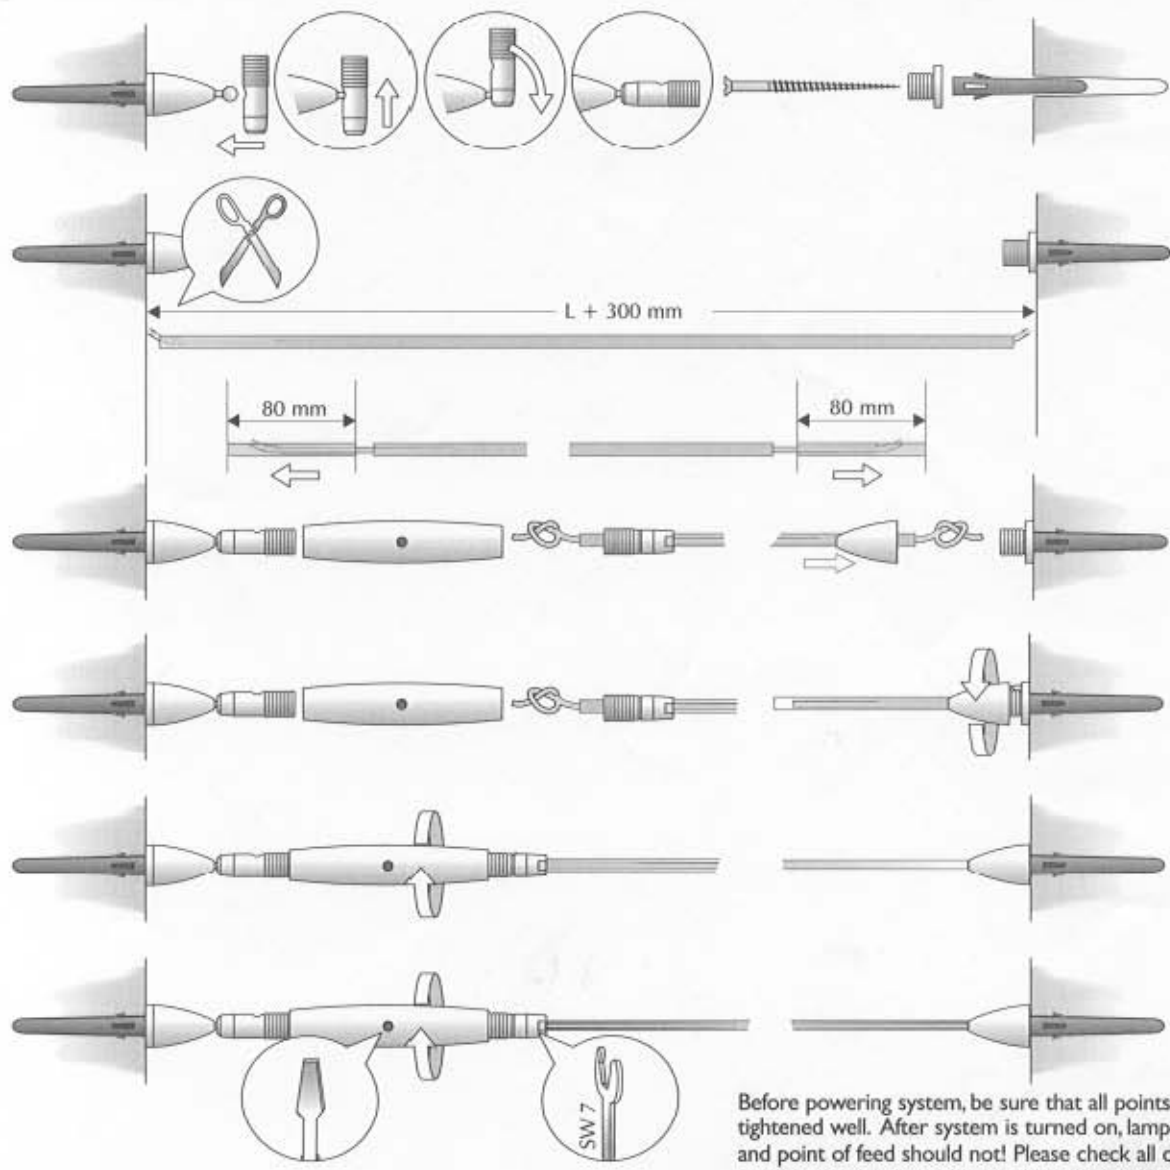

**CAUTION:
IMPORTANT -
PLEASE READ!**

Before powering system, be sure that all points of feed and fixture connections are tightened well. After system is turned on, lamps will become hot but connections and point of feed should not! Please check all connections for heat after system is on for one hour to ensure the safe operation of the system.