

HIGH-LINE MOUNTING-SET II

150517

3505-L5 CADILLAC AVE. • COSTA MESA, CA 92626
TEL: (714) 424-0500 • FAX: (714) 424-0505
<http://www.brucklighting.com>

SPECIFICATION:







FOR MOUNTING AND TIGHTENING OF HIGH-LINE CABLES.

INSTALLATION PROCEDURES

1. Mark the location for the holes to mount tighteners (distance between cables 4").
2. Drill the 3/16" holes and insert anchors diagram "A".
3. Screw the threaded sleeve and washers firmly onto the wall.
4. **NOTE:** When using a rerouter screw the threaded sleeve to the rerouter diagram "D".

MOUNTING OF THE CABLE

5. Leave the cable 12" longer than needed when you cut them.
6. Provide 3" of cable through the threaded sleeve and knot them, diagram "B".
7. Screw the middle part "C" onto the threaded sleeves "A" by turning 3-rotations.
8. Proceed in the same way on the opposite side.

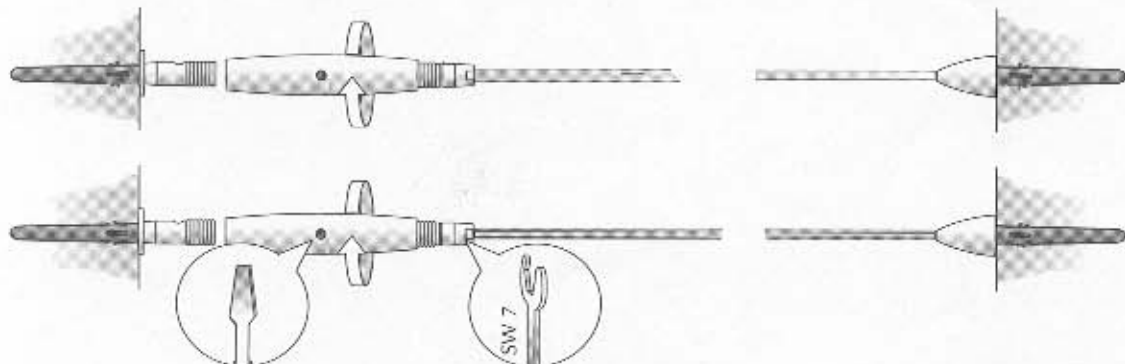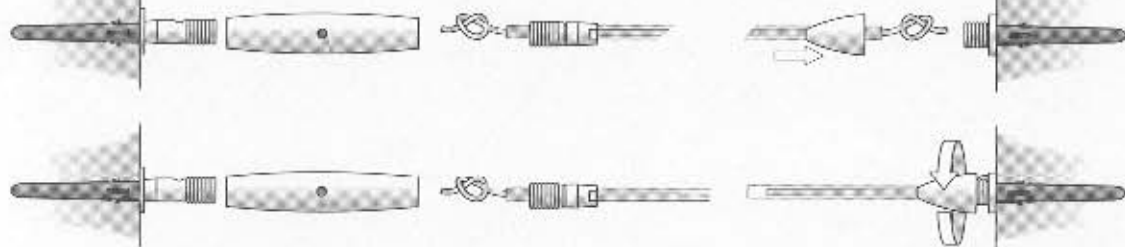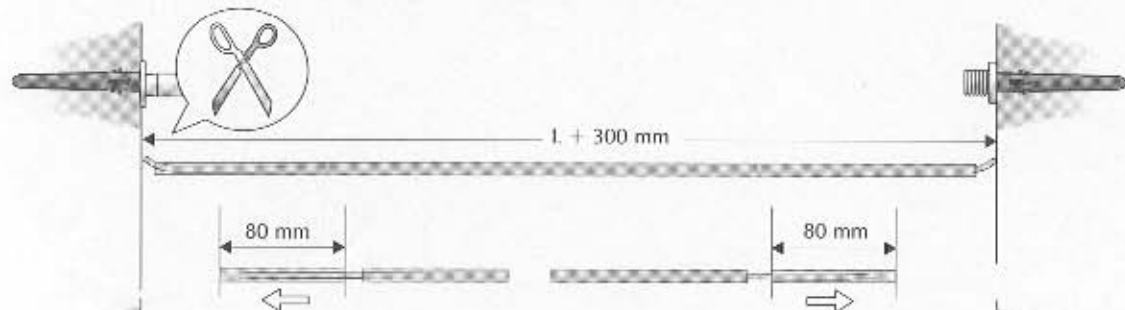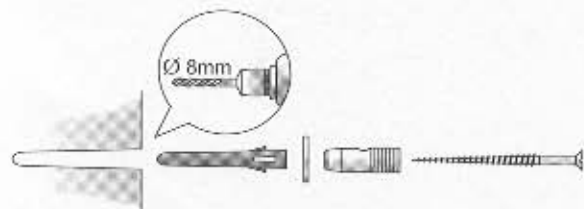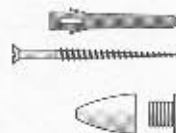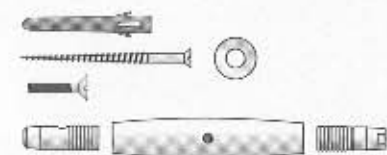

CAUTION: IMPORTANT - PLEASE READ!

Before powering system, be sure that all points of feed and fixture connections are tightened well. After system is turned on, lamps will become hot but connections and point of feed should not! Please check all connections for heat after system is on for one hour to ensure the safe operation of the system.