


INSTALLATION AND WIRING DIAGRAM

HIGH-LINE

WALL AND CEILING SUPPORT 52

ART. NO.	150 820ch	chrome, 2"	150 840ch	chrome, 7"
	150 820mc	matte chrome, 2"	150 840mc	matte chrome, 7"
	150 830ch	chrome, 4"	150 850ch	chrome, 11"
	150 830mc	matte chrome, 4"	150 850mc	matte chrome, 11"

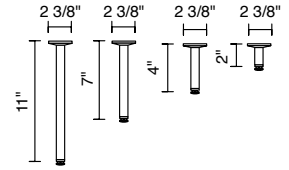

IMPORTANT SAFETY INSTRUCTIONS



1. Read all instructions!
2. Turn off power prior to any work on the systems.
3. THIS PRODUCT MUST BE INSTALLED BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED, IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE.
4. Only BRUCK fixtures and components may be used with the system.
5. Warranty is void in case of unauthorized modifications and/ or improper use.

READ ALL OF THESE INSTALLATION INSTRUCTIONS BEFORE INSTALLING THE FIXTURE

Contents of Delivery:

HIGH-LINE WALL AND CEILING SUPPORT 52 - qty. (1)

REROUTING HEAD - qty. (1)

Note:

When installing the ceiling support 52 in ceiling tile applications, a wood block (A) must be used. Additional reinforcement of the mounting base can be provided by using a mounting plate (B). Please contact Bruck for details about this optional part.

Step 1.

- Begin by first unscrewing the support rod (C) from the mounting base (D).
- Place a wood block (A) behind the ceiling tile (E). Feed the mounting screw (F) through the mounting base (D) and the mounting plate (B) if applicable.
- Screw the base (D) into the ceiling tile (E) and wood block (A) firmly.
- Re-attach the support rod (C) to the mounting base (D).
- Two rerouting heads (G) are provided and can be removed by unscrewing from the support rod (C).

