For more assistance with technical questions please call our technical support staff at (714) 259-9959. You can also contact us by email at info@brucklightingsystems.com.


# BRUCK

### INSTALLATION AND WIRING DIAGRAM

### **HIGH-LINE**

#### HIGH-LINE LOFT SPOT

ART. NO.	150 293ch 150 293mc	chrome, white glass matte chrome, white glass
	150 294ch 150 294mc	chrome, orange glass matte chrome, orange glass



### **IMPORTANT SAFETY INSTRUCTIONS**

- 1. Read all instructions!
- 2. Turn off power prior to any work on the systems.
- 3. Warranty is void in case of unauthorized modifications and/ or improper use.

## READ ALL OF THESE INSTALLATION INSTRUCTIONS BEFORE INSTALLING THE FIXTURE

### Contents of Delivery: HIGH-LINE LOFT SPOT - qty. (1)

#### Note

It is recommended to use the fixture as a down light only.

#### Step 1

- To connect High-Line Loft Spot to cable, unscrew the two screws (A) at the ends of the fixture.


- When placed onto cable system, make sure screws have a clean connection to the cable.


- Place lamp into fixture.

### Step 2

- To adjust High-Line Loft Spot direction, unscrew the screw (B) on the side of the fixture.

- Retighten screw (B) once desired direction is achieved.

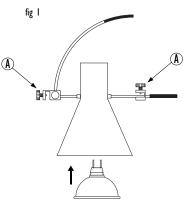

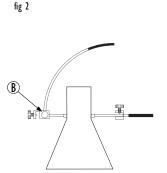




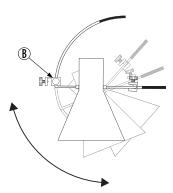


fig 4



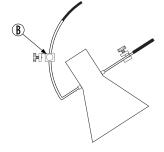

Â