

# CYLINDER DEAD LOCK


## INSTRUCTION FOR INSTALLATION



T220/330

### 1. MARK DOOR

Mark height line on door edge.

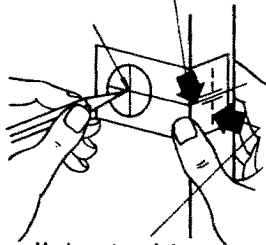


Mark center of door thickness on height line for latch hole.

### 2. BORE TWO HOLES

Bore 1 1/2" hole from both sides of door.

Bore 15/16" or 1" hole into door edge.  
Mortise for latch front.

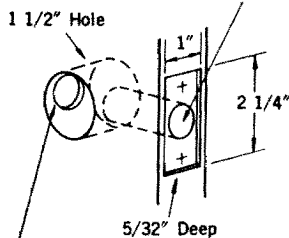


Latch hole must extend 3/8" beyond 1 1/2" hole.

### 4. INSTALL LATCH


#### DEADBOLT

Install Latch with word "UP" on body pointing up (UP). Fasten frontplate with two screws. Make sure that the bolt is fully extended out from the door.

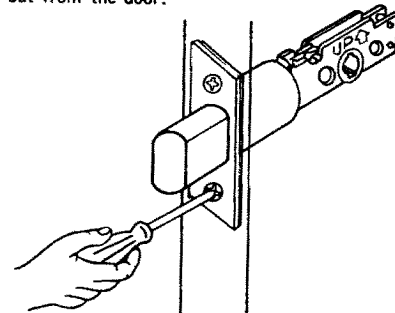


### 3. INSTALL STRIKE

Mark jamb exactly opposite center of latch hole. Bore two 15/16" holes 5/16" above and below height line to a depth of 1 1/8" depending on bolt projection.

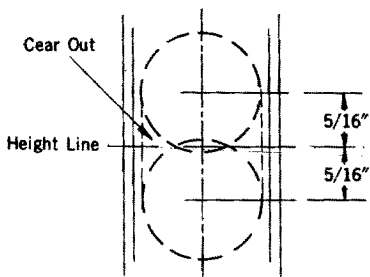

#### MORTISING FOR DEADBOLT STRIKE

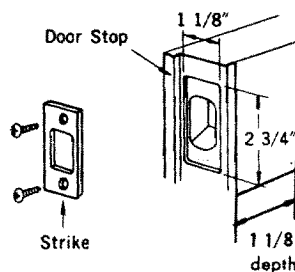

1 FOLD HERE ON DOOR EDGE

2 MARK FOR 1 3/4" DOOR OR MARK FOR 1 1/8" DOOR

3 THEN DRILL 15/16" HOLE IN CENTER OF DOOR EDGE.

#### TEMPLATE FOR INSTALLING DEADBOLTS

2 5/16" BACKSET

2 3/4" BACKSET

1 MARK CENTER OF HOLE ON DOOR FACE

5 DRILL 1 1/2" HOLE

